

1010 Series Drawn Field Cultivators

 


OPERATORS MANUAL 1010 Series Drawn Field Cultivators

OMN159584 I2 English

John Deere Des Moines Works
OMN159584 I2

LITHO IN U.S.A.
ENGLISH



INTRODUCTION




This safety alert symbol indicates important safety messages in this manual. When you see this symbol be alert to the possibility of personal injury and carefully read the message that follows:

This publication contains both the U.S. customary units of measurement and the SI Metric equivalents.

“Right-hand” and “left-hand” sides of the cultivator are determined by facing in the direction the cultivator will travel when in use.


The warranty appears on your copy of the purchase order which you should have received from your dealer.

Record your model and serial number in the space provided on page 63.

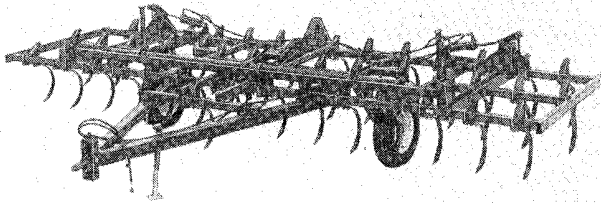


N79019A8Y

21-1/2-foot (6.6 m) Rigid Horizontal Fold

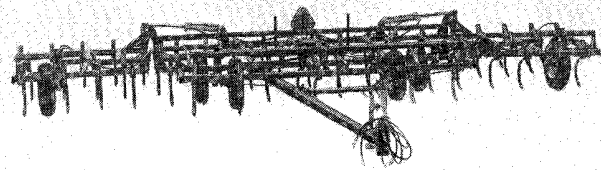

N79031C1Y

28-1/2-foot (8.7 m) Flexible Horizontal Fold

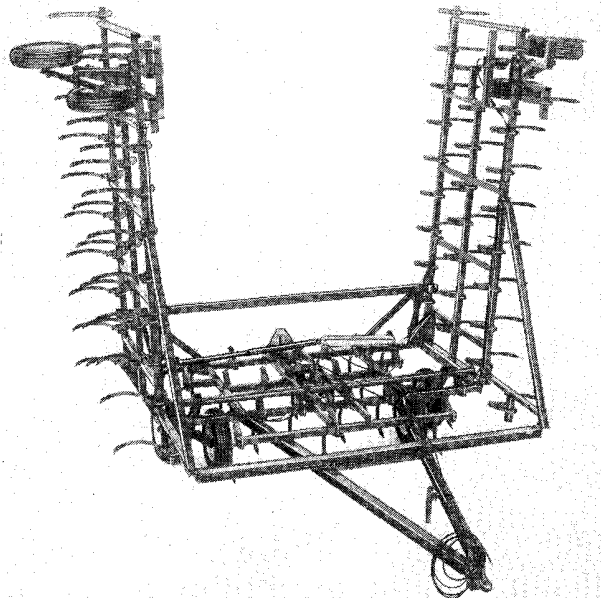

N79040A1

40-1/2-foot (12.3 m) Flexible Vertical Fold



Contents

	Page
Safety.....	2-4
Preparing Tractor.....	5-6
Preparing Cultivator.....	7
Attaching and Detaching.....	8-10
Transporting.....	11
Operating Cultivator.....	12-17
Guidelines for Use.....	12
Depth Control.....	13-14
Outrigger Lift.....	14-16
Leveling Outriggers.....	16-17
Standards.....	17
Wheels.....	17
Lubrication and Maintenance.....	18-19
Trouble Shooting.....	20-22
Service.....	22-59
Tightening Hardware.....	22
Tires.....	23
Cylinders.....	24
12-1/2 through 24-1/2-Foot Diagrams.....	25-38
(3.8 through 7.5 m)	
25-1/2 through 30-1/2-Foot Diagrams.....	39-45
(7.8 through 9.9 m)	
31-1/2 through 42-1/2-Foot Diagrams.....	46-58
(9.6 through 12.9 m)	
Safety Decals.....	59
Storage.....	60
Specifications.....	61-63
Serial Number.....	63



Safety



Operate Safely

DO NOT operate field cultivator without reading this operator's manual.

DO NOT allow anyone to ride on the field cultivator when it is in motion. Observe operation only from tractor platform.

Always shut off tractor engine and shift to "park" when leaving tractor. Remove key when leaving tractor unattended.

Have the field cultivator stationary and on level ground when raising or lowering outriggers.

DO NOT raise or lower the outriggers when moving.

DO NOT operate close to ditch or creek.

Slow down when turning and drive slowly over rough ground.

Apply both tractor brakes evenly when making emergency stops. Plan ahead.


Wear relatively tight and belted clothing to prevent being caught on some part of the machine.

DO NOT operate with outriggers folded.

Protect Against Noise

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs (A) or earplugs (B) to protect against objectionable or uncomfortable loud noises.

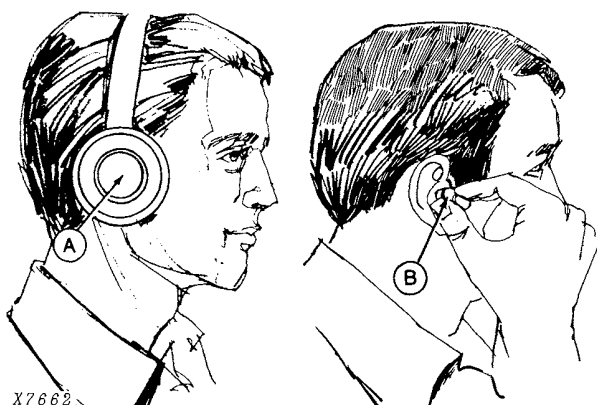

A - Earmuffs
B - Earplugs

Avoid Fires

DO NOT refuel with the tractor engine running.

DO NOT smoke or use a lantern when refueling.

Transport Safely

Always install lockup pins on vertical fold outrigger lift models.

Outriggers must rest on their stops during transport for horizontal fold models.

Always move depth control cylinder stop forward to lock cylinder.

DO NOT fail to latch the tractor brakes together.

Observe overhead wire and **KNOW** the transport height of your cultivator.

Shift the tractor into a lower gear when transporting down steep slopes or hills.

Keep SMV emblem and reflectors clean and visible from the rear.

Stop slowly.

When transporting the field cultivator on a road or highway at night or during the day, use accessory lights and devices for adequate warning to operators of other vehicles. In this regard, check local governmental regulations. Various safety lights and devices are available from your John Deere dealer.


Practice Safe Maintenance

Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.


DO NOT lubricate, adjust, or clean the field cultivator while it is in motion.

Always use a safety support when working on, under, or around the field cultivator.


Shut off tractor engine and remove key when working on field cultivator.

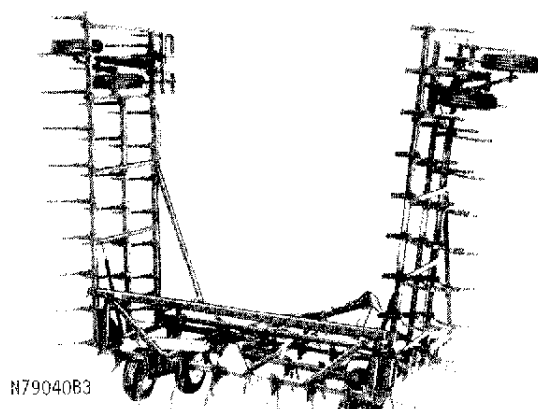

Vertical Fold

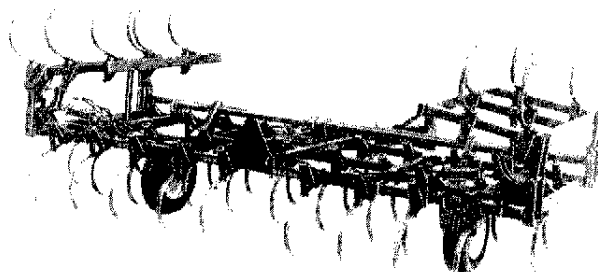

Horizontal Fold

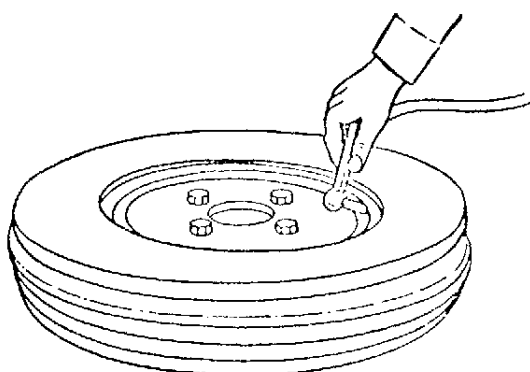


RW362

Mounting Tires

Failure to follow proper procedures when mounting a tire on a wheel or rim can produce an explosion which may result in serious injury or death. Do not attempt to mount a tire unless you have the proper equipment and experience to perform the job. Have it done by your John Deere dealer or a qualified tire repair service.

When seating tire beads on rims, never exceed 35 psi (241 kPa) or maximum inflation pressures specified by tire manufacturers for mounting tires. Inflation beyond this maximum pressure may break the bead, or even the rim, with dangerous explosive force. If both beads are not seated when the maximum recommended pressure is reached, deflate, reposition tire, relubricate bead, and reinflate.

Detailed agricultural tire mounting instructions, including necessary safety precautions, are contained in John Deere Fundamentals of Service (FOS) Manual 55, Tires and Tracks, available through your John Deere dealer. Such information is also available from the Rubber Manufacturers Association and from tire manufacturers.

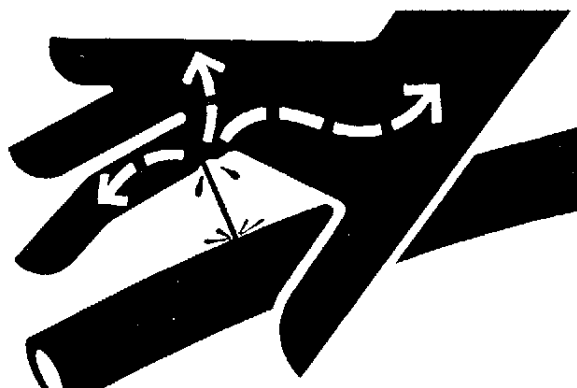

X9811

AVOID HIGH-PRESSURE FLUIDS

Escaping fluid under pressure can penetrate the skin causing serious injury. Relieve pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure. Keep hands and body away from pinholes and nozzles which eject fluids under high pressure. Use a piece of cardboard or paper to search for leaks. Do not use your hand.

If ANY fluid is injected into the skin, it must be surgically removed within a few hours by a doctor familiar with this type injury or gangrene may result.



Preparing the Tractor

Refer to tractor operator's manual regarding recommended adjustments, tire inflation pressures, use of hydraulic systems, PTO and other information pertaining to tractor with implement uses.

Your field cultivator is equipped with International Standard Organization (ISO) hydraulic hose fittings. If your tractor does not have ISO hydraulic couplers, see your John Deere dealer for connectors.


1. Pin the drawbar in fixed, centered low position (bold arrow).



CAUTION: Make sure PTO guard and master shield are both installed on tractor.

2. Install sufficient ballast and/or tire pressure. See your tractor operator's manual.
3. Check tractor hydraulic oil reservoir and add oil if necessary.


NOTE: *Tractor hydraulic oil flow must be at least 12 gpm (45 lpm) for proper operation of the cultivator.*

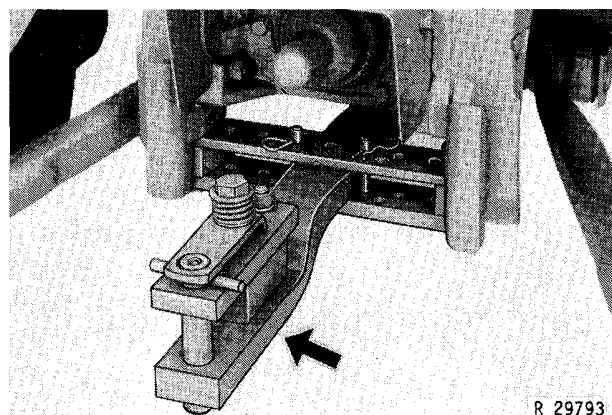

R 29793


Continued on next page

6 *Preparing the Tractor*

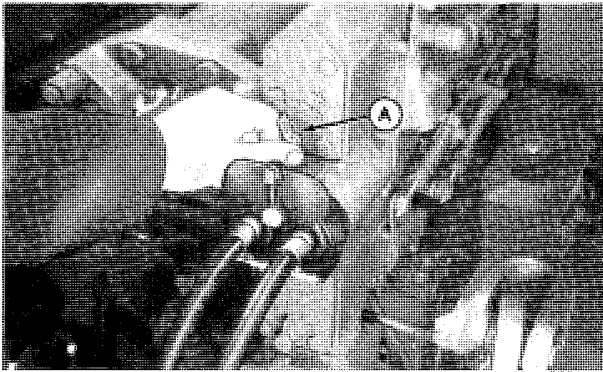

RW4429

4. Turn metering valves (A) to fast or rabbit position.

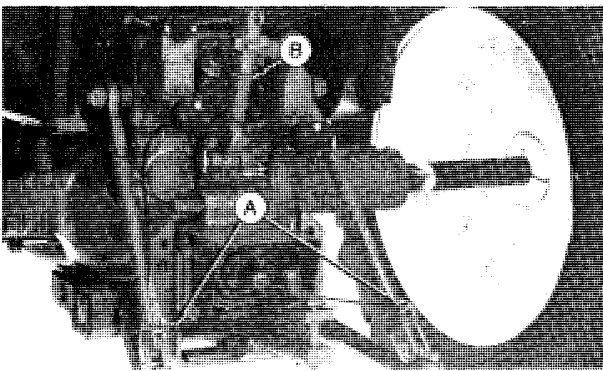

N82158B1


5. Secure lift links (A) and center link (B) so they do not swing into tractor tires or onto the hoses. The center link can be held vertical with its retaining clip.



Preparing the Cultivator


1. Obtain and install 3 or 3-1/2 x 8-inch (76 or 89 x 203 mm) hydraulic cylinder with an adjustable stop for the 12-1/2 through 17-1/2-foot (3.8 through 5.3 m) drawn rigid models and the 15-1/2 through 23-1/2-foot (1.7 through 7.2 m) drawn rigid horizontal fold models.

NOTE: Tractor hydraulic oil flow must be at least 12 gpm (45 lpm) for proper operation of the cultivator.

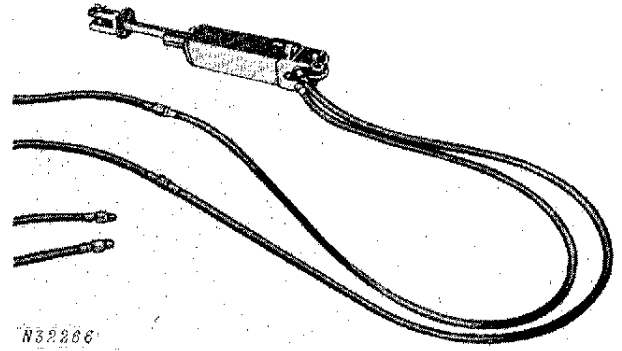

2. Check tire pressure:
 7.60 x 15 6-PR tires - 36 psi (241 kPa) (2.41 bar)
 5.90 x 15 Stabilizer tires - 29 psi (200 kPa) (200 bar)

3. Torque wheel bolts to 130 lb-ft (176 N·m).

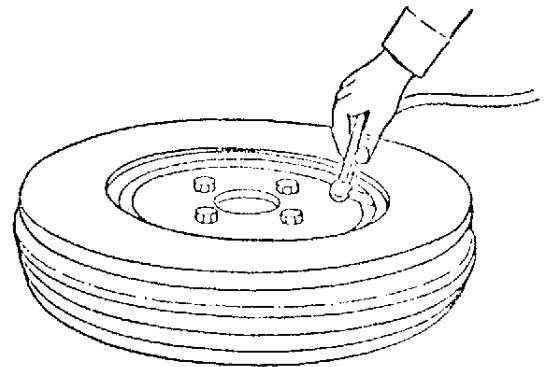

RW362

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com