

1050 SERIES DRAWN FIELD CULTIVATOR

 


OPERATORS MANUAL 1050 SERIES DRAWN FIELD CULTIVATOR

OMN159589 K2 English

**DES MOINES WORKS
OMN159589 K2**

LITHO IN THE U.S.A.
ENGLISH

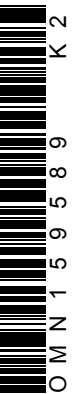



Introduction

 
! This safety alert symbol identifies important safety messages in this manual. When you see this symbol, be alert to the possibility of bodily injury and carefully read the message that follows.

This publication contains both the U.S. customary units of measurement and the SI Metric equivalents.

“Right-hand” and “left-hand” sides of the cultivator are determined by facing in the direction the cultivator will travel when in use.

The warranty appears on your copy of the purchase order which you should have received from your dealer.

Record your model and serial number in the space provided on page 54. You will assist your John Deere dealer in giving you prompt, efficient service when ordering parts or attachments.

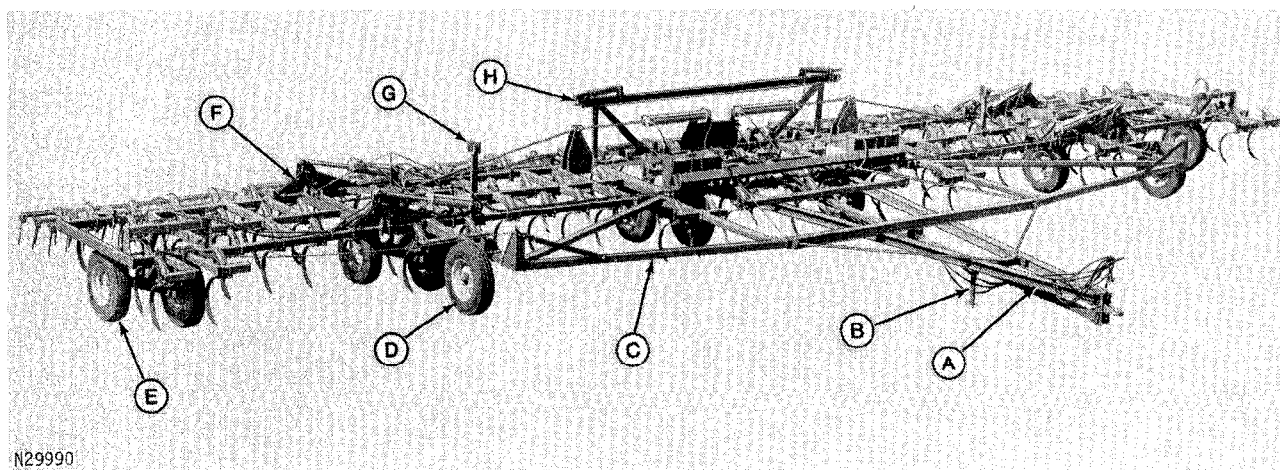

N29990

A—Hitch
B—Jack
C—“A” Frame

D—Stabilizer Wheel
E—Tandem Wheels
F—Outrigger Hinges

G—Outrigger Stop
H—Main Frame Out-rigger Support

John Deere 1050 Field Cultivator in Operating Position

1050 SERIES DRAWN FIELD CULTIVATOR

PREDELIVERY CHECK LIST

After the cultivator has been completely assembled, inspect it before delivering to the customer. The following check list is a reminder of points to inspect. Check off each item as it is found satisfactory or after proper adjustment is made.

- ☐ SMV emblem and reflectors installed.
- ☐ Tires are properly inflated and wheel bolts torqued, page 5.
- ☐ Make sure the correct number of shanks are installed.
- ☐ Make sure all the customer-ordered attachments have been installed.
- ☐ Any parts scratched in shipment have been touched up with paint.
- ☐ This cultivator has been thoroughly checked and to the best of my knowledge, is ready for delivery to the customer.

Signature

Date

DELIVERY CHECK LIST

At the time the cultivator is delivered, the following check list is a reminder of information which should be conveyed directly to the customer. Check off each item as it is fully explained to customer.

- ☐ Advise the customer of the importance of using the proper ground working tools.
- ☐ Explain to the customer that the life expectancy of this or any other machine depends on regular lubrication as directed in the operator's manual.
- ☐ Give the operator's manual to the customer and explain all operating adjustments.
- ☐ Advise the customer of all the safety precautions that must be exercised while using this cultivator.

- ☐ When the cultivator is transported on a road or highway at night or during the day, accessory lights and devices should be used for adequate warning to operators of other vehicles. In this regard, tell customer to check local governmental regulations.
- ☐ To the best of my knowledge, this machine has been delivered ready for field use and the customer has been fully informed as to proper care and operation.

Signature

Date

AFTER-SALE CHECK LIST

The following is a suggested list of items to be checked at a dealer-customer mutually agreeable time during the first operating season.

- ☐ Check with the customer as to the performance of the cultivator. Make certain the proper operating adjustments are understood.
- ☐ If possible, operate the cultivator to see that it is functioning properly.
- ☐ Acquaint the customer with any special attachment which will help do a better job.
- ☐ Go over entire cultivator for loose or missing bolts.
- ☐ Check for broken or damaged parts.
- ☐ Ask the customer if the recommended periodic lubrication has been performed.
- ☐ Review the operator's manual with the customer and stress the importance of proper lubrication and safety precautions.

OWNER REGISTER

Name _____

Post Office _____

County _____ State _____

Size and Serial Number _____

Date Sold _____



Contents

	Page
SAFETY SUGGESTIONS	2-4
PREPARING FOR USE	5-10
Preparing Tractor	5
Preparing Cultivator	5
Attaching Cultivator to Tractor	6-7
Leveling Cultivator	7-8
Depth Control	8
Hydraulic Outrigger Lift	9
Lift and Drop Time for Hydraulic Outrigger Lift System	10
Detaching Cultivator From Tractor	10
TRANSPORTING	11
FIELD OPERATING AND ADJUSTMENTS	12-16
ATTACHMENTS	17-18
LUBRICATION AND MAINTENANCE	19
TROUBLE SHOOTING	20-21
SERVICE	22-24
STORAGE	25
ASSEMBLY	26-52
SPECIFICATIONS	53-54
Serial Number	54



Safety Suggestions

Operate Safely



DO NOT operate field cultivator without reading this operator's manual.

DO NOT allow anyone to ride on the field cultivator when it is in motion. Observe operation only from tractor platform.

Always shut off tractor engine and shift to "park" when leaving tractor. Remove key when leaving tractor unattended.

Have the field cultivator stationary and on level ground when raising or lowering outriggers.

DO NOT raise or lower the outriggers when moving.

DO NOT operate close to ditch or creek.

 
Slow down when turning and drive slowly over rough ground.

Apply both tractor brakes evenly when making emergency stops. Plan ahead.

Wear relatively tight and belted clothing to prevent being caught on some part of the machine.

DO NOT operate with outriggers folded.

Protect Against Noise

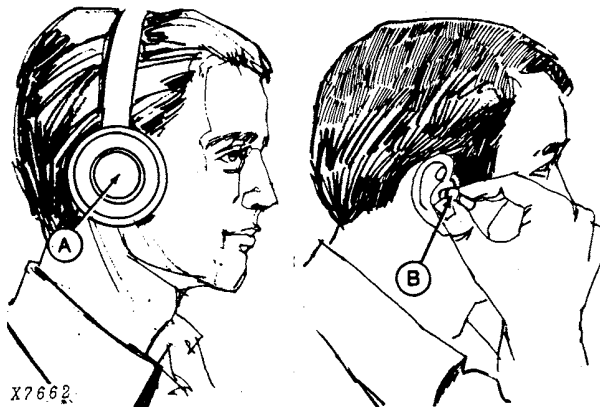

A—Earmuffs
B—Earplugs

Prolonged exposure to loud noise can cause impairment or loss of hearing.

 
Wear a suitable hearing protective device such as earmuffs (A) or earplugs (B) to protect against objectionable or uncomfortable loud noises.

Avoid Fires

DO NOT refuel with the tractor engine running.

DO NOT smoke or use a lantern when refueling.

Transport Safely

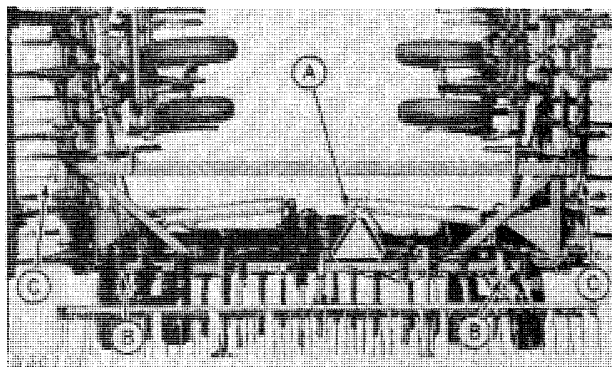

N30101

A—SMV Emblem
B—Reflectors

 
C—Lockup Pin

Keep the SMV emblem (A) and reflectors (B) clean and visible from the rear.

Before transporting, put the outriggers in the raised position as described on page 9.

Always install lockup pins (C).

Always turn the hitch jack to the transport position.

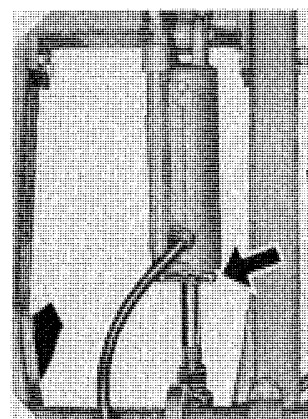

N7805311

Transport

Always move depth control cylinder stop forward (bold arrow) to lock the cylinder.

DO NOT fail to latch the tractor brakes together.

Shift the tractor into a lower gear when transporting down steep slopes or hills.

Stop slowly.

When transporting the cultivator on a road or highway at night or during the day, use accessory lights and devices for adequate warning to operators of other vehicles. In this regard, check local governmental regulations. Various safety lights and devices are available from your John Deere dealer.

KNOW the transport height and width of your cultivator and beware of overhead wires.

4 Safety

Practice Safe Maintenance

 
Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

DO NOT lubricate, adjust, or clean the field cultivator while it is in motion.

Always use a safety support when working on, under, or around the field cultivator.

Shut off tractor engine and remove key when working on field cultivator.

Mounting Tires

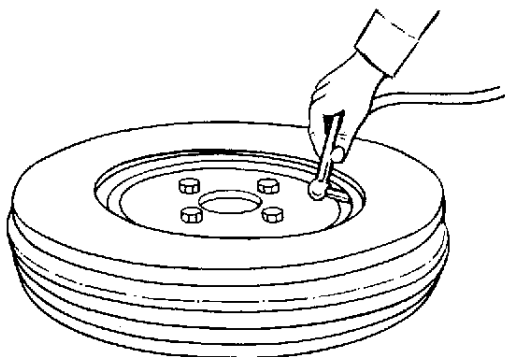


RW362

Failure to follow proper procedures when mounting a tire on a wheel or rim can produce an explosion which may result in serious injury or death. Do not attempt to mount a tire unless you have the proper equipment and experience to perform the job. Have it done by your John Deere dealer or a qualified tire repair service.

When seating tire beads on rims, never exceed 35 psi (241 kPa) or maximum inflation pressure specified by tire manufacturers for mounting tires. Inflation beyond this maximum pressure may break the bead, or even the rim, with dangerous explosive force. If both beads are not seated when the maximum recommended pressure is reached, deflate, reposition tire, relubricate bead, and reinflate.

Detailed agricultural tire mounting instructions, including necessary safety precautions, are contained in John Deere Fundamentals of Service (FOS) Manual 55, Tires and Tracks, available through your John Deere dealer. Such information is also available from the Rubber Manufacturers Association and from tire manufacturers.

 AVOID HIGH-PRESSURE FLUIDS

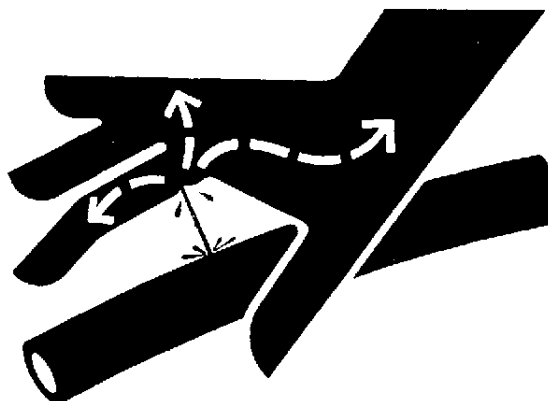

X3811

Escaping fluid under pressure can penetrate the skin causing serious injury. Relieve pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure. Keep hands and body away from pinholes and nozzles which eject fluids under high pressure. Use a piece of cardboard or paper to search for leaks. Do not use your hand.

If ANY fluid is injected into the skin, it must be surgically removed within a few hours by a doctor familiar with this type injury or gangrene may result.

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com