

620 INTEGRAL DISK



OPERATORS MANUAL

620 INTEGRAL DISK

OMN200140 L1 English

**JOHN DEERE DES MOINES WORKS
OMN200140 L1**

LITHO IN THE U.S.A.
ENGLISH



Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage.

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction the implement will travel when going forward.


WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers

when you order parts. File the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

THE TIRE MANUFACTURER'S warranty applicable to your machine may not apply outside the U.S.

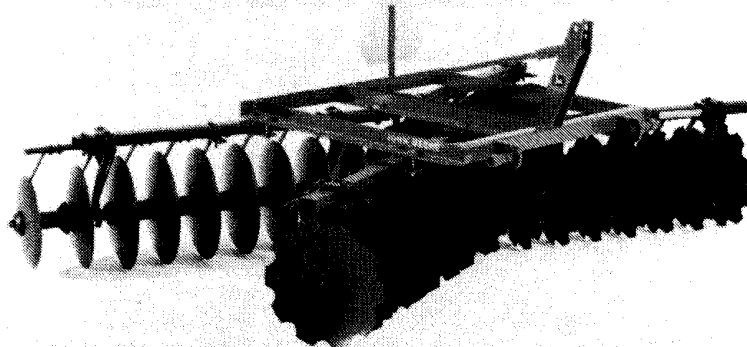

-UN-26JUN89

N39572

PREDELIVERY

After the machine has been completely assembled, inspect to be sure it is in good running order before delivery to the customer. The following checklist is a reminder of points to inspect. Check off each item as it is found satisfactory or after proper adjustment is made.

- | | |
|--|--|
| <input type="checkbox"/> SMV emblem installed and protective tape removed from reflectors. | <input type="checkbox"/> Warning lights are properly installed and are operational. |
| <input type="checkbox"/> All grease fittings have been lubricated, see Lubrication and Maintenance section. | <input type="checkbox"/> Make sure all the customer-ordered attachments have been installed. |
| <input type="checkbox"/> Inspect to be sure nuts on all bolts have been tightened to the proper torque and all cotter pins spread. | <input type="checkbox"/> Any parts scratched in shipment have been touched up with paint. |
| <input type="checkbox"/> Be sure disk gangs turn freely. | <input type="checkbox"/> This machine has been thoroughly checked and to the best of my knowledge is ready for delivery to the customer. |

Signed: _____

Date: _____

DELIVERY

At the time the machine is delivered, the following checklist is a reminder of information which should be conveyed directly to the customer. Check off each item as it is fully explained to the customer.

- | | |
|--|---|
| <input type="checkbox"/> Tell the customer to use the proper tools. | <input type="checkbox"/> When the machine is transported on a road or highway at night or during the day, accessory lights and devices should be used for adequate warning to operators of other vehicles. In this regard, tell customer to check local governmental regulations. |
| <input type="checkbox"/> Explain to the customer that the life expectancy of this machine depends on regular lubrication as directed in the operator's manual. | |
| <input type="checkbox"/> Give the operator's manual to the customer and explain all operating adjustments. | <input type="checkbox"/> To the best of my knowledge, this machine has been delivered ready for field use and the customer has been fully informed as to proper care and operation. |
| <input type="checkbox"/> Make the customer aware of all the safety precautions that must be exercised while using this machine. | Signed: _____ |
| <input type="checkbox"/> Check torque on hardware after first 10-15 hours of operation. | Date: _____ |

AFTER-SALE

The following is a suggested list of items to be checked at a dealer-customer mutually agreeable time during the first operating season.

- | | |
|--|---|
| <input type="checkbox"/> Check with the customer as to the performance of the machine. Make certain the proper operating adjustments are understood. | <input type="checkbox"/> Go over entire machine for loose or missing hardware. |
| <input type="checkbox"/> If possible, operate the machine to see that it is functioning properly. | <input type="checkbox"/> Check for broken or damaged parts. |
| <input type="checkbox"/> Acquaint the customer with any special attachment which will help do a better job. | <input type="checkbox"/> Ask the customer if the recommended periodic lubrication has been performed. |
| | <input type="checkbox"/> Review the operator's manual with the customer and stress the importance of proper lubrication and safety precautions. |

Signed: _____

Date: _____

NX,6201,6 -19-18NOV91

OWNER REGISTRATION

Name _____ Model Number _____

Post Office _____ Serial Number _____

County _____ Date Purchased _____

State _____

NX,6201,7 -19-18NOV91

Contents

	Page		Page
Safety	05-1	Disk Bearing Standard Locations	50-17
Preparing the Tractor	10-1	Disk Blades Eligible for Warranty	50-20
Preparing the Machine	15-1	Disk Blades Not Eligible for Warranty	50-22
Attaching and Detaching		Storage	55-1
Attaching With 3-Point Hitch	20-1	Crime Prevention Tips	60-1
Attaching With Quick-Coupler	20-1	Assembly	
Detaching From Tractor	20-2	Metric Series Torque Chart	65-1
Transporting	25-1	Inch Series Torque Chart	65-2
Operating the Machine		Attach Hitch Pins	65-3
Leveling Disk Side-To-Side	30-1	Attach Gangs	65-6
Leveling Disk Front-To-Rear	30-1	Install Reflectors	65-7
Angling Gangs	30-2	SMV Emblem (Attachment)	65-7
Disking Depth Adjusting	30-3	Rigid Scrapers (Attachment)	65-8
Attachments		Scraper Support Locations	65-9
Rigid Scrapers	35-1	Furrow Filler (Attachment)	65-11
Furrow Filler	35-1	Specifications	70-1
SMV Emblem	35-2	Index	
Lubrication and Maintenance	40-1		
Troubleshooting	45-1		
Service			
Safe Service Procedures	50-1		
Ground Engaging Tool Replacement	50-1		
Metric Series Torque Chart	50-2		
Inch Series Torque Chart	50-3		
Servicing Scrapers	50-4		
Inspect Disk Gangs	50-6		
Assemble Gang Spools	50-7		
Assemble Bearings	50-7		
Gang Reference Diagrams	50-7		
Tightening Gang Bolts	50-16		

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OMN200140 L1-19-19NOV91


COPYRIGHT© 1991
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION® Manual
Previous Editions
Copyright© 1988 Deere & Company

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

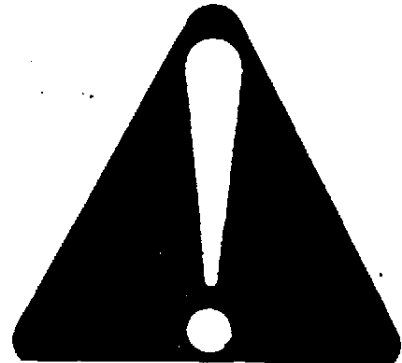

DX,ALERT -19-04JUN90

TS1383 -JUN-07DEC88

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.

▲ DANGER

▲ WARNING

▲ CAUTION

DX,SIGNAL -19-04JUN90

TS187 -19-30SEP88


FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

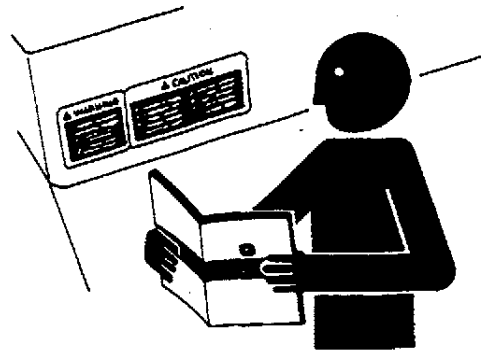

DX,READ -19-04JUN90

TS201 -JUN-23AUG88

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com