

8500 SERIES THREE-SECTION FOLDING GRAIN DRILL



OPERATORS MANUAL 8500 SERIES THREE-SECTION FOLDING GRAIN DRILL

OMN200224 A9 English

JOHN DEERE DES MOINES WORKS

OMN200224 A9

OM-N200088 A7

LITHO IN THE U.S.A.
ENGLISH



Introduction

Read this manual carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage.

This manual should be considered a permanent part of your machine and should remain with the machine when you sell it.

Measurements in this manual are U.S. customary units and their metric equivalents.


Right-hand and left-hand sides are determined by facing in the direction the implement will travel when going forward.

Write product identification numbers in the Specifications section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. If this manual is kept on the machine, also file the identification numbers in a secure place off the machine.

Warranty is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

The tire manufacturer's warranty supplied with your machine may not apply outside the U.S.

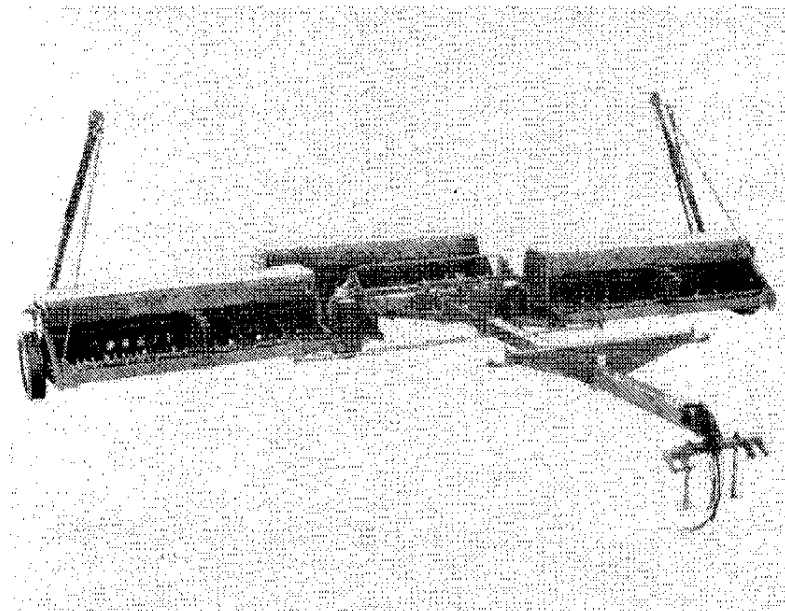

All information, illustrations and specifications in this manual are based on the latest product information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT© 1989, DEERE & COMPANY, Moline, Illinois. All rights reserved. A John Deere ILLUSTRATION™ Manual.

PREVIOUS EDITIONS COPYRIGHT© 1987

8A0;N40375 N04;;200224-IFC 091288

01N;IFC 3 281288

Contents

	Page		Page
Safety	05-1	Cleaning Fertilizer Box	30-27
Preparing the Tractor	10-1	Grass Seed Attachment	
Preparing the Machine	15-1	Checking Feeds	30-29
Attaching and Detaching	20-1	Setting Feed Shifter	30-29
Transporting	25-1	Using Mixtures	30-30
Operating the Machine		Using Seeding Charts	30-30
Guidelines for Use	30-1	Using Density Meter and Charts	30-34
Leveling the Drill		Checking Quantities Drilled	30-36
Drawn	30-1	Drilling Row Crops	30-38
Semi-Integral	30-2	Gang Press Attachment	
Folding Drills	30-2	Adjusting Transport Lift Height	30-39
Unfolding Drills	30-4	Adjusting Down-Pressure	30-40
Adjusting		Aligning Wheels	30-41
Individual Opener Down-Pressure	30-5	Feed Stop	
Individual Drill Depth Control	30-6	Grain	30-42
Setting Drill Alignment	30-7	Fertilizer	30-42
Adjusting Single Disk Openers		Grass Seed	30-42
Inside Scrapers	30-8	Depth Bands	30-43
Toe Scraper	30-9	Fertilizer Spouts	30-43
Boot	30-9	Adjusting Hydraulic Row Marker	30-44
Adjusting Double-Disk Outside Scrapers	30-10	S-Tine Setting	30-45
Checking Disk Blades—Aluminum		Additional Selector Valves	30-45
Boot	30-11	Fender Attachment	30-46
Adjusting		Row Marker Selector Control	30-46
Hoe Openers	30-12	Lubrication and Maintenance	35-1
Depth on TRU-VEE Opener Attachment	30-13	Troubleshooting	40-1
TRU-VEE Opener Gauge Wheel Tires	30-14	Service	
Depth on Adjustable Depth Gauge		Torque Chart	45-1
Wheel Attachment	30-14	Check Tire Pressure	45-2
Depth Gauging Press Wheels	30-15	Check Hitch Wheel Bolts and Bearings	45-2
Aligning Opener Drawbars	30-16	Removing and Repairing Cylinders	45-3
Setting Spill Shields	30-16	Bleeding Cylinders	45-4
Fluted Feed Drills		Reset Fluted-Feed Cups	45-5
Checking Grain Feeds	30-17	Check Feed Shaft Rolling Torque	45-6
Setting Grain Shifter	30-17	Replace Gauge Wheel Arm—TRU-VEE	
Using Seed Mixtures	30-18	Attachment	45-6
Cleaning and Setting Feed Cups	30-19	Tighten Drive Chains	45-7
Setting Feed Shaft Speed	30-20	Replace	
Using Extra Slow Speed Drive	30-20	Fertilizer Feed Wheels	45-7
Seeding Charts	30-21	Single-Disk Boot	45-8
Fertilizer Drills		Single Disk	45-8
Adjusting Box Partition	30-24	Reassemble Single Disk	45-9
Setting Feed Shaft Speed	30-25	Replace and Adjust Double-Disk Blades	
Setting Graduated Speed Drive	30-25	Aluminum Boots	45-10
Using Density Meter and Charts	30-26	Cast-Iron Boots	45-11
Fertilizer Charts	30-27	Replacing	
		Inside Scrapers	45-12
		Seed Tubes—Double-Disk Opener	45-12

Contents

	Page
Seed Tubes—Single-Disk Opener	45-13
Main Drive Shear Pin	45-14
Storage	50-1
Crime Prevention Tips	55-1
Specifications	60-1

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.



AB6/T81389 053;ALERT 160687

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

Safety signs with signal word DANGER or WARNING are typically near specific hazards.

General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.

⚠ DANGER

⚠ WARNING

⚠ CAUTION


AB6/T5187 053;SIGNAL 071085

FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

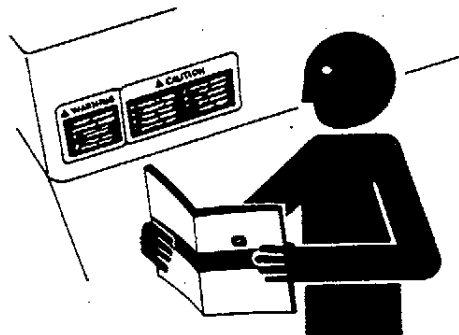

AB6/T5201 053;READ 230487



OPERATE SAFELY

DO NOT operate drill with more than one person on the tractor.

DO NOT allow anyone to ride on the drill.

DO NOT operate close to a ditch or creek.


Drive slowly over rough ground.

Shift the tractor into a lower gear when operating on steep slopes.

If your tractor is equipped with a ROLL-GARD® Safety Canopy and seat belt be sure to keep your seat belt fastened when operating or transporting the drill.

Handle and apply chemically treated seeds according to manufacturers recommendations. Properly dispose of unused treated seeds and their containers.

Always shut off tractor engine and shift to park when leaving tractor. Remove key when leaving tractor unattended.

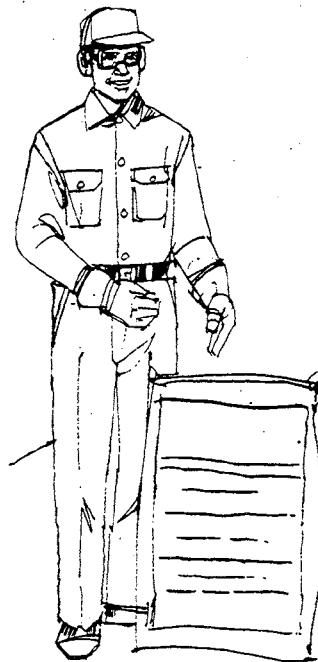

9A0;N36593 N04;HZSA B 151183

AVOID TIP-OVERS

Use a seat belt under almost all operating conditions.

Avoid holes, ditches, and obstructions which may cause the machine to tip, especially on hillsides.

Never drive near the edge of a gully or steep embankment—it might cave in.

Slow down for hillsides, rough ground, and sharp turns.




A74;N39084 N01;9930 CF 171187



KEEP RIDERS OFF MACHINE

Only allow the operator on the machine. Keep riders off.

Riders on machine are subject to injury such as being struck by foreign objects and being thrown off of the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.

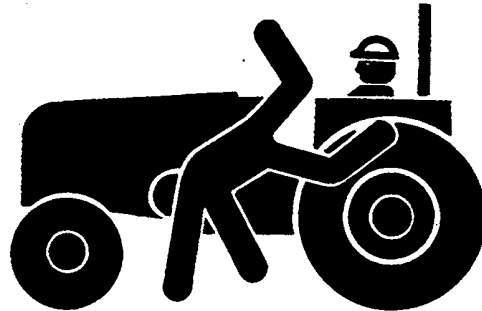

AB6;TS213 053;RIDER 160687

PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.


Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.



AB6;TS186 053;FIRE2 080785

WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

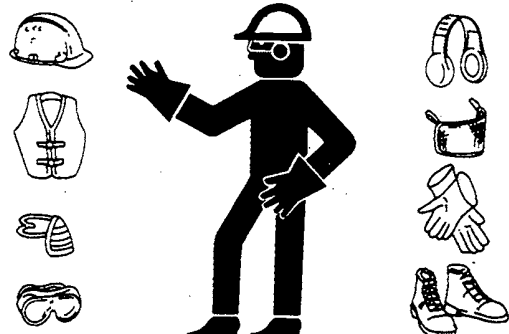


AB6;TS206 053;WEAR2 230487

PROTECT AGAINST NOISE

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

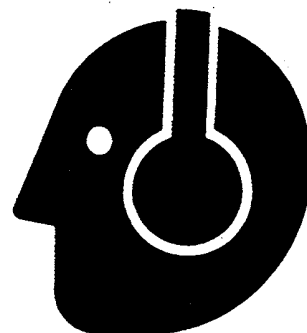

AB6;TS207 053;NOISE 230487



HANDLE PESTICIDES AND FERTILIZERS CAREFULLY

Keep dust away from skin and hair.

Keep containers low when pouring.

Let the wind blow fumes away from you when mixing with seed or when filling tank.

Wear a filtered respirator if you cannot avoid dust.

Wear goggles to protect your eyes.

Wash exposed skin areas frequently — do not leave pesticide on your skin.


Do not smoke while handling pesticides.

Properly dispose of pesticide container, unused pesticide and left-over treated seed and fertilizer.

Read and observe manufacturers recommendations.

Store pesticides in a separate, plainly marked LOCKED building.

Store pesticides in original containers with labels intact.

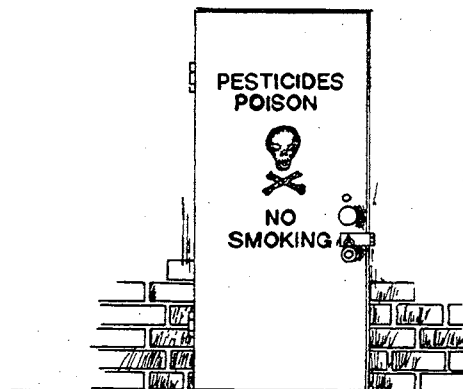




USE SAFETY LIGHTS AND DEVICES

Flashing warning lights and turn signals are recommended when towing this equipment on public roads unless prohibited by state or local regulations. A safety lighting kit is available from your John Deere dealer.

Keep safety items in good condition. Replace missing or damaged items.

- A—Lights
B—Slow Moving Vehicle Emblem
C—Reflector Tape
D—Reflectors

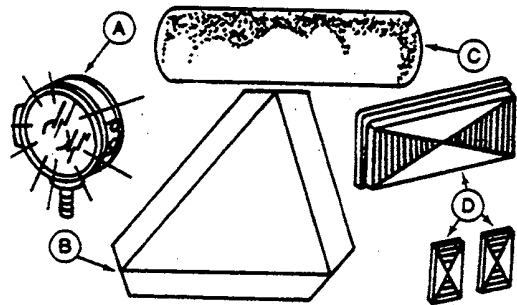


AB6;N36564 053;FLASH 010388

USE A SAFETY CHAIN

A safety chain will help control drawn equipment should it accidentally separate from the drawbar.

Using the appropriate adapter parts, attach the chain to the tractor drawbar support or other specified anchor location. Provide only enough slack in the chain to permit turning.

See your John Deere dealer for a chain with a strength rating equal to or greater than the gross weight of the towed machine. Do not use safety chain for towing.

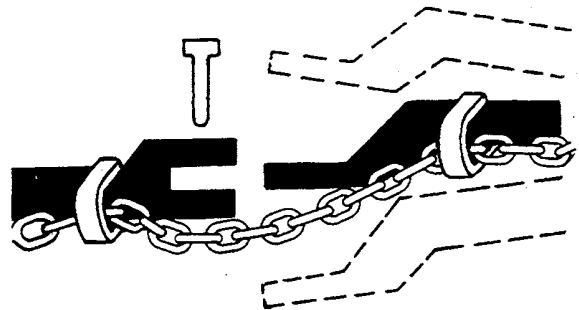


AB6;TS217 053;CHAIN 171287

TRANSPORT SAFELY—DRAWN MODELS

Raise parking stand (A).

Install safety clevis (B) over cylinder rod and pin in place.

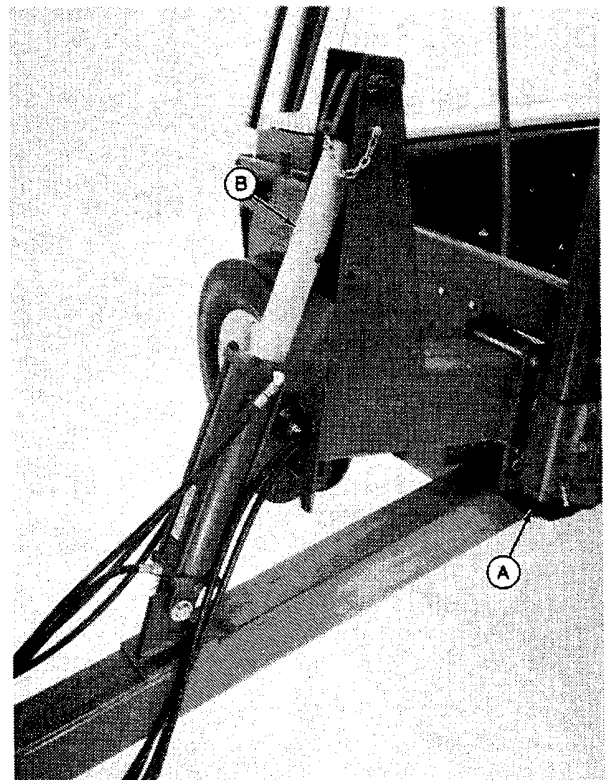

8A0;N85354 A1 N04;;8500C A 100386

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com