

1000 INTEGRAL MOLDBOARD PLOW



OPERATORS MANUAL 1000 INTEGRAL MOLDBOARD PLOW

OMN200252 L8 English

OMN200252 L8

OM-A-50461

LITHO IN THE U.S.A.
ENGLISH



Introduction

Read this manual carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage.

This manual should be considered a permanent part of your machine and should remain with the machine when you sell it.

Right-hand and left-hand sides are determined by facing in the direction the implement will travel when going forward.




This machine is of metric design. Measurements in this manual are metric with the customary U.S. measurement following. Use only metric hardware and tools as specified.

Write product identification numbers in the space provided in the Specifications section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. If this manual is kept on the machine, also file the identification numbers in a secure place off the machine.

Warranty is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

The tire manufacturer's warranty supplied with your machine may not apply outside the U.S.

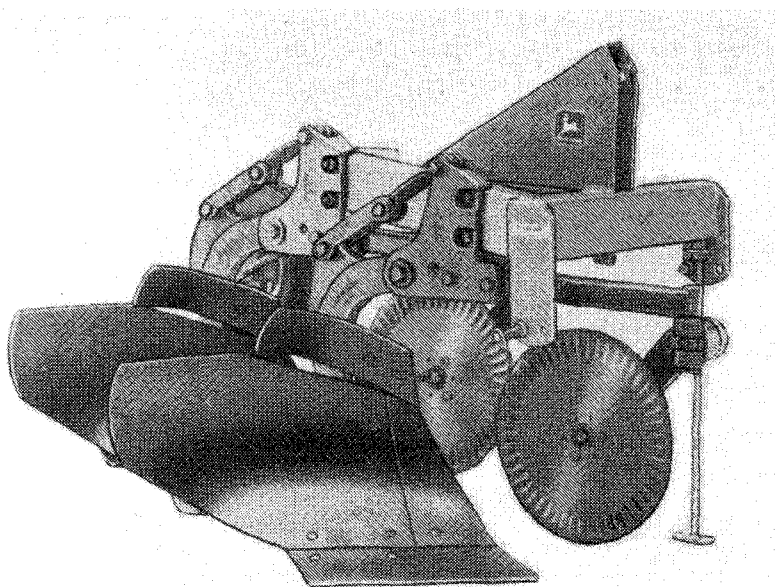

1000 Two-Bottom Plow

All information, illustrations and specifications in this manual are based on the latest product information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT© 1988 DEERE & COMPANY Moline, Illinois All rights reserved A John Deere ILLUSTRATION™ Manual

PREVIOUS EDITIONS COPYRIGHT© 1986

0AX;N40346 B03;;200252-IFC 011288

7N9;IFC 3 011288

Checklists

PREDELIVERY

After the machine has been completely assembled, inspect to be sure it is in good running order before delivering to the customer. The following checklist is a reminder of points to inspect. Check off each item as it is found satisfactory or after proper adjustment is made.

- ☐ SMV emblem and reflectors installed.
- ☐ All grease fittings have been lubricated.
- ☐ Tires are properly inflated. Tighten wheel bolts to specified torque.

- ☐ Make sure all the customer-ordered attachments have been installed.
- ☐ Any parts scratched in shipment have been touched up with paint.
- ☐ This machine has been thoroughly checked and to the best of my knowledge, is ready for delivery to the customer.

Signed: _____

Date: _____

N03;;2000U -A6 141188

DELIVERY

At the time the machine is delivered, the following checklist is a reminder of information which should be conveyed directly to the customer. Check off each item as it is fully explained to customer.

- ☐ Tell the customer to use the proper tools.
- ☐ Explain to the customer that the life expectancy of this or any other machine depends on regular lubrication as directed in the operator's manual.
- ☐ Give the operator's manual to the customer and explain all operating adjustments.
- ☐ Make the customer aware of all the safety precautions that must be exercised while using this machine.

- ☐ When the machine is transported on a road or highway at night or during the day, accessory lights and devices should be used for adequate warning to operators of other vehicles. In this regard, tell customer to check local governmental regulations.
- ☐ To the best of my knowledge, this machine has been delivered ready for field use and the customer has been fully informed as to proper care and operation.

Signed: _____

Date: _____

N03;;610U -B 030487

7N9;JFC 4 011288

Checklists

AFTER-SALE

The following is a suggested list of items to be checked at a dealer-customer mutually agreeable time during the first operating season.

- ☐ Check with the customer as to the performance of the machine. Make certain the proper operating adjustments are understood.
- ☐ If possible, operate the machine to see that it is functioning properly.
- ☐ Acquaint the customer with any special attachment which will help do a better job.
- ☐ Go over entire machine for loose or missing hardware.
- ☐ Check for broken or damaged parts.

- ☐ Ask the customer if the recommended periodic lubrication has been performed.

- ☐ Review the operator's manual with the customer and stress the importance of proper lubrication and safety precautions.

Signed: _____

Date: _____

N03;;610U -C 200487

OWNER REGISTER

Name _____

Model Number _____

Post Office _____

Serial Number _____

County _____ State _____

Date Purchased _____

9A8; N03;;712U C 220684

Contents

	Page		Page
Safety	05-1	Detaching from Tractor	25-3
Preparing the Tractor (850—1050)		Transporting	30-1
Tire Inflation	10-1	Operating the Machine	
Rear Wheel Weighting	10-1	Before Opening the Field	35-1
Tractor Drawbar	10-1	Opening the Field	
Front Ballast	10-1	First Pass	35-2
Determining Implement Code	10-2	Second Pass	35-2
Wheel Spacing		Third Pass	35-3
Rear	10-3	Raising and Lowering Plow	35-3
Front	10-3	Depth of Plowing	
3-Point Hitch and Hydraulic System	10-3	850 and 950 Tractors	35-3
Sway Chains	10-3	1050—2950 Tractors	35-4
Center Link and Lift Links	10-4	Leveling the Plow	35-5
Preparing the Tractor (1250—2950)		Changing Plow Bottom Attitude	35-7
Tire Inflation	15-1	Adjusting	
Rear Wheel Weighting	15-1	Width of Cut—Adjustable Landing	35-8
Tractor Drawbar	15-1	Long Rear Landside	35-8
Front Ballast	15-1	Rolling Landside (Optional)	35-9
Determining Implement Code	15-2	Coulters	35-9
Wheel Spacing		Adjusting Coulters	
Rear	15-3	Horizontal	35-10
Front	15-3	Depth	35-11
Rockshaft Selector Lever	15-3	Safety-Trip Standards	35-12
Sway Blocks	15-3	Gauge Wheel (Attachment)	35-12
Link Lengths	15-4	Attachments	
Preparing the Machine		Trash Board	40-1
Checking and Lubricating Plow	20-1	Mulch Bottom	40-1
Plow Bottoms	20-1	Lubrication and Maintenance	45-1
Mast Pin and Hitch Pins		Troubleshooting	50-1
2 Bottom Plow	20-1	Service	
3 Bottom Plow—Category 1	20-2	Torque Chart	55-3
3, 4 and 5 Bottom Plows—Category		Inspect Shares	55-4
2 Without Quick-Coupler	20-2	Check Shin and Trash Board	55-4
3, 4 and 5 Bottom Plows—Category		Check Landside	55-4
2 With Quick-Coupler	20-2	Protect Plow Bottoms	55-5
Width of Cut	20-3	Inspect Wheel Bearings	55-5
Setting Lift Pins for Width of Cut—2		Inspect Coulters	55-6
Bottom Plow	20-4	Replacing Coulter Shear Bolts	55-6
Setting Hitch Pins for Width of		Storage	60-1
Cut—3, 4 or 5 Bottom Plows	20-4	Crime Prevention Tips	65-1
Coulter Adjustment	20-5	Assembly	
Attaching and Detaching		Torque Chart	70-1
3-Point Hitch			
850—1050 Tractors	25-1		
1250—2950 Tractors	25-1		
Quick-Coupler—1250 To 2950 Tractors	25-1		
Checking Plow and Tractor	25-2		

Contents


	Page
Two Bottom Plow	
Attach Plow to Tractor	70-1
Attach Standards	70-2
Attach SMV Emblem and Rear Reflectors	70-3
Three, Four and Five Bottom Plow	
Prepare Frame	70-3
Attach First and Second Standards	70-3
Attach Hitch—Three and Four Bottom	70-4
Attach Offset Hitch—Four and Five Bottom	70-4
Attach Plow to Tractor	70-4
Attach Remaining Standards, SMV Emblem and Rear Reflectors	70-5
Attach	
Bottoms with Short Landside	70-5
Rear Bottom with Long Landside	70-6
Rolling Landside (Optional)	70-6
Install Coulters	70-6
Installing Front Reflector	70-7
Attach	
Gauge Wheel	70-8
Trash Board	70-8
Mulch Bottom	70-9
Specifications	75-1

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

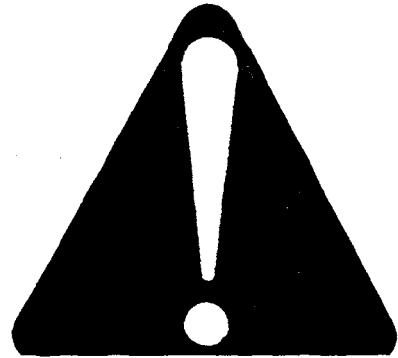

AB6;T81389 053;ALERT 160687

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

Safety signs with signal word DANGER or WARNING are typically near specific hazards.

General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.

⚠ DANGER

⚠ WARNING

⚠ CAUTION

AB6;TS187 053;SIGNAL 071085

FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.



AB6;TS201 053;READ 230487



OPERATE SAFELY

Never ride or permit others to ride on the plow.

When the plow is in a raised position, be sure rockshaft lever is not bumped or touched by anyone.

Lower the support stand to help support the plow before unhitching from the tractor.

Stand clear of plow when raising or lowering.

Stay clear of the reset path if the standards hang in a partially-tripped position from an obstruction or during maintenance.


Do not attempt to adjust the plow while it is in motion.

For tractor stability and operator safety, tractor front end weights and/or liquid ballast in the front tires may be required. (See Front Ballast in Preparing the Tractor section.)

Keep children and pets a safe distance away.

Follow all safety precautions stated in your tractor operator's manual.

Always lower the plow to the ground when not in use.

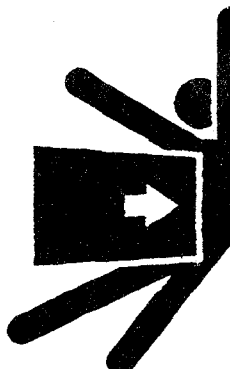

OAX;N39109 B03;1000C -A1 011288

KEEP RIDERS OFF MACHINE

Only allow the operator on the machine. Keep riders off.

Riders on machine are subject to injury such as being struck by foreign objects and being thrown off of the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.



AB6;TS213 053;RIDER 160687



PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.


Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.



AB6;TS186 053;FIRE2 080785

WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

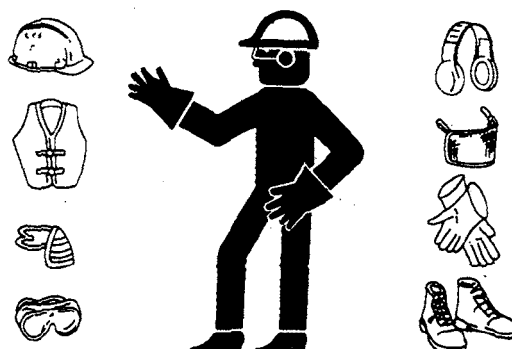

AB6;TS206 053;WEAR2 230487

USE SAFETY LIGHTS AND DEVICES

Flashing warning lights and turn signals are recommended when towing this equipment on public roads unless prohibited by state or local regulations. A safety lighting kit is available from your John Deere dealer.


Keep safety items in good condition. Replace missing or damaged items.

A—Lights

C—Reflector Tape

B—Slow Moving Vehicle Emblem

D—Reflectors

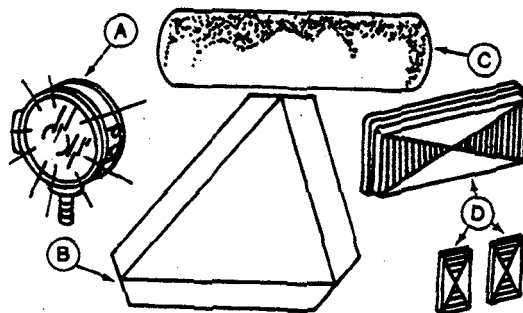

AB6;N36564 053;FLASH 010388

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com