

520 Integral Soybean/Grain Drill

 


OPERATORS MANUAL 520 Integral Soybean/Grain Drill

OMN200300 Issue F2 English

John Deere Des Moines Works
OMN200300 Issue F2
(This manual replaces OMN200300 F1)

LITHO IN U.S.A.
ENGLISH



Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage.

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing the direction the implement will travel when going forward.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification or Identification Numbers section. Accurately record all the numbers. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

BEFORE DELIVERING THIS MACHINE, your dealer performed a predelivery inspection. After operating for


the first 100 hours, schedule an after-sale inspection with your dealer in order to guarantee the reliable operation of the machine.

THIS GRAIN DRILL IS DESIGNED SOLELY for use in customary agricultural operations ("INTENDED USE").

Use in any other way is considered as contrary to the intended use. The manufacturer accepts no liability for damage or injury resulting from this misuse, and these risks must be borne solely by the user. Compliance with and strict adherence to the conditions of operation, service and repair as specified by the manufacturer also constitute essential elements for the intended use.

THIS GRAIN DRILL SHOULD BE OPERATED, serviced and repaired only by persons familiar with all its particular characteristics and acquainted with the relevant safety rules (accident prevention). The accident prevention regulations, all other generally recognized regulations on safety and occupational medicine and the road traffic regulations must be observed at all times.

Any arbitrary modifications carried out on this GRAIN DRILL will relieve the manufacturer of all liability for any resulting damage or injury.

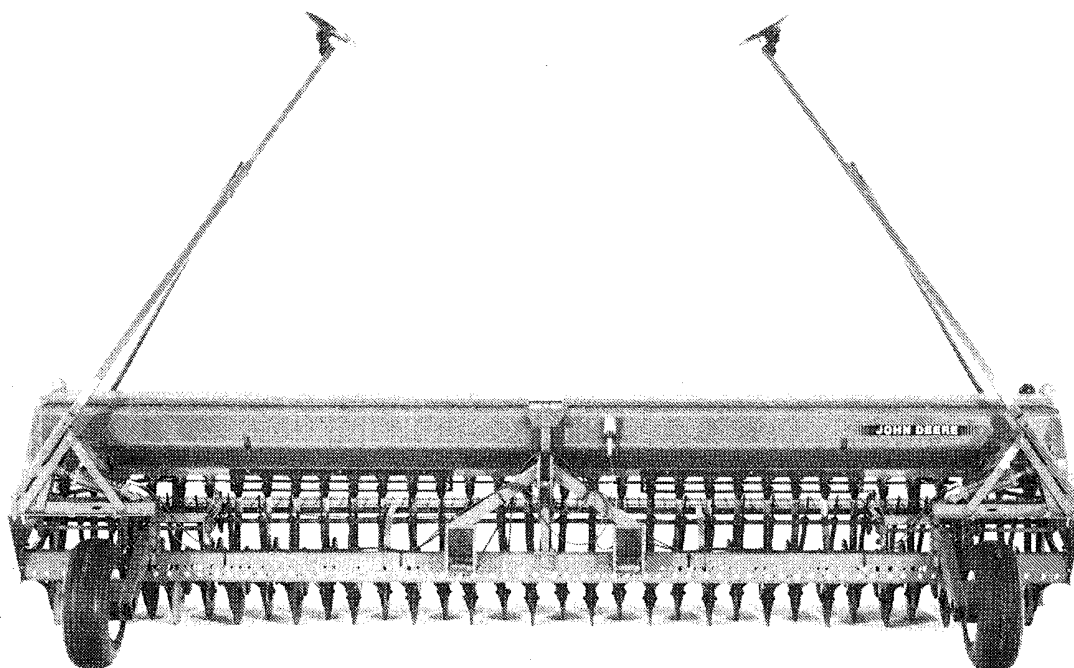

N42125MA
-UN-05MAY92

NX,200300,IFC -19-05MAY92

Contents

	Page		Page
Safety	05-1	Adjusting Depth-Adjustable Depth Gauge Wheel	30-7
Preparing the Tractor		Depth Gauging Press Wheel Adjusting	30-7
Setting Wheel Tread	10-1	Opener Drawbar Alignment	30-8
Setting Lift Links	10-1	Checking Grain Feeds-Fluted Feed Drills ...	30-8
Hydraulic Speed Adjusting	10-2	Setting Grain Shifter-Fluted Feed Drills	30-9
Speed of Drop Adjusting	10-2	Seed Mixtures-Fluted Feed Drills	30-9
Setting Rockshaft Selector Lever-Small Chassis	10-2	Setting Fluted Feed Cups	30-10
Load/Depth Mix Control-Larger Tractors	10-3	Fluted Feed Shaft Speed	30-10
Draft Control-Larger Tractors	10-3	Half Speed Drive Attachment	30-11
Preparing the Drill		Seeding Charts-Fluted Drills	30-11
Setting Hitch Pins and Spacers	15-1	Pounds of Seed Per Acre Chart	30-12
Checking Implement Wheel Bolts	15-1	Checking Grain Feeds—Double-Run Drills ...	30-16
Checking Implement Tire Pressure	15-2	Setting Double-Run Feed Covers	30-16
Attaching and Detaching		Setting Double-Run Feed Cups	30-17
Attaching With Quick-Coupler	20-1	Cleaning Double-Run Feed Cups	30-17
Attaching Without Quick-Coupler	20-2	Feed Shaft Speed	30-18
Rockshaft Control Operation	20-3	Seeding Charts—Double-Run Drills	30-18
Leveling Drill	20-3	Pounds of Seed Per Acre Chart	30-20
Detaching Drill From Tractor	20-4	Checking Grass-Seed Attachment Feeds ...	30-26
Transporting	25-1	Setting Feed Shifter for Grass Seed Attachment	30-26
Operating the Drill		Seed Mixtures for Grass Seed Attachment	30-27
Operating Guidelines	30-1	Using Seeding Charts-Grass Seed Attachment	30-27
Individual Opener Down Pressure Adjustment	30-2	Checking Quantities Drilled-Method 1	30-29
Gang Opener Down Pressure Adjustment ...	30-4	Checking Quantities Drilled-Method 2	30-30
Double-Disk Outside Scraper Adjustment ...	30-4	Setting Drill	30-32
Double-Disk Inside Scraper Replacement ...	30-5	Density Meter	30-33
Double-Disk Blade Adjustment	30-5	Density Conversion Factor and Charts	30-35
Depth on Tru-Vee Opener Attachment Adjustment	30-6	Drill Operating Height Adjustment	30-37
Tru-Vee Opener Gauge Wheel Tire Adjustment	30-6	Gauge Wheel Positioning	30-37
		Hydraulic Row Marker Attachment Adjustment	30-40
		Press Wheel Attachment Adjustment	30-41
		Track Tillage Attachment Adjustment	30-42
		Lubrication and Maintenance	
		General Purpose Grease	35-1

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OMN200300 F2-19-07MAY92

COPYRIGHT® 1992
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION™ Manual
Previous Editions
Copyright® 1991, 1990, 1989, 1985 Deere & Company

Contents


	Page		Page
Gear Case Oil	35-1	Implement-Tractor-Rear-Tire Compatibility Chart—Continued	
Lubrication Symbols	35-2	Bolt-On Blades	60-4
Alternative Lubricants	35-2	34 x 7 Drill W/Aluminum Boots and Bolt-On Blades	60-5
Storing Lubricants	35-2	24 x 10 Drill W/Cast Iron Boots and Riveted Blades	60-6
Roller Chain Lubricants	35-3	34 X 7 Drill W/Cast Iron Boots and Riveted Blades	60-6
Every 10 Hours of Operation	35-4	Implement-Tractor Rear Tire Compatibility Chart	60-7
Troubleshooting	40-1	Serial Number	60-8
Service		Index	
Fluted Feed Drive	45-1		
Double-Run Feed Drive	45-2		
Grass Seed Drive (Attachment)	45-3		
Metric Series Torque Chart	45-5		
Inch Series Torque Chart	45-6		
Tires	45-7		
Tighten Gear Box Drive			
Chain—Double-Run	45-8		
Tighten Main Drive Chain-All Models	45-8		
Checking Main Drive Shaft Rolling Torque	45-9		
Tighten Feed Shaft Drive Chain	45-9		
Reset Fluted-Feed Cups	45-10		
Accuracy of Double-Run Feed Gate			
Opening	45-11		
Main Drive Shaft Rolling Torque	45-12		
Tighten Feed Shaft Drive Chains	45-13		
Tighten Main Drive Chains	45-14		
Tighten Gear Box Drive			
Chain—Double-Run	45-14		
Tighten Main Drive Chain on Grass Seed Attachment	45-15		
Gauge Wheel Arm Replacement	45-15		
Check Truss Rod Torque	45-16		
Main Drive Shear Pin	45-16		
Storage	50-1		
Crime Prevention Tips	55-1		
Specifications			
Dimensions	60-1		
General Information	60-2		
Implement-Tractor-Rear-Tire Compatibility Chart			
24 x 10 Drill W/Aluminum Boots and			

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

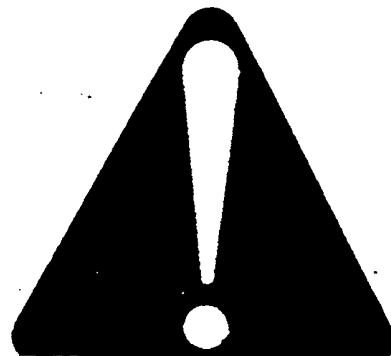

DX,ALERT -19-04JUN90

TS1389 -UN-07DEC88

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-09JAN92

TS187 -19-30SEP88


FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

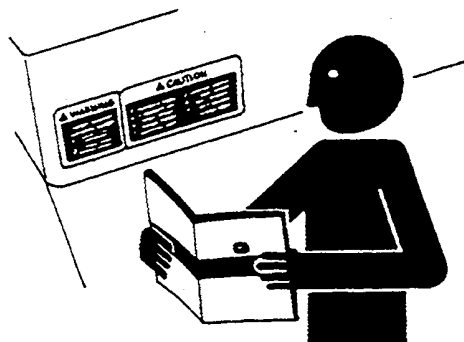

DX,READ -19-04JUN90

TS201 -UN-23AUG88



OPERATE SAFELY

DO NOT operate drill with more than one person on the tractor.

DO NOT allow anyone to ride on the drill.

DO NOT operate close to a ditch or creek.

Drive slowly over rough ground.

Shift the tractor into a lower gear when operating on steep slopes.

Handle and apply chemically treated seeds according to manufacturers recommendations. Properly dispose of unused treated seeds and their containers.

Always shut off tractor engine and shift to park when leaving tractor. Remove key when leaving tractor unattended.




NX,520,C1 -19-10APR89

N36593 -UN-27SEP88

KEEP RIDERS OFF MACHINE

Only allow the operator on the machine. Keep riders off.

Riders on machine are subject to injury such as being struck by foreign objects and being thrown off of the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.

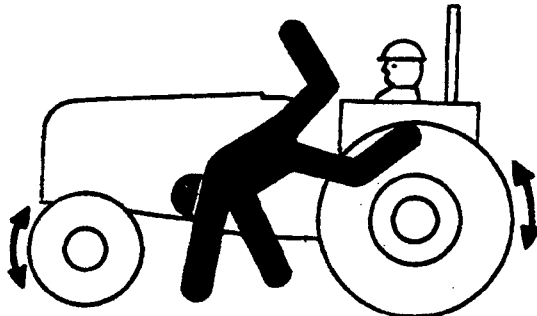

DX,RIDER -19-04JUN90

TS290 -UN-23AUG88

AVOID TIP-OVERS

Use a seat belt under almost all operating conditions.

Avoid holes, ditches, and obstructions which may cause the machine to tip, especially on hillsides.

Never drive near the edge of a gully or steep embankment—it might cave in.

Slow down for hillsides, rough ground, and sharp turns.



NX,520,C2 -19-10APR89


N39084 -UN-30MAR89



WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

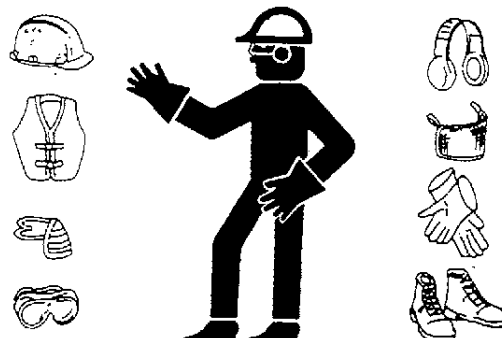

DX.WEAR2 -19-10SEP90

TS206 -UN-23AUG88


HANDLE CHEMICAL PRODUCTS SAFELY

Direct exposure to hazardous chemicals can cause serious injury. Potentially hazardous chemicals used with John Deere equipment include such items as lubricants, coolants, paints, and adhesives.

A Material Safety Data Sheet (MSDS) provides specific details on chemical products: physical and health hazards, safety procedures, and emergency response techniques.

Check the MSDS before you start any job using a hazardous chemical. That way you will know exactly what the risks are and how to do the job safely. Then follow procedures and recommended equipment.

(See your John Deere dealer for MSDS's on chemical products used with John Deere equipment.)

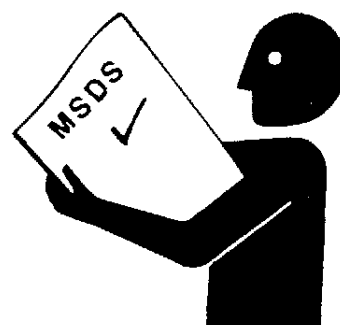

DX.MSDS.NA -19-15MAR91

TS1132

-UN-28NOV90



HANDLE PESTICIDES AND FERTILIZERS CAREFULLY

Keep dust away from skin and hair.

Keep containers low when pouring.

Let the wind blow fumes away from you when mixing with seed or when filling tank.

Wear a filtered respirator if you cannot avoid dust.

Wear goggles to protect your eyes.

Wash exposed skin areas frequently—do not leave pesticide on your skin.



Do not smoke while handling pesticides.

Properly dispose of pesticide container, unused pesticide and left-over treated seed and fertilizer.

Read and observe manufacturers recommendations.

Store pesticides in a separate, plainly marked LOCKED building.

Store pesticides in original containers with labels intact.

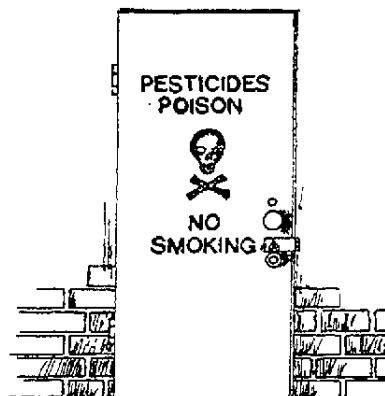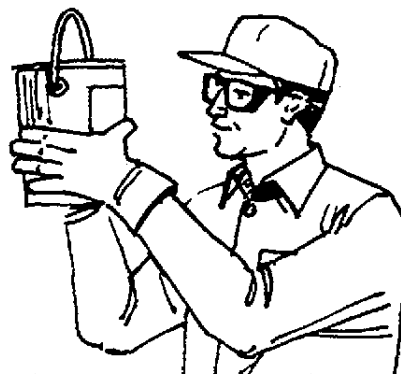

-UN-04OCT88

N35988

-UN-04OCT88

N35989

-19-31JAN89

N35983

NX,520,C2A -19-10APR89




USE SAFETY LIGHTS AND DEVICES

Slow moving tractors, self-propelled equipment and towed implements or attachments can create a hazard when driven on public roads. They are difficult to see, especially at night. Avoid personal injury or death resulting from collision with a vehicle.

Flashing warning lights and turn signals are recommended whenever driving on public roads. To increase visibility, use the lights and devices provided with your machine. For some equipment, install extra flashing warning lights.

Keep safety items in good condition. Replace missing or damaged items. An implement safety lighting kit is available from your John Deere dealer.

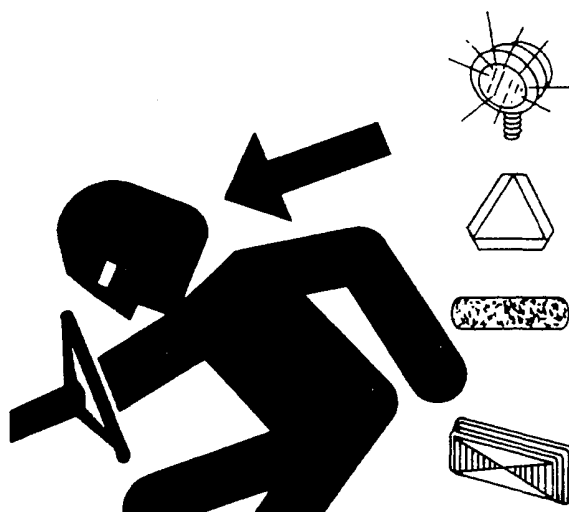

TS951 -JUN-12APR90

DX,FLASH -19-04,JUN90

TRANSPORT SAFELY

Always raise jackstand before transporting.

Use proper ballast for tractor stability and operate safely.

Be sure to latch tractor brakes together.


Shift tractor into a lower gear when transporting down steep slopes or hills.

Never transport the drill faster than 32 km/h (20 mph). Reduce speed when traveling over rough ground. from the rear.

Keep SMV emblem and reflectors clean and visible from the rear.

Use of flashing warning lights and turn signals is recommended when transporting this equipment on public roads unless prohibited by state or local regulations. An implement safety lighting kit is available from your John Deere dealer.

When markers are used, be aware of overhead wires and KNOW the transport height and width of your machine.

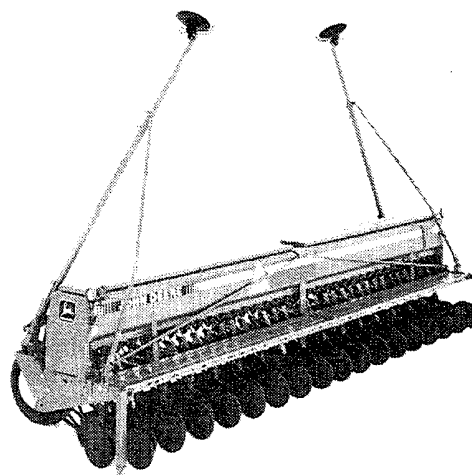

N42125MB -JUN-05MAY92

NXN,520,C3X -19-05MAY92




REDUCE SPEED WHEN TOWING LOADS

Braking to stop towed loads from transport speeds can cause the towed load to swerve and upset. Reduce speed if towed load weighs more than the tractor and is not equipped with brakes.

Follow recommended speed-weight ratio guidelines:

- Maximum speed is 20 mph (32 km/h) when towing load equal to or less in weight than the tractor.
- Reduce speed to 10 mph (16 km/h) when towing load up to double the tractor weight.
- Do not tow loads exceeding double the tractor weight.
- Use additional caution when towing loads under adverse surface conditions, when turning, and on inclines.

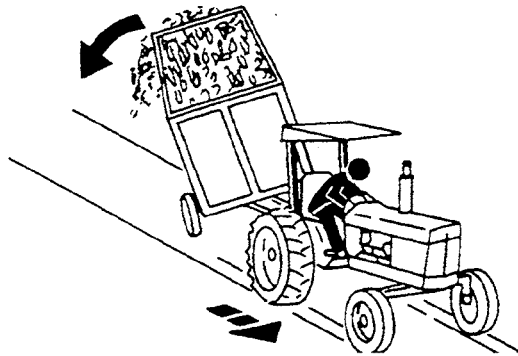

-UN-23AUG88

TS216

DX,TOW

-19-04JUN90

PRACTICE SAFE MAINTENANCE

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate or service machine while it is moving. Keep hands, feet, and clothing from power-driven parts. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.

Disconnect battery ground cable (-) before making adjustments on electrical systems or welding on machine.



-UN-23AUG88

TS218

DX,SERV

-19-04JUN90




AVOID HIGH-PRESSURE FLUIDS

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A.

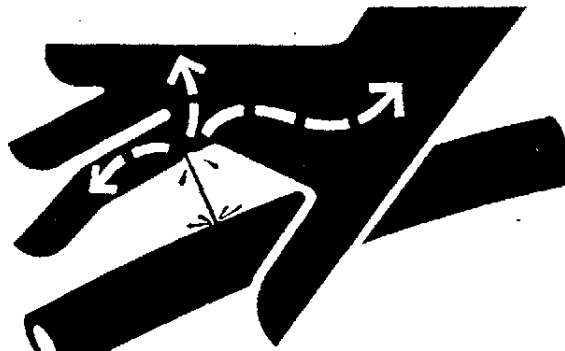

-UN-23AUG88

X9811

DX,FLUID -19-09AUG91

STORE ATTACHMENTS SAFELY

Stored attachments such as dual wheels, cage wheels, and loaders can fall and cause serious injury or death.

Securely store attachments and implements to prevent falling. Keep playing children and bystanders away from storage area.



-UN-23AUG88

TS219

DX,STORE -19-04JUN90

CHARGE ROW MARKER HYDRAULIC SYSTEM

Falling row markers can cause personal injury. Be sure cylinders and attaching hoses are fully charged with oil before operating. Failure to do so will allow markers to fall rapidly.

ALWAYS stay clear of markers when raising or lowering.



-UN-22SEP88

N39213

NX,520,C4 -19-05JUL89

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.
You can download the most
perfect and complete manual in
the world immediately.

Our support email:
ebooklibonline@outlook.com