

205 Corn Attachment (Effective Serial No. 205-1636)



JOHN DEERE

OPERATORS MANUAL 205 Corn Attachment (Effective Serial No. 205-1636)

OMN97604N (01MAR62) English

OMN97604N (01MAR62)

LITHO IN U.S.A.
ENGLISH



TO THE PURCHASER

This manual contains useful information on how to operate your new John Deere 205 Corn Attachment.

A corn attachment must be built to handle a wide range of conditions. Average conditions can be handled by the 205 Corn Attachment with regular equipment. Unusual conditions can be handled by installing special equipment.


Field conditions vary from year to year, from day to day, and even from hour to hour. Different varieties of corn present widely different picking problems. A careful study of adjustments on your corn attachment and what they accomplish under varying conditions will allow you to reap many benefits and economies that a corn attachment can provide.

Your new corn attachment will do quality work in direct proportion to the care you use in operating it. Operate and service the attachment according to the instructions in this manual.

If you need information not covered in this manual, see your John Deere dealer. He has the latest information on how to get the best service from your corn attachment and can give you prompt service in the field or in his shop.

When in need of parts, go to your John Deere dealer. He carries genuine John Deere parts for your 205 Corn Attachment.

Be prepared to give him the serial number of your corn attachment and the year purchased. This information should be recorded below on this page as soon as you have received your corn attachment.

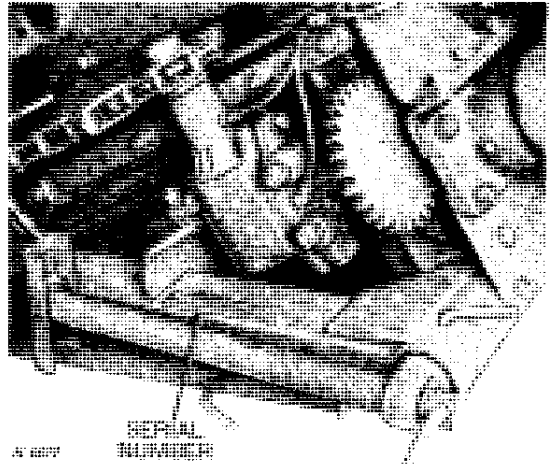


Serial Number

Date Purchased


You will find the serial number plate on the left-hand main frame as illustrated above.

CONTENTS

	<i>Page</i>
SPECIFICATIONS.....	3
OPERATION.....	4-15
General Instructions.....	4
Field Losses.....	5
Wheel Shields.....	5
Gatherers.....	6-8
Gatherer Points.....	6
Ear Saver.....	6
Gatherer Chains.....	7
Adjusting Stripper and Upper Gatherer Chain Guide.....	7
Adjusting Outer Gatherer Chain, Lower Chain Guide and Deck Plate.....	8
Adjusting Inner Gatherer Chain.....	8
Stalk Rolls.....	9
Row Spacing Adjustment.....	9
Stalk Roll Remote Control.....	9
Timing Stalk Rolls.....	10
Trash Knives.....	10
Snapping Bar.....	11
Conveyor Augers and Trash Mover.....	12
Roller Chains.....	13
Slip Clutch.....	13
Safety Suggestions.....	14
Safety Stand.....	14
Suggested Combine Settings for Combining Corn.....	14
Combine Cylinder Speeds and Main Drive Sprockets.....	15
LUBRICATION.....	16-18
PICKING DIFFICULTIES.....	19-20
REMOVING CORN ATTACHMENT.....	21-24
INSTALLING CORN ATTACHMENT.....	24-37
SERVICE.....	38-39
SPECIAL EQUIPMENT.....	40
ASSEMBLY.....	41-47

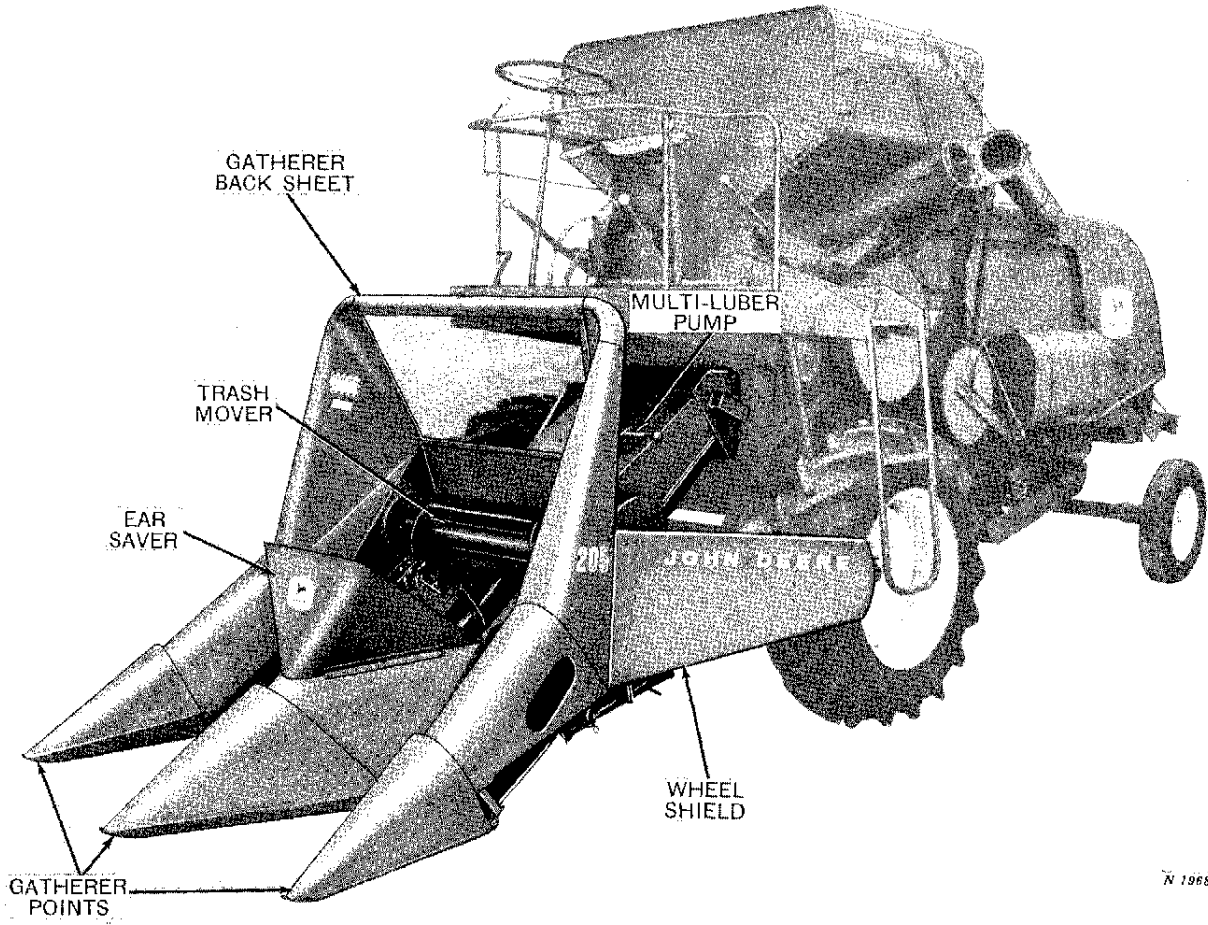

John Deere 205 Corn Attachment on 40 Self-Propelled Combine

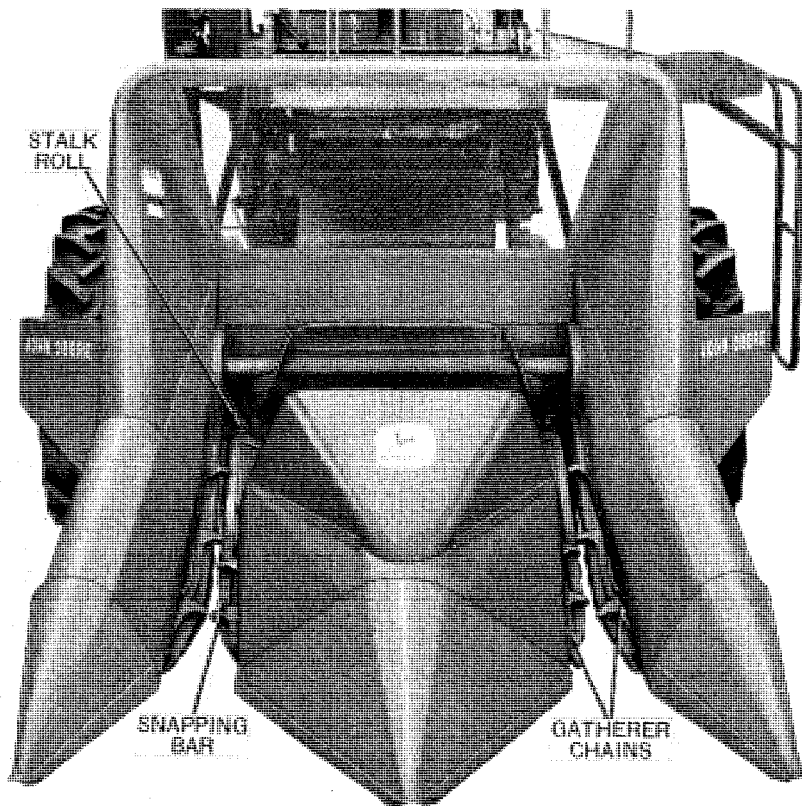

N 1969

John Deere 205 Corn Attachment on 40 Self-Propelled Combine

SPECIFICATIONS

Number of rows.....	2	Conveyor from gatherers to combine cylinder.....	Augers
Center-to-center distance between snapping units.....	40 inches	Over-all width (storage).....	5 feet 4-1/2 inches
Row widths handled.....	38 to 42 inches	Over-all width with wheel shields.....	8 feet 6 inches
Gatherer points.....	Hinged above gatherer chains	Over-all length (storage).....	9 feet 2 inches
Number of gatherer chains per snapping unit.....	2	Over-all length including 40 Combine.....	22 feet 10 inches
Type of gatherer chains.....	Steel roller chain	John Deere Combine required..	40, 42, or 45
Minimum clearance between gatherer chains and ground...	0 inch and up	Approximate shipping weight...	1150 lbs.
Distance gatherer chains ahead of fluted stalk rolls.....	8 inches		
Length of fluted stalk rolls.....	27-1/2 inches		
Fluted stalk roll adjustment....	Adjusting nut		
Snapping bar adjustment.....	Adjusting slots		

SPECIAL EQUIPMENT

Drive Chain Shields
 Auger Housing Divider
 Stalk Roll Remote Control Lever
 Wheel Shield for John Deere 42 Combine
 Platform Guard for 40 Combine

(Specifications and design subject to change without notice.)

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com