

John Deere 3010 Row-Crop and Standard Tractors



OPERATORS MANUAL

John Deere 3010 Row-Crop and Standard Tractors

OMR32385 I5 English



OMR32385 I5

LITHO IN U.S.A. ENGLISH



to the purchaser

Your versatile new John Deere Tractor meets the exacting requirements of modern farming.


Operating ease and comfort, hydraulic power when and where you need it, the ability to match engine power and transmission speed to any job, outstanding economy and dependability, modern styling, and simplicity of lubrication and service are all special features of this great tractor.

We are confident this modern tractor, combined with equally advanced John Deere tools and implements, will help you to farm better, easier, and more profitably.

At the time the tractor was delivered, the John Deere dealer discussed with you its safe operation and proper care. However, before putting the tractor to work, read this manual. It contains complete instructions for operating the tractor, caring for it, and taking full advantage of its many time- and labor-saving features. After reading the manual, keep it in a convenient place for quick and easy reference if questions arise concerning operation, lubrication, or service. The service policy which you received with your new tractor certifies that the tractor was properly inspected and prepared for delivery by your John Deere dealer. Keep this policy in a safe place and present it to the dealer whenever services which it authorizes are required.

Your John Deere dealer wants to help you get the most value from your tractor. His skilled servicemen can handle every job efficiently. These men are trained in modern service methods; they have all necessary tools and equipment. If new parts are needed, only genuine John Deere parts will be installed. These parts are exact duplicates of the originals, made from the same patterns and of the same high-quality materials.

When in need of new parts, be prepared to furnish your dealer with the engine serial number, the tractor chassis serial number, and the tractor model number. The location of the serial numbers is illustrated below. For ready reference, record the numbers in the spaces provided.

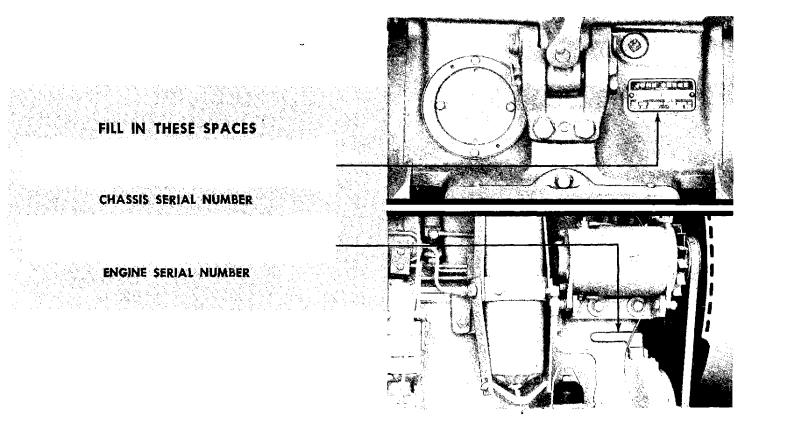




contents

- lubrication and periodic service 42
 - service 51
 - tractor storage 69
 - trouble shooting 70
 - index 77

- specifications 2
- controls and instruments 4
 - operation **6**
 - safety rules 35
 - fuels and lubricants 37

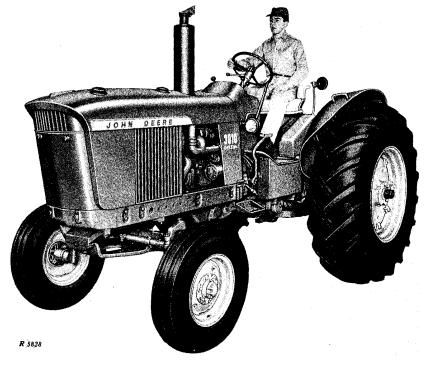

John Deere 3010 Standard Diesel Tractor




specifications

HORSE POWER: *	Diesel	Gasoline	LP-Gas
РТО	59.44 h.p.	55.60 h.p.	55.39 h.p.
Drawbar	54.54 h.p.	52.00 h.p.	50.25 h.p.
ENGINE:			
T ype	4-cylinder, in-line, valve-in-head		
Engine speeds:			
Idle for engine shutoff		420 rpm	500 rpm
Normal slow idle	600 rpm	650 rpm	650 rpm
Working range	1500 to 2200 rpm	1500 to 2200 rpm	1500 to 2200 rpm
Maximum transport speed	2500 rpm	2500 rpm	2500 rpm
Bore and stroke	4-1/8 in. x $4-3/4$ in.	4 in. x 4 in.	4 in. x 4 in.
Displacement	254 cu. in.	201 cu. in.	201 cu. in.
Compression ratio	16.5 to 1	7.5 to 1	9.0 to 1
Firing order	1-3-4-2	1-3-4-2	1-3-4-2
Intake valve clearance	0.018 in.	0.015 in.	0.015 in.
Exhaust valve clearance	0.018 in.	0.028 in.	0.028 in.
Injection pump timing	10° BTDC		
Distributor timing		20° BTDC	25° BTDC
Distributor point gap		0.022 in.	0.022 in.
Spark plug gap		0.025 in.	0.015 in.
Share had bed to the second second			
ELECTRICAL SYSTEM:			
Starter and generator voltage	24 volts	12 volts	12 volts
Lights and accessory voltage	12 volts	12 volts	12 volts
12-volt battery, 78-plate, 75 amp-hour	Two (connected in series)	One	One
···· // ······	•		

*Maximum observed horsepower at 2200 engine rpm (Nebraska Test Nos. 762 for diesel, 763 for gasoline, 764 for LP-Gas)

Specifications and design subject to change without notice.

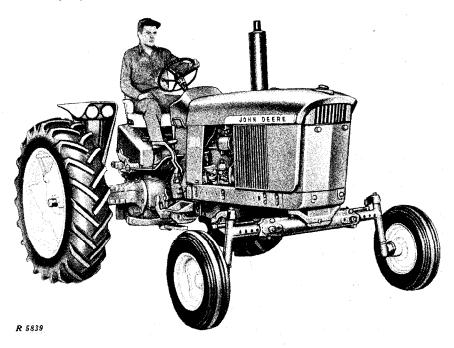

John Deere 3010 Row-Crop Gasoline Tractor (Adjustable Front Axle)

COOLING SYSTEM:
Type Pressurized with cen-
trifugal pump
Engine temperature control Heavy-duty thermostat
LUBRICATION SYSTEM: Force-feed pressurized
type with full-flow oil
filter
CAPACITIES:
Fuel tank Diesel and gasoline-29 U.S. gals.
LP-Gas-(80% full) 25 U.S. gals.
Crankcase:
When lubrication system is dry 9 U.S. qts.At service intervals 8 U.S. qts.
Hydraulic system:
When system is dry 11 U.S. gals.
At service intervals
Air cleaner Diesel-4 U.S. pints
Gasoline, LP-Gas-2-1/4 U.S. pints
Cooling system
Belt pulley 2-1/2 U.S. pints
TRANSMISSION:
Type
Gear selections
Shifting
ing within stations POWER TAKE-OFF:
Type Independent dual speed PTO
with front and rear power
take-off. Rear stub shafts
used for PTO speed conver-
sion
Speed (1900 engine rpm). Front-1000 rpm (see page 32)
Rear-540 or 1000 rpm
HYDRAULIC SYSTEM:
Type Closed center, constant pres-
sure. Includes power steering,
power brakes, implement con-
trol, and transmission-differ- ential lubrication
• •
BRAKES Hydraulically power actuated,
disk-type, operating in oil

specifications 3

GROUND SPEEDS:**

1st		 	 1-3/4 mph
2nd		 	 2-3/4 mph
3 r d		 	 3-1/2 mph
4th		 	 4-1/2 mph
5th		 	 5-1/2 mph
6th		 	 7-1/2 mph
7th		 	 9-1/4 mph
8th			15-1/4 mph
3rd reverse	e	 	 3-1/2 mph
5th reverse		 	 5-1/2 mph
7th reverse		 	 9- mph


FRONT WHEEL TREAD: See pages 12 and 13

REAR WHEEL TREAD	: See pages 1	4 and 16
	Row-Crop	Standard
FRONT TIRES:***	6.00-14, 6-ply	7.50-16, 6-ply
	6.00-16, 6-ply	
REAR TIRES:***	13.9-36, 6-ply	18.4-30, 6-ply
	13.6-38, 6-ply	
DIMENSIONS:		
Wheelbase	90 in.	81-1/2 or $92-3/4$ in.
Over-all length	138-1/2 in.	138-1/2 in.
Over-all height	86-5/8 in.	85-1/2 in.
Height to steer-		
ing wheel	74-1/2 in.	77-1/2 in.
Width (regular		
axle)	86-5/8 in.	86-5/8 in.
Turning radius	103-1/2 in.	110 in.

SHIPPING WEIGHT (With equipment for average field service, less fuel and ballast):

	Row Crop	Standard
Diesel	6003 lbs.	6436 lbs.
Gasoline	5807 lbs.	6240 lbs.
LP-Gas	5936 lbs.	6359 1bs.

Calculated at 1900 rpm engine speed only. For ground speeds at 1500 through 2500 rpm engine speeds, see page 11. *Additional tires available for special purposes.

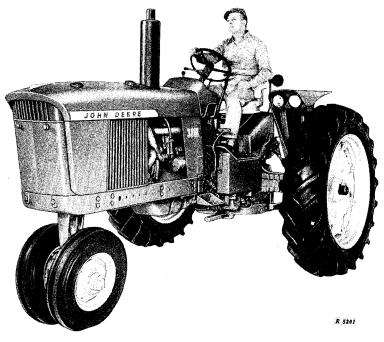

John Deere 3010 Row-Crop LP-Gas Tractor

Thank you so much for reading. Please click the "Buy Now!" button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email:

ebooklibonline@outlook.com