

**John Deere
4230
Tractor
(Serial No. 13,000-)**

 


OPERATORS MANUAL
John Deere 4230 Tractor (Serial No.
13,000-)

OMR65347 Issue J6 English

OMR65347 Issue J6

LITHO IN U.S.A.
ENGLISH





To the Purchaser

This new tractor was carefully designed and manufactured to give years of dependable service. To keep it running efficiently, read the instructions in this operator's manual. Each section is clearly identified so you can easily find the information you need—whether it is operation, lubrication and periodic service, or trouble shooting. Check the Contents to learn where each section is located. Use the alphabetical index for fast reference.



Worldwide graphic symbols are used to assist identification and operation. In this manual, an identifying symbol is placed by the instructions like the example at left for the symbol on the engine oil pressure gauge. The cylinder block in the symbol represents the engine, the drop signifies oil, and the arrows indicate pressure. Regardless of the language used in a nation, this symbol means engine oil pressure without translation.

Record your tractor serial numbers in the spaces provided on page 85. Your dealer needs this information to give you prompt, efficient service and parts. If your tractor requires replacement parts, go to your John Deere dealer where you can obtain genuine John Deere parts—accept no substitutes.

The warranty on this tractor appears on your copy of the purchase order which you should have received from your dealer when you purchased the tractor.

The references in this manual to the "right-hand" and the "left-hand" sides of the tractor are determined by facing in the direction of tractor forward travel.



This safety alert symbol indicates important safety messages in this manual. When you see this symbol, be alert to the possibility of personal injury and carefully read the message that follows.



Contents

	Page
SAFETY SUGGESTIONS	2
CONTROLS AND INSTRUMENTS	4
OPERATION	5
FUELS AND LUBRICANTS	49
LUBRICATION AND PERIODIC SERVICE	51
SERVICE	62
TRACTOR STORAGE	75
TROUBLE SHOOTING	77
SPECIFICATIONS	83
INDEX	86



R 19167

John Deere 4230 Tractor



Safety Suggestions

! Most machinery accidents are caused by careless or improper use. Guards, shields, and other safety features are built into the tractor, but it still takes caution to prevent accidents.

Keep a first-aid kit and a fire extinguisher handy in case of emergencies. Know how to use them, and see that they are properly maintained.

Keep sleeves and other clothing snug-fitting. Loose clothing can easily catch in moving parts.

SOUND-GARD BODY, ROLL-GARD, AND SEAT BELT

A protective Roll-Gard is built into every Sound-Gard Body. A tractor without cab may be equipped with either a two-post Roll-Gard or a four-post Roll-Gard with canopy.

Under almost all operating conditions, you should use a seat belt if the tractor has a Roll-Gard. **DO NOT** use a seat belt if tractor does not have rollover protection.

For an emergency exit, Sound-Gard Body windows can be opened. Remove the quik-lock pins and headed pins from window latches, and push window wide open.

Sound-Gard Body air filters are not designed to filter out harmful chemicals. When using agricultural chemicals, follow the instructions given in the implement operator's manual and those given by the chemical manufacturer.

OPERATION


Never attempt to start or operate the tractor except from the operator's station.

Never allow riders on the tractor.

To avoid exhaust gas hazards, never run the engine in a closed building.

Before descending a steep hill, shift to a low gear to control the tractor with little or no braking. Never coast downhill.

Avoid holes, ditches, etc. which may cause the tractor to tip, especially on hillsides.

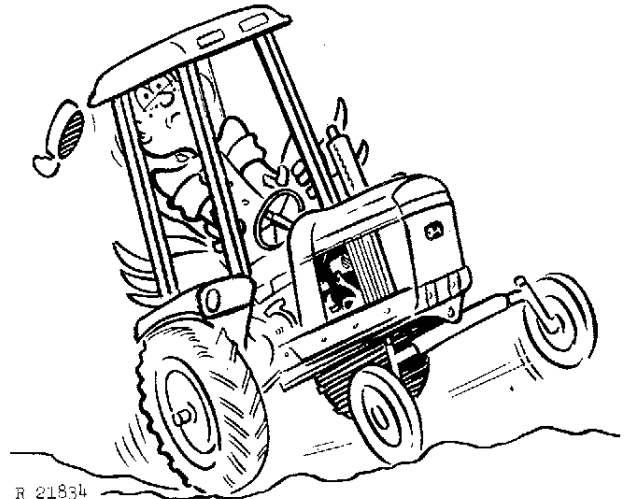

Slow down for hillsides, rough ground, and sharp turns. Couple the brake pedals together before driving at transport speeds.

A towed load of more than 16,000 lbs. (7000 kg) should have brakes. If it does not, drive slowly and avoid hills. Avoid hard applications of the brakes when pulling heavy loads.

Hitch heavy towed loads only to the drawbar. When using a chain, take up the slack slowly.

Never drive near the edge of a gully or steep embankment—it might cave in.

Don't drive forward out of a ditch or up a steep slope. Drive backward out of these situations if at all possible.

Before dismounting, place the transmission in park, lower implements to the ground, and stop the engine.

Never try to get on or off a moving tractor.

Never tow the tractor faster than 20 mph (32 km/h).

POWER TAKE-OFF

Stop the engine and be sure the PTO has stopped before:

- Connecting or disconnecting a PTO shaft
- Making any adjustment to PTO drive train or hitch
- Cleaning out PTO driven equipment.



R 21828

PTO master shield should be in place at all times except when connecting a PTO drive line or for special applications as directed in the operator's manual.

The PTO shaft guard should be in place when the PTO is not being used.

LIGHTS

When operating the tractor on a road, turn the light switch to the "H" position. This turns on headlights, taillights, and warning lights. Be sure the SMV emblem is visible and clean.

If flashing lights are prohibited by local regulations, be sure the flasher for warning lamps is disconnected.

See your John Deere dealer if additional safety devices are needed for towed or mounted equipment.

Always dim the headlights before meeting another vehicle. Keep the lights adjusted so they will not blind another driver.

SERVICING

Do not service the tractor or implement while it is in motion or while the engine is running unless specifically recommended.

Keep all equipment properly serviced to prevent safety hazards. Keep all bolts tight, and replace worn or damaged parts.

Do not remove the radiator cap when the engine is hot. Shut the engine off and wait until it cools. Then turn the cap to the first stop to relieve pressure before removing it completely.

Be careful with starting fluid or any type of fuel. Do not refuel the tractor when the engine is hot or running. Never smoke while handling fuel or servicing the fuel system.

Disconnect the battery ground cable before working on the electrical system or working in any area where you might accidentally contact electrical components. This minimizes the risk of sparks, burns, accidental starter operation, or damage to the system.

Before using booster batteries, read the instructions on page 8. Before connecting or disconnecting a battery charger, turn the charger off to avoid sparks.

HYDRAULICS

Hydraulic oil or diesel fuel escaping under pressure can penetrate the skin, causing serious injury. Before disconnecting lines, be sure to relieve all pressure. Before applying pressure, be sure all connections are tight and all components are in good condition.

Fluid escaping from a very small hole can be almost invisible. Use a piece of cardboard or wood, rather than hands, to search for suspected leaks.

If injured by escaping fluid, see a doctor at once. Serious infection or reaction can develop if proper medical treatment is not administered immediately.

Before disconnecting the brake accumulator or brake valve, relieve all pressure in the accumulator. With the engine stopped, pump the brake pedals at least 50 strokes.

The accumulator is charged with dry nitrogen at a pressure of 35 bar (500 psi). If it needs to be recharged, have the job done only by a qualified serviceman and only with dry nitrogen.

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com