

5310N and 5510N Narrow Tractors

**John Deere Augusta
OMRE71739 Issue J7**

**North American Edition
LITHO IN U.S.A.
ENGLISH**

Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages. (See your John Deere dealer to order.)

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction of forward travel.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification or Identification Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. File

the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

THE TIRE MANUFACTURER'S warranty supplied with your machine may not apply outside the U.S.

CALIFORNIA PROPOSITION 65 WARNING

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects and other reproductive harm.

IDENTIFICATION VIEWS



-UN-02SEP97

LV1966

John Deere 5310N Tractor—Open Station



-UN-02SEP97

LV1967

John Deere 5510N Tractor—Cab

Contents

	Page		Page
Safety	05-1	Prestarting Checks	40-1
Safety Signs	10-1	Operating the Engine	
Controls and Instruments	15-1	Before Starting the Engine	45-1
Lights		Starting the Engine	45-3
Light Switch Positions	20-1	Check Instruments After Starting	45-4
Using Head Lamps	20-1	Oil Pressure Indicator	45-4
High Beam Indicator	20-2	Charging System Indicator	45-4
Using Tail Lamp	20-2	Air Restriction Indicator	45-5
Rear Flood Lamp—Open Station		Coolant Temperature Gauge	45-5
Using	20-3	Watch Fuel Level	45-5
Adjusting	20-3	Changing Engine Speeds	45-5
Using Flood Lamps—Cab	20-4	Warming Up the Engine	45-6
Using Warning Lamps		Restart Stalled Engine	45-7
Open Station	20-5	Avoid Idling the Engine	45-7
Cab	20-6	Observe Engine Work and Idle Speeds	45-7
Using Turn Signals	20-7	Work With Speed/Hour Meter	45-8
Seven-Terminal Outlet (If Equipped)	20-8	Stopping the Engine	45-8
Operator's Platform (Open Station)		Cold Weather Starting Procedure	45-9
Operating Foldable ROPS	25-1	Using Booster Battery	45-10
Using Seat Belt	25-2	Driving the Tractor	
Selecting Seat Position	25-2	Operator Training Required	50-1
Adjusting Ride Comfort	25-3	Avoid Contact With Pesticides	50-1
Operator's Station (Cab)		Driving On Public Roads	50-2
Using Seat Belt	30-1	Use Caution On Hillsides	50-4
Selecting Seat Position	30-1	Observe Maximum Travel Speeds	50-5
Adjusting Ride Comfort	30-2	Selecting a Gear	50-5
Adjusting Blower Speed	30-2	Shifting Transmission	50-6
Controlling Temperature	30-3	Using Brakes	50-7
Operating Wiper(s)	30-3	Using Differential Lock	50-7
Accessory Electrical Outlet	30-3	Operating Front-Wheel Drive	50-8
Radio	30-4	Stopping the Tractor	50-8
Using Dome Lamp	30-4	Rockshaft and 3-Point Hitch	
Storage Compartment	30-4	Match Tractor Power to Implement	55-1
Break-In Period	35-1	3-Point Hitch Components	55-1
		Rockshaft Control Levers	55-2
		Using Rockshaft Position Control	55-2
		Setting Position Control Lever Stop	55-4

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OMRE71739 J7-19-03OCT97

COPYRIGHT© 1997
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION Manual

Contents

	Page		Page
Using Draft Control	55-5	Using Implement Codes	70-9
Adjusting Rockshaft Speed-of-Drop	55-6	Wheels, Tires and Treads	
Preparing Implement	55-6	Service Tires Safely	75-1
Converting Hitch Category	55-7	Check Implement-to-Tire Clearance	75-1
Positioning Draft Link Ends	55-8	Tire Inflation Pressure	
Positioning Center Link	55-9	Check	75-2
Attaching Implements	55-10	Chart	75-3
Adjusting Sway Blocks	55-11	Selecting Front Tire Rolling Direction	75-4
Leveling the Hitch	55-11	Tighten Wheel/Axle Hardware Correctly	75-4
Adjusting Rockshaft Control Lever Friction.	55-13	Tighten Hardware	
Warming Hydraulic System Oil	55-13	Adjustable Front Axle	75-5
		MFWD Axle	75-5
		Rear Axle	75-5
Remote Hydraulic Cylinders		Observe Rear Wheel Tread Width	
Use Correct Hose Tips	60-1	Limitations	75-6
SCV Control Lever and Coupler		Tread Settings	
Identification	60-1	Two-Position Rear Wheels	75-6
Installing Remote Outlet Oil Manifolds		Multi-Position Rear Wheels	75-7
(Optional)	60-2	Two-Position MFWD Wheels	75-9
Connecting Cylinder Hoses	60-3	Adjustable Front Axle	75-10
Operating SCV Controls	60-5	Adjusting Front Axle Tread Width	75-11
Adjusting Cylinder Stop	60-5	Toe-In	
Power Beyond Connections	60-6	Checking Two-Wheel Drive Tractor	75-11
Disconnecting Cylinder Hoses	60-7	Adjusting Two-Wheel Drive Tractor	75-12
		Checking MFWD Tractor	75-12
		Adjusting MFWD Tractor	75-13
Drawbar and PTO		Setting Steering Stops	
Observe Drawbar Load Limitations	65-1	Adjustable Front Axle	75-13
Selecting Drawbar Position	65-1	MFWD Axle	75-14
Adjusting Drawbar	65-2	Use Correct Tire Combinations	75-14
Attaching PTO-Driven Implement	65-2	Tire Compatibility Chart	75-15
Selecting Correct PTO Speeds	65-4		
Operating Tractor PTO	65-4	Transporting	
Adjusting PTO Clutch Operating Rod	65-5	Use Safety Lights and Devices	80-1
		Use a Safety Chain	80-1
		Observe Maximum Travel Speeds	80-2
		Driving Tractor On Roads	80-3
		Transport On Carrier	80-7
		Towing Tractor	80-7
Ballast			
Planning for Maximum Productivity	70-1	Fuels, Lubricants, and Coolant	
Selecting Ballast	70-1	Fuel Storage	85-2
Matching Ballast to Load Work	70-1	Cold Weather Operation	85-2
Checking for Correct Ballast	70-2	Diesel Fuel	85-3
Measuring Wheel Slip (Manually)	70-3	Fill Fuel Tank	85-4
Ballast Limitations	70-4	Alternative and Synthetic Lubricants	85-5
Ballasting		Lubricant Storage	85-5
Front End for Transport	70-4	Diesel Engine Oil	85-6
Two-Wheel Drive Tractors	70-5	Oil Filters	85-6
MFWD-Equipped Tractors	70-5	Diesel Engine Coolant	85-7
Determining Maximum Ballast			
Rear	70-6		
Front	70-6		
Using Cast Iron Weights	70-7		
Installing Rear Cast Iron Weights	70-7		
Using Liquid Weight	70-8		

Continued on next page

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com