

4555, 4755, and 4955 Tractors

**John Deere Waterloo Works
OMRW25630 Issue K9
(This manual replaces OM-RW25630 A9)**

LITHO IN U.S.A.
ENGLISH

Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage.

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are U.S. customary units and their metric equivalents.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction of forward travel.

WRITE PRODUCT IDENTIFICATION NUMBERS in the Identification Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. If this manual is kept on the machine, also file the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

THE TIRE MANUFACTURER'S warranty supplied with your machine may not apply outside the U.S.



RW14410
-JUN-07DEC88

RX,25630,IFC -19-01SEP89

Contents

	Page		Page
Safety	05-1	Operating the Tractor	
Safety Signs	10-1	Brakes	45-1
Controls and Instruments		Differential Lock	45-2
Control Location	15-1	Power Shift Transmission	45-3
Instrument Location	15-1	QUAD-RANGE™ Transmission	45-6
Indicator Description	15-3	Mechanical Front-Wheel Drive (MFWD)	45-10
Tachometer	15-5	Rockshaft and Three-Point Hitch	
Performance Monitor	15-9	Component Identification	50-1
Radar	15-16	Rockshaft Controls	50-1
Lighting and Signals		Rockshaft Control Lever	50-5
Switch	20-1	Rate-of-Drop	50-6
Lamps	20-1	Rockshaft Raise/Lower Limit Switch	50-8
Electrical Outlets	20-3	Rockshaft System Troubleshooting	50-10
Operator's Station		Sway Blocks	50-11
SOUND-GARD® Body Temperature		Hitch Conversion	50-12
Controls	25-1	Attaching Implement Hitch	50-15
Window Wipers and Washers	25-2	Adjusting Implement Level	50-17
Windows	25-3	Removing Implement	50-18
Radio	25-4	Remote Hydraulic Cylinders	
Tape Player	25-6	Hose Tips	55-1
Seat Belt	25-7	Identifying SCV	55-1
Seat	25-7	Connecting Cylinder Hoses	55-2
Steering Wheel	25-11	Operating SCV	55-4
Engine Break-in	30-1	Setting Remote Cylinder Stroke	55-6
Prestarting Checks	35-1	Disconnecting Cylinder Hoses	55-7
Operating the Engine		Adjusting SCV Linkage	55-8
Start-up Procedure	40-1	Drawbar and PTO	
Cold Weather Starting	40-5	Drawbar Adjustments	60-1
Starting Aids	40-5	ower Take-Off (PTO)	60-4
Booster Battery	40-9	Ballast	
Warm-Up and Operation	40-10	Importance of Ballast	65-1
Stopping the Engine	40-13	Measuring Wheel Slip	65-2
		Rear Ballast	65-4
		Front Ballast	65-7
		Installing QUIK-TATCH™ Weights	65-10

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OMRW25630 K9-19-04MAR02

COPYRIGHT© 1989
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION™ Manual

Contents

	Page		Page
Wheels, Tires and Treads		Brakes	
Wheel Tightening	70-1	Rockshaft 3-Point Hitch	125-5
Front Wheel Tread Settings	70-3	Remote Hydraulic Cylinders	125-6
Toe-in	70-4	Electrical	125-8
Toe-in (MFWD)	70-5	SOUND-GARD Body	125-10
Rear Wheel Spacing	70-7		
Dual Wheels	70-20	Service	
Hub Extensions	70-21	Access	130-1
Bolt-on Duals	70-22	Air Cleaner	130-4
Tire Pressures	70-23	Belts	130-7
MFWD Wheel Spacing	70-24	Fuel System	130-9
Steering Stops	70-26	Cooling System	130-12
Front Fender Adjustment	70-29	Electrical	130-18
Tire Combinations	70-33	Fuses	130-22
		Lighting	130-23
Transporting		Starter	130-28
Driving	75-1	Alternator	130-28
Carrier	75-4	Brakes	130-29
Towing	75-4	Tires	130-30
		Heating and Air Conditioner	130-32
Fuels, Lubricants and Coolant		ROPS	130-35
Fuel	80-1		
Engine Oil	80-4	Storage	
Engine Coolant	80-5	Placing Tractor in Storage	135-1
Transmission-Hydraulic Oil	80-6	Short-Term Idle Periods	135-4
Lubricants	80-7	Removing Tractor From Storage	135-4
Lubrication and Maintenance		Crime Prevention Tips	140-1
First 100 Hours	85-2		
		Specifications	
Lubrication and Maintenance/10 Hour	90-1	General	145-1
		Ground Speeds	145-5
Lubrication and Maintenance/250 Hour	95-1		
		Identification Numbers	150-1
Lubrication and Maintenance/750 Hour	100-1		
		Daily Maintenance	155-1
Lubrication and Maintenance/1500 Hour	105-1		
		Lubrication and Maintenance Records	160-1
Lubrication and Maintenance/Annual	110-1		
		Index	
Lubrication and Maintenance/2 Year	115-1		
Lubrication and Maintenance/As Required	120-1		
Troubleshooting			
Engine	125-1		
Transmission	125-4		
Hydraulic System	125-5		

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.



O53,ALERT -19-16JUN87

T81389 -UN-07DEC68

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

Safety signs with signal word DANGER or WARNING are typically near specific hazards.

General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



O53,SIGNAL -19-07OCT85

-19-30SEP88


TS187

FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

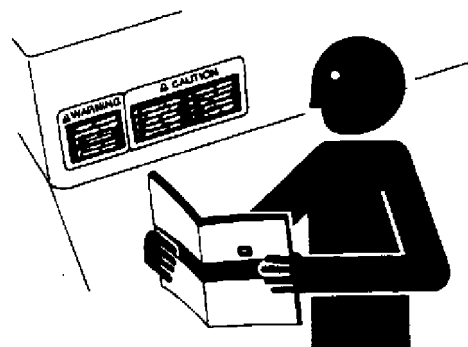

O53,READ -19-23APR87

-UN-23AUG88

TS201

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com