

# **544E, 544E LL, AND 544E TC LOADERS 624E LOADER 644E LOADER**



**JOHN DEERE**

## **OPERATORS MANUAL**

**544E, 544E LL, AND 544E TC  
LOADERS 624E LOADER 644E  
LOADER**

OMT131709 G1 English

**JOHN DEERE DUBUQUE WORKS  
OMT131709 G1**

LITHO IN THE U.S.A.  
ENGLISH



# Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage.

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.


RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction of forward travel.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Machine Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

THE TIRE MANUFACTURER'S warranty supplied with your machine may not apply outside the U.S.

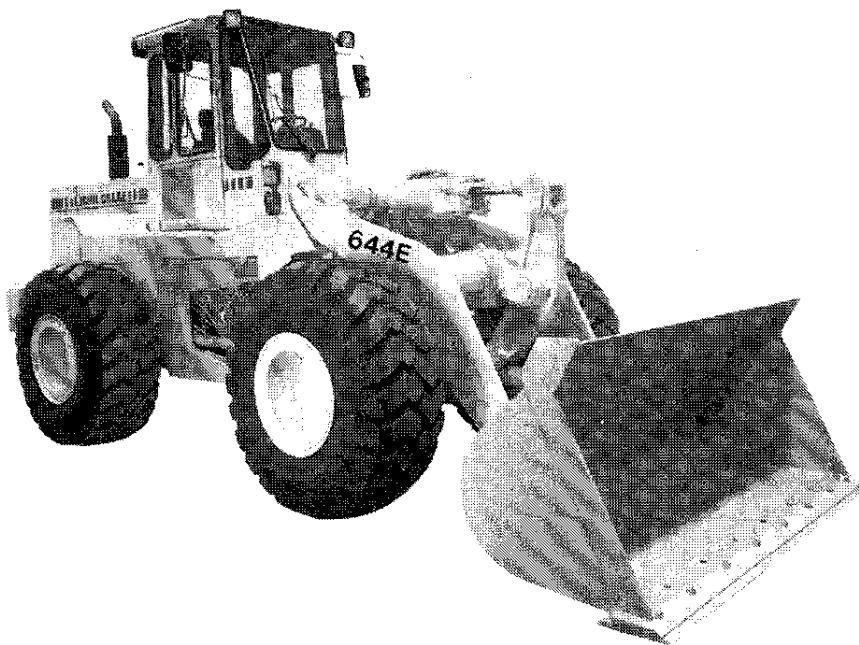

T6570AP2  
-JUN-20OCT88


**CALIFORNIA PROPOSITION 65 WARNING**  
Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects and other reproductive harm.




T6793AT -JUN-19OCT88



T6795CC -JUN-19OCT88

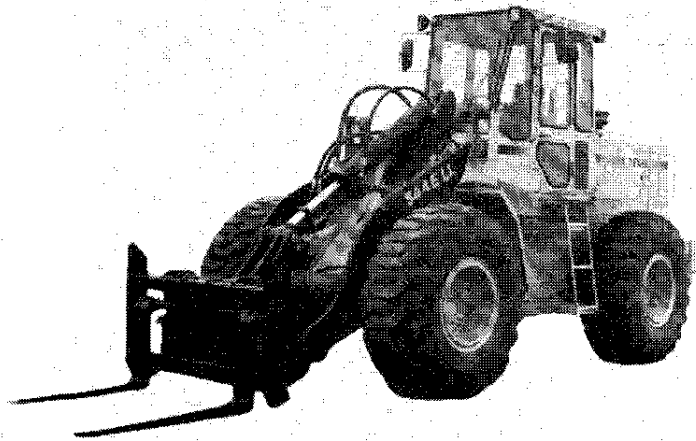

T6978AC -UN-27FEB89

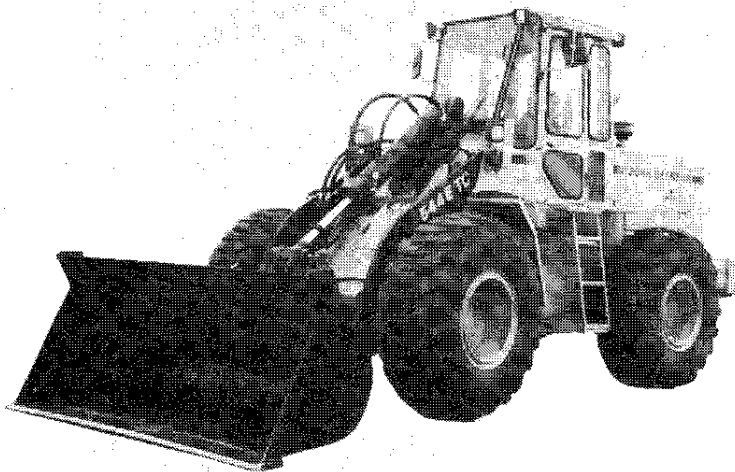

T6978AD -UN-27FEB89

# Contents

	Page		Page
<b>Safety</b>			
<b>Safety Signs</b> . . . . .	06-1	Control Lever—544E TC . . . . .	35-3
<b>Operator's Station</b>		Pin Disconnect Switch—544E TC . . . . .	35-4
Gauges, Indicators, Switches and		Boom Down Switch . . . . .	35-4
Accessories . . . . .	10-1	Clutch Cut-off Switch . . . . .	35-5
Levers . . . . .	10-6	Secondary Steering . . . . .	35-6
Pedals . . . . .	10-7	Differential Lock Switch . . . . .	35-6
Front Axle Disconnect Lever . . . . .	10-8	Boom Height Kickout . . . . .	35-7
Neutral Lock Lever . . . . .	10-8	Return-To-Dig . . . . .	35-8
Dome Light . . . . .	10-8	Operating Tips . . . . .	35-9
Vandal Shield . . . . .	10-9	Truck Loading . . . . .	35-10
Operator's Manual Holder . . . . .	10-9	Excavating . . . . .	35-10
Windshield Wiper and Washer . . . . .	10-10	Filling . . . . .	35-11
Steering Wheel . . . . .	10-10		
Windows . . . . .	10-10	<b>Transporting</b>	
Lights . . . . .	10-12	Trailer Loading . . . . .	40-1
Heating and Air Conditioning . . . . .	10-13	Towing . . . . .	40-3
Seat . . . . .	10-13		
<b>Break-in</b> . . . . .	15-1	<b>Fuels and Lubricants</b>	
<b>Pre-Start Inspection</b> . . . . .	20-1	Fuel . . . . .	45-1
<b>Operating the Engine</b>		Engine Oil . . . . .	45-3
Before Starting . . . . .	25-1	Transmission Oil . . . . .	45-4
Brake Pressure Indicator . . . . .	25-1	Hydraulic System Oil . . . . .	45-5
Warm-Up . . . . .	25-6	Differential Oil . . . . .	45-6
Stopping the Engine . . . . .	25-7	Grease . . . . .	45-7
<b>Driving the Machine</b>		<b>Periodic Maintenance</b>	
Driving . . . . .	30-1	Service Intervals . . . . .	50-1
Shifting the Transmission . . . . .	30-3	Hour Meter . . . . .	50-1
Stopping the Machine . . . . .	30-4	Fuels and Lubricants . . . . .	50-1
Parking . . . . .	30-6	Prepare Machine for Maintenance . . . . .	50-2
<b>Operating the Machine</b>		Side Shields and Service Doors . . . . .	50-3
Boom and Bucket Control Lever . . . . .	35-1	Grille Door . . . . .	50-4
		Locking Machine Frame . . . . .	50-4
		Check Windshield Washer Fluid Level . . . . .	50-5
		Maintenance and Repair Record Keeping	
		System . . . . .	50-5
		<b>Maintenance—As Required</b>	
		Check Tire Pressure . . . . .	55-1

Continued on next page

*All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

OMT131709 G1-19-25JUL91

COPYRIGHT® 1991  
DEERE & COMPANY  
Moline, Illinois  
All rights reserved  
A John Deere ILLUSTRATION™ Manual  
Previous Editions  
Copyright® 1989 Deere & Company

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)