

862B SCRAPER (SERIAL NO. 735855-)



JOHN DEERE

OPERATORS MANUAL 862B SCRAPER (SERIAL NO. 735855-)

OMT134623 D0 English

**JOHN DEERE DUBUQUE WORKS
OMT134623 D0**

LITHO IN THE U.S.A.
ENGLISH



READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage.

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.



THIS MACHINE IS OF METRIC design. Measurements in this manual are metric with the customary U.S. measurement following. Use only metric hardware and tools as specified.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction of forward travel.


WRITE PRODUCT IDENTIFICATION NUMBERS in the Machine Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. If this manual is kept on the

machine, also file the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

THE TIRE MANUFACTURER'S warranty supplied with your machine may not apply outside the U.S.

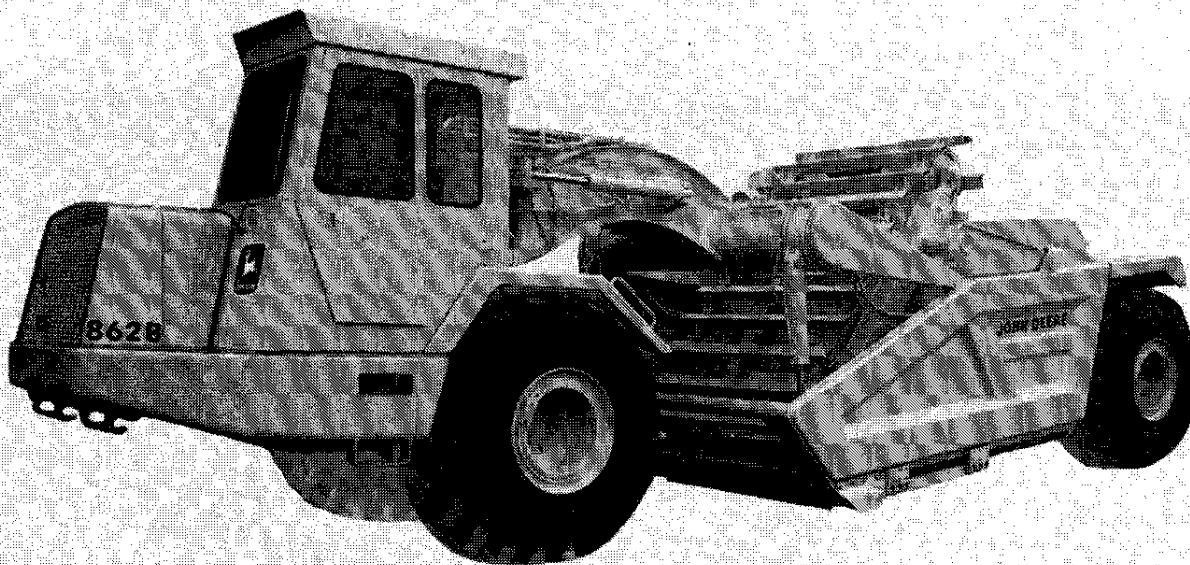

T6213AUB -UN-02NOV88

Contents

	Page		Page
Safety	05-1	Prepare Machine for Maintenance	50-2
Safety Signs	06-1	Maintenance Records	50-6
Operator's Station		Maintenance-As Required	
Instrument Panel	10-1	Drain Fuel Tank Sump	55-1
Controls and Pedals	10-5	Drain Water Separator Fuel Filter	55-1
Light System	10-7	Clean Cab Recirculating and Fresh Air Filters	55-2
Break-In	15-1	Check Fan and Alternator Belt Tension	55-3
Pre-Start Inspection	20-1	Adjust Fan Belt Tension	55-3
Operating the Engine		Adjust Alternator Belt Tension	55-4
Starting	25-2	Check and Adjust Compressor Belt Tension	55-4
Stopping	25-10	Check Injection Pump Sediment Bowl and Filter	55-5
Driving the Scraper		Check Air Filter Restriction Indicator	55-5
Travel Speeds	30-1	Changing Air Cleaner Elements	55-6
Parking	30-3	Check Axle Suspension Accumulator	55-8
Operating the Scraper		Check Elevator Chain Tension	55-8
Control Levers	35-1	Adjusting Elevator Chain Tension	55-9
Differential Lock Pedal	35-3	Check Tire Pressure	55-10
Automatic Transmission	35-3	Maintenance-Every 10 Hours or Daily	
Manual Transmission	35-8	Check Engine Oil Level	60-1
Operating Tips	35-9	Check Coolant Level	60-1
Transporting	40-1	Check Hydraulic Oil Level	60-2
Fuels and Lubricants		Lubricate Axle Suspension Pivots	60-3
Fuel	45-1	Lubricate Hitch, Steering Links, and Cylinder Pivots	60-3
Engine Oil	45-2	Lubricate Lift Cylinder Pivots	60-4
Hydraulic, Transmission, Elevator, Drive Axle Oil	45-3	Lubricate Draft Frame and Elevator Pivots	60-4
Grease	45-4	Lubricate Sliding Floor Side Rails	60-4
Periodic Maintenance		Lubricate Sliding Floor Lever and Cylinder Pivots	60-5
Periodic Maintenance Chart	50-1	Maintenance-Every 50 Hours	
		Check Transmission Oil Level	65-1
		Check Drive Axle Oil Level	65-2

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OMT134623 D0-19-21MAR90

COPYRIGHT© 1990
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION Manual
Previous Editions
Copyright© 1987, 1986 Deere & Company

Contents


	Page		Page
Maintenance-Every 250 Hours		Operational Checkout	
Change Engine Oil and Filters	75-1	Gauge and Monitor Checks	95-2
Check Elevator Gearbox Oil Level	75-2	Transmission Control Checks	95-3
Maintenance-Every 500 Hours		Park Brake, Fuel System, Tachometer, Hour Meter Checks	95-5
Change Water Separator Fuel Filter	80-1	Brake System Checks	95-7
Lubricate Axle Drive Shaft	80-2	Steering System Checks	95-9
Change Drive Axle Oil Filter	80-3	Driving Checks	95-11
Change Transmission Oil Filter	80-4	Hydraulic System Checks	95-13
Lubricate Drive Axle Outer Bearings	80-5	Axle Suspension System Checks	95-15
Check Air Intake Hoses	80-5	Accessory Checks	95-16
Change Hydraulic and Elevator Filters	80-7	Cab Components Check	95-18
Check Brake Accumulator	80-8	Miscellaneous Checks	95-19
Check Brake Solenoid Valve	80-9	Troubleshooting	100-1
Add Coolant Conditioner to Radiator	80-9	Storage	105-1
Change Fuel Filters	80-10	Crime Prevention Tips	110-1
Check Battery Electrolyte Level and Terminals	80-11	Specifications	115-1
Lubricate Transmission Drive Shaft	80-12	Machine Numbers	120-1
Tighten Oscillation Hitch Pivot Cap Screws	80-13		
Maintenance-Every 1000 Hours			
Check Upper Elevator Cross Shaft Bearing Oil Level	85-1		
Clean, Pack, and Adjust Center Idler Bearings	85-1		
Clean, Pack, and Adjust Lower Elevator Idler Bearings	85-3		
Change Drive Axle Oil	85-4		
Clean Engine Crankcase Ventilation Tube	85-5		
Adjust Engine Valve Lash (Clearance)	85-5		
Engine Speeds	85-7		
Adjusting Engine Speed Linkage	85-8		
Change Transmission Oil	85-8		
Lubricate Elevator Motor and Gearbox Splines	85-9		
Change Elevator Gearbox Oil	85-9		
Clean, Pack, and Adjust Rear Wheel Bearings	85-10		
Maintenance-Every 2000 Hours			
Change Hydraulic Reservoir Oil	86-1		
Maintenance			
Cooling System	90-1		
Fuel System	90-4		
Electrical System	90-6		
Miscellaneous	90-15		
Torque Values	90-28		

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

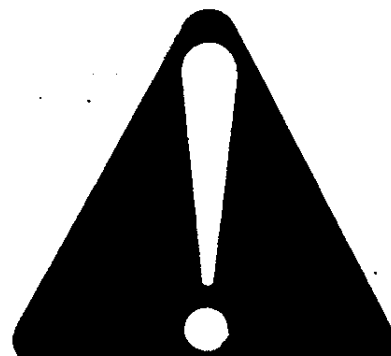

O53,ALERT -19-26JAN90

T81389 -UN-07DEC88

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

Safety signs with signal word DANGER or WARNING are typically near specific hazards.

General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



O53,SIGNAL -19-26JAN90


TS187 -19-30SEP88

FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

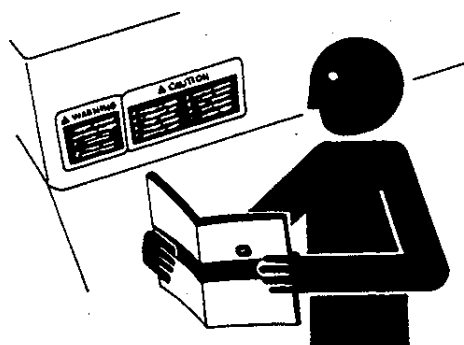

O53,READ -19-26JAN90

TS201 -UN-28AUG88

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com