

115 REAR BLADE



OPERATORS MANUAL 115 REAR BLADE

OMW21330 E4 English

WELLAND WORKS OMW21330 E4

> LITHO IN THE U.S.A. ENGLISH





To the Purchaser

This new blade was carefully designed and manufactured to give years of dependable service. To keep it operating efficiently, read the instructions in this operator's manual. Each section is clearly identified so you can easily find the information you need. Read the Table of Contents to learn where each section is located.

In addition to the equipment furnished with your new blade, attachments are available to help you do a better job in special blading conditions. These are described in the Operation section of this manual and can be purchased from your John Deere dealer.

"Right-hand" and "left-hand" sides are determined by standing at the rear of the blade facing the direction of forward travel. Record your 115 Blade serial number in the space provided on page 12. Your dealer needs this information to give you prompt, efficient service when you order parts or attachments. If your blade requires replacement parts, go to your John Deere dealer where you can obtain Genuine John Deere parts—accept no substitutes.

The warranty on this blade appears on your copy of the purchase order which you should have received from your dealer when you purchased the blade.


This safety alert symbol identifies important safety messages in this manual. When you see this symbol, be alert to the possibility of personal injury and carefully read the message that follows.





Contents

Page	Page
OPERATION 2 - 6	LUBRICATION 8
Preparing Tractor	
Attaching Blade to Tractor 2 - 3	SERVICE
Detaching Blade from Tractor 3	
Blade Adjustment	ASSEMBLY
Blade Controls 5 - 6	Hydraulic Offset Attachment
Blade Operations	Hydraulic Tilt Attachment
Transporting6	
	SPECIFICATIONS12
SAFETY SUGGESTIONS 7	

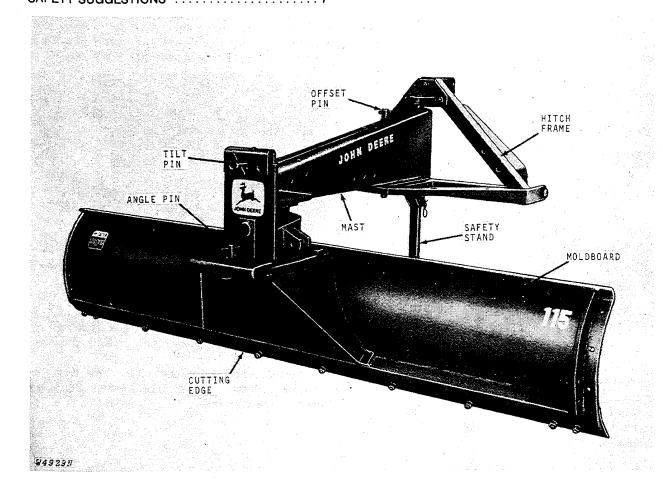



Operation

PREPARING THE TRACTOR

The 115 Rear Blade has a 100-horsepower rating and may therefore be used on any John Deere Tractor not larger than the 4230.

For complete tractor operating instructions, refer to your tractor operator's manual.


Tire Inflation

Inflate the tractor tires as shown in the tractor operator's manual for a light rear-mounted implement.

Ballast

For front end weighting and rear wheel weighting information, see your tractor operator's manual.

Sway Blocks

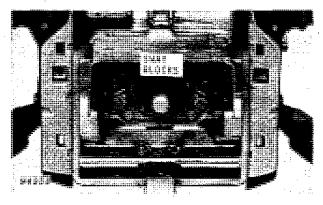

Sway blocks control 3-point hitch side motion. Install sway blocks in the downward position with the narrow flat edge facing the drawbar support as shown above. This will eliminate implement side sway in both the working and transport positions. Sway block shims are available from your John Deere dealer if required.

IMPORTANT: Be sure that draft links do not bind on the sway blocks.

ATTACHING BLADE TO TRACTOR


The 115 Rear Blade is a category 2 implement.

Attaching Draft Links

To attach draft links, back up the tractor until the draft links of the 3-point hitch are approximately in line with the blade hitch pins.

Place the transmission in "Park".

Place the rockshaft selector lever in the depth control position (see page 5) and lower the draft links as required by means of the rockshaft control lever.

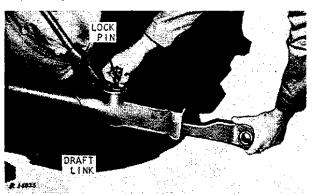

Pull up on the lock pins on the draft links and extend the telescoping draft links.

Raise the draft link ends by hand and place the hitch pins through the blade hitch and draft link, and lock with spring locking pins.

Lock the telescoping draft links in the operating position by backing up the tractor while raising and lowering the draft links.

Thank you so much for reading. Please click the "Buy Now!" button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email: ebooklibonline@outlook.com