

4435 Combine



JOHN DEERE

OPERATORS MANUAL

4435
Combine

OMZ91908 A9 English

OMZ91908 A9

LITHO IN U.S.A.
ENGLISH



Introduction

READ THIS MANUAL CAREFULLY to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage.



This safety alert symbol identifies all the important safety messages in this manual. When you see this symbol, be alert to the possibility of personal injury and carefully read the message that follows.

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

ALL MEASUREMENTS in this manual are given in SI metric units followed immediately by the U.S. customary units.

RIGHT-HAND AND LEFT-HAND SIDES are determined by facing in the direction the combine will travel when in use.

WRITE PRODUCT IDENTIFICATION NUMBERS in the Identification Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. If this manual is kept on the machine, also file the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

THE TIRE MANUFACTURER'S warranty supplied with your machine may not apply outside the U.S. and Canada.

All information, illustrations, and specifications contained in this operator's manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT © 1989 DEERE & COMPANY
European Office Mannheim:
All rights reserved
A John Deere ILLUSTRATION™ Manual

Contents

| | | | |
|---|-------------|--|------------|
| IDENTIFICATION VIEWS | 00-5 | COMBINE OPERATION AND FIELD | |
| SAFETY RULES | 05- | ADJUSTMENTS | 20- |
| – General | 05-1 | Pre-starting checks | 20-1 |
| – Operation | 05-4 | – Daily checks on combine | 20-1 |
| – Service | 05-9 | – Engine oil | 20-1 |
| – Warning decals | 05-14 | – Coolant | 20-1 |
| CONTROLS AND INSTRUMENTS | 10- | – Hydraulic oil | 20-1 |
| – Miscellaneous controls | 10-1 | – Hydrostatic oil | 20-2 |
| – Operator's platform – controls | 10-2 | – Fuel | 20-2 |
| – Controls and instruments | 10-4 | – Fire extinguisher | 20-4 |
| – Concave clearance indicator | 10-6 | Operating the engine | 20-5 |
| – Grain tank sample flap | 10-6 | – Starting the engine | 20-5 |
| – Instruments in corner post | 10-7 | – Stopping the engine | 20-9 |
| – Multi-tachometer | 10-8 | – Cold weather operation | 20-11 |
| Operator's platform and cab | 10-9 | – Starting aids | 20-12 |
| – Access ladder | 10-9 | – Operating in tropical conditions | 20-13 |
| – Adjusting steering column | 10-10 | Break-in period | 20-14 |
| – Operator's seat | 10-10 | – Engine | 20-14 |
| – Operator's cab | 10-12 | – Combine | 20-15 |
| – Operator's cab controls | 10-13 | Driving the combine | 20-16 |
| – Air conditioning system | 10-13 | – Steering and driving | 20-16 |
| – Heater | 10-14 | – Operating foot brakes | 20-17 |
| – Fan | 10-14 | – Operating the clutch and engaging | |
| – Windshield wiper | 10-14 | a gear | 20-17 |
| – Air louvers | 10-15 | Transporting the combine | 20-19 |
| – Radio | 10-16 | – Under own power | 20-19 |
| Lighting system and signals | 10-18 | – On truck trailer or rail car | 20-20 |
| – Main switch | 10-18 | – Towing the combine | 20-21 |
| – Light switch | 10-18 | Header adjustments | 20-22 |
| – Headlights | 10-19 | – Header drive | 20-23 |
| – Turn signal and warning lights | 10-19 | – Hydraulic reverser | 20-23 |
| – Horn | 10-21 | – Height control | 20-24 |
| – Work lights | 10-21 | – Header pressure gauge | 20-26 |
| WARNING DEVICES AND MONITORS | 15- | – Reel adjustment | 20-26 |
| – Optical warning devices | 15-1 | Combine field adjustments | 20-28 |
| – Low shaft speed monitors | 15-4 | – Separator drive | 20-28 |
| – HARVESTRAK combine monitor | 15-5 | – Cylinder speed | 20-28 |
| | | – Concave clearance | 20-29 |
| | | – Fan speed | 20-30 |
| | | – Chaffer and grain sieves | 20-31 |
| | | – Straw warning devices | 20-32 |
| | | Grain tank and unloading auger | 20-33 |
| | | – Grain tank | 20-33 |
| | | – Unloading auger | 20-34 |
| | | – Leveling auger | 20-35 |

Contents

| | | | |
|---|------------|--|------------|
| OPERATION AND FIELD ADJUSTMENTS – ADDITIONAL EQUIPMENT | 25- | SERVICE – ENGINE | 40- |
| Ballast weights and straw spreader | 25-1 | Engine | 40-1 |
| Straw chopper | 25-2 | – Access to engine | 40-1 |
| – Engaging straw chopper | 25-2 | – Engine compartment | 40-2 |
| – Straw distributor | 25-3 | – Oil level | 40-3 |
| – Adjusting length of cut | 25-4 | – Filter element | 40-4 |
| – Disengaging straw chopper | 25-4 | Fuel system | 40-5 |
| – When driving on public roads | 25-6 | – Fuel tank | 40-5 |
| Front and rear axle | 25-7 | – Fuel transfer pump | 40-6 |
| | | – Water trap | 40-7 |
| | | – Fuel filter | 40-8 |
| | | – Fuel injection nozzles | 40-9 |
| HARVESTRAK COMBINE MONITOR | 26- | – Bleeding the fuel system | 40-10 |
| – General information | 26-1 | – Adjusting engine speeds | 40-12 |
| – Position and basic function | 26-1 | Cooling system | 40-13 |
| – Control panel – components | 26-3 | – Radiator and rotary screen | 40-13 |
| – Grain size adjustment | 26-3 | – Engine coolant | 40-14 |
| – Sensor selection | 26-4 | – Flushing the cooling system | 40-15 |
| – Adjustments | 26-4 | – Water pump and fan drive | 40-16 |
| – Operational check | 26-6 | Air intake system | 40-17 |
| | | – Pre-cleaner | 40-17 |
| | | – Dust ejector unit | 40-17 |
| | | – Dry-type air cleaner | 40-18 |
| | | – Air intake lines | 40-21 |
| FUEL, LUBRICANTS, HYDRAULIC OIL, COOLANT AND CAPACITIES | 30- | SERVICE – AIR CONDITIONING SYSTEM, ELECTRICAL SYSTEM, HARVESTRAK COMBINE MONITOR AND HYDRAULIC SYSTEM | 45- |
| – Fuel | 30-1 | Air conditioning system | 45-1 |
| – Engine oil | 30-2 | – Compressor | 45-1 |
| – Engine coolant | 30-3 | – Refrigerant level | 45-1 |
| – Transmission oil | 30-4 | – Condenser | 45-2 |
| – Hydraulic oil | 30-6 | – Pre-cleaner screens | 45-2 |
| – Lubricants | 30-7 | – Paper filter element | 45-2 |
| | | – Recirculating filter | 45-3 |
| | | – Cleaning filter elements | 45-3 |
| | | – Condensed water hoses | 45-5 |
| | | – Evaporator and heater | 45-5 |
| LUBRICATING POINTS AND PERIODIC SERVICES, V-BELTS AND CHAINS | 35- | Electrical system and lighting | 45-6 |
| Lubricating points | 35-1 | – Batteries | 45-6 |
| Periodic services | 35-4 | – Alternator | 45-10 |
| – After the first 10 hours of operation | 35-4 | – Starting motor | 45-10 |
| – Every 10 operating hours | 35-5 | – Fuse and relay box | 45-12 |
| – After the first 100 operating hours | 35-6 | – Fuse and relay, air conditioning system | 45-14 |
| – Every 200 operating hours | 35-7 | – Replacing bulbs | 45-15 |
| – Every 400 operating hours | 35-8 | HARVESTRAK combine monitor | 45-19 |
| – After the harvesting season | 35-9 | Hydraulic system | 45-20 |
| – Every 800 operating hours | 35-10 | – Hydraulic pump | 45-21 |
| – Every 1200 operating hours | 35-10 | – Hydrostatic reel drive | 45-23 |
| Service – V-belts and chains | 35-11 | | |
| – V-belts | 35-11 | | |
| – Chains | 35-11 | | |
| Service – Opening side guards and inspection covers | 35-13 | | |

Contents

| | | | |
|--|------------|--|------------|
| SERVICE – TRANSMISSION | 50- | SERVICE – OPTIONAL EQUIPMENT | 60- |
| Clutch and brake oil reservoir | 50-1 | Straw chopper | 60-1 |
| – Adjusting foot brakes | 50-1 | – Replacement of rotating knives | 60-1 |
| – Adjusting parking brake | 50-2 | – Replacement of counter knives | 60-1 |
| Ground speed drive | 50-3 | – Drive belt | 60-1 |
| – Posi-Torq drive | 50-3 | Straw spreader | 60-3 |
| Transmission, axles and wheels | 50-6 | | |
| – Transmission | 50-6 | SERVICE – REPLACING DRIVE BELTS | 65- |
| – Final drives | 50-6 | – General information | 65-1 |
| – Front axle | 50-6 | – Posi-Torq drive belts | 65-1 |
| – Rear axle | 50-7 | – Separator drive belt | 65-2 |
| – Tires | 50-8 | – Fan drive belt | 65-3 |
| – Wheel bolts | 50-9 | – Feeder house drive belt | 65-4 |
| | | – Straw chopper drive belt | 65-5 |
| | | – Cylinder variable drive belt | 65-6 |
| SERVICE – FEEDER HOUSE, SEPARATOR AND CLEANING SHOE | 55- | TROUBLESHOOTING | 70- |
| Feeder house | 55-1 | – General | 70-1 |
| – Feeder conveyor chain tension | 55-1 | – Feeder house | 70-1 |
| – Feeder conveyor drum | 55-2 | – Separator | 70-2 |
| – Slip clutch on upper feeder shaft | 55-2 | – Propulsion system | 70-5 |
| – Feeder conveyor drive | 55-3 | – Steering | 70-6 |
| – Header drive | 55-4 | – Brakes | 70-6 |
| – Hydraulic reverser | 55-6 | – Engine | 70-7 |
| Separator | 55-7 | – Pressurizer fan | 70-10 |
| – Inspection covers | 55-7 | – Heater | 70-10 |
| – Stone trap | 55-7 | – Air conditioner | 70-11 |
| – Cleaning grain pan | 55-8 | – Low shaft speed monitor system | 70-13 |
| – Cylinder rasp bars | 55-9 | – HARVESTRAK combine monitor | 70-13 |
| – Turning cylinder | 55-10 | | |
| – Separator drive | 55-10 | | |
| – Concave settings | 55-12 | | |
| – Concave adjustments | 55-13 | | |
| Cleaning shoe | 55-15 | | |
| – Curtain | 55-15 | | |
| – Straw walkers | 55-15 | | |
| – Straw walker bearings | 55-16 | | |
| – Straw walker drive | 55-17 | | |
| – Cleaning shoe drive | 55-17 | | |
| – Fan | 55-18 | | |
| – Chaffer and chaffer extension | 55-19 | | |
| – Sieves | 55-19 | | |
| Elevators and augers | 55-20 | | |
| – Elevators | 55-20 | | |
| – Grain elevator drive | 55-21 | | |
| – Elevator slip clutch | 55-22 | | |
| – Tailings elevator drive | 55-22 | | |
| – Elevator augers | 55-23 | | |
| Grain tank | 55-24 | | |
| – Grain tank leveling auger | 55-24 | | |
| – Grain tank unloading auger | 55-25 | | |
| – Unloading auger drive | 55-25 | | |
| – Unloading paddle drive | 55-27 | | |

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com