

4435 HYDRO COMBINE



 
JOHN DEERE

OPERATORS MANUAL 4435 HYDRO COMBINE

OMZ92026 A0 English

JOHN DEERE WERKE ZWEIBRUCKEN
OMZ92026 A0

LITHO IN THE U.S.A.
ENGLISH



Introduction

READ THIS MANUAL CAREFULLY to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage.



This safety alert symbol identifies all the important safety messages in this manual. When you see this symbol, be alert to the possibility of personal injury and carefully read the message that follows.

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

ALL MEASUREMENTS in this manual are given in SI metric units followed immediately by the U.S. customary units.

RIGHT-HAND AND LEFT-HAND SIDES are determined by facing in the direction the combine will travel when in use.

WRITE PRODUCT IDENTIFICATION NUMBERS in the Identification Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. If this manual is kept on the machine, also file the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

THE TIRE MANUFACTURER'S warranty supplied with your machine may not apply outside the U.S. and Canada.

All information, illustrations, and specifications contained in this operator's manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT © 1990 DEERE & COMPANY
European Office Mannheim
All rights reserved
A John Deere ILLUSTRATION™ Manual

Contents

IDENTIFICATION VIEWS	00-5	COMBINE OPERATION AND FIELD ADJUSTMENTS	20-
SAFETY RULES	05-	Pre-starting checks	20-1
- General	05-1	- Daily checks on combine	20-1
- Operation	05-4	- Engine oil	20-1
- Service	05-9	- Coolant	20-1
- Warning decals	05-14	- Hydraulic oil	20-1
CONTROLS AND INSTRUMENTS	10-	- Hydrostatic oil	20-2
- Miscellaneous controls	10-1	- Fuel	20-2
- Operator's platform - controls	10-2	- Fire extinguisher	20-4
- Controls and instruments	10-4	Operating the engine	20-5
- Concave clearance indicator	10-6	- Starting the engine	20-5
- Grain tank sample flap	10-6	- Stopping the engine	20-9
- Instruments in corner post	10-7	- Cold weather operation	20-11
- Multi-tachometer	10-8	- Starting aids	20-12
Operator's platform and cab	10-9	- Operating in tropical conditions	20-13
- Access ladder	10-9	Break-in period	20-14
- Adjusting steering column	10-10	- Engine	20-14
- Operator's seat	10-10	- Combine	20-15
- Operator's cab	10-12	Driving the combine	20-16
- Operator's cab controls	10-13	- Steering and driving	20-16
- Air conditioning system	10-13	- Operating foot brakes	20-17
- Heater	10-14	- Operating the clutch and engaging a gear	20-17
- Fan	10-14	Transporting the combine	20-20
- Windshield wiper	10-14	- Under own power	20-20
- Air louvers	10-15	- On truck trailer or rail car	20-21
- Radio	10-16	- Towing the combine	20-22
Lighting system and signals	10-18	Header adjustments	20-23
- Main switch	10-18	- Header drive	20-24
- Light switch	10-18	- Hydraulic reverser	20-24
- Headlights	10-19	- Height control	20-25
- Turn signal and warning lights	10-19	- Header pressure gauge	20-27
- Horn	10-21	- Reel adjustment	20-27
- Work lights	10-21	Combine field adjustments	20-29
WARNING DEVICES AND MONITORS	15-	- Separator drive	20-29
- Optical warning devices	15-1	- Cylinder speed	20-29
- Low shaft speed monitors	15-4	- Concave clearance	20-30
- HARVESTRAK combine monitor	15-5	- Fan speed	20-31
		- Chaffer extension	20-32
		- Chaffer and grain sieves	20-33
		- Straw warning devices	20-34
		Grain tank and unloading auger	20-35
		- Grain tank	20-35
		- Unloading auger	20-36
		- Leveling auger	20-37

Contents

OPERATION AND FIELD ADJUSTMENTS – ADDITIONAL EQUIPMENT	25-	SERVICE – ENGINE	40-
Ballast weights and straw spreader	25-1	Engine	40-1
Straw chopper	25-2	– Access to engine	40-1
– Engaging straw chopper	25-2	– Engine compartment	40-2
– Straw distributor	25-3	– Oil level	40-3
– Adjusting length of cut	25-4	– Filter element	40-4
– Disengaging straw chopper	25-4	Fuel system	40-5
– When driving on public roads	25-6	– Fuel tank	40-5
Front and rear axle	25-7	– Fuel transfer pump	40-6
		– Water trap	40-7
		– Fuel filter	40-8
		– Fuel injection nozzles	40-9
HARVESTRAK COMBINE MONITOR	26-	– Bleeding the fuel system	40-10
– General information	26-1	– Adjusting engine speeds	40-12
– Position and basic function	26-1	Cooling system	40-13
– Control panel – components	26-3	– Radiator and rotary screen	40-13
– Grain size adjustment	26-3	– Engine coolant	40-15
– Sensor selection	26-4	– Flushing the cooling system	40-16
– Adjustments	26-4	– Water pump and fan drive	40-17
– Operational check	26-6	Air intake system	40-18
		– Pre-cleaner	40-18
		– Dust ejector unit	40-18
		– Dry-type air cleaner	40-19
		– Air intake lines	40-23
FUEL, LUBRICANTS, HYDRAULIC OIL, COOLANT AND CAPACITIES	30-	SERVICE – AIR CONDITIONING SYSTEM, ELECTRICAL SYSTEM, HARVESTRAK COMBINE MONITOR AND HYDRAULIC SYSTEM	45-
– Fuel	30-1	Air conditioning system	45-1
– Engine oil	30-2	– Compressor	45-1
– Engine coolant	30-3	– Refrigerant level	45-1
– Transmission oil	30-4	– Condenser	45-2
– Hydraulic oil	30-6	– Pre-cleaner screens	45-3
– Lubricants	30-7	– Paper filter element	45-3
		– Recirculating filter	45-4
		– Cleaning filter elements	45-4
		– Condensed water hoses	45-6
		– Evaporator and heater	45-6
LUBRICATING POINTS AND PERIODIC SERVICES, V-BELTS AND CHAINS	35-	Electrical system and lighting	45-7
Lubricating points	35-1	– Batteries	45-7
Periodic services	35-4	– Alternator	45-11
– After the first 10 hours of operation	35-4	– Starting motor	45-11
– Every 10 operating hours	35-5	– Fuse and relay box	45-13
– After the first 100 operating hours	35-6	– Fuse and relay, air conditioning system	45-15
– Every 200 operating hours	35-7	– Replacing bulbs	45-16
– Every 400 operating hours	35-8	HARVESTRAK combine monitor	45-20
– After the harvesting season	35-9	Hydraulic system	45-21
– Every 800 operating hours	35-10	– Hydraulic pump	45-22
– Every 1200 operating hours	35-10	– Hydrostatic reel drive	45-24
Service – V-belts and chains	35-11		
– V-belts	35-11		
– Chains	35-11		
Service – Opening side guards and inspection covers	35-13		

Contents

SERVICE – POWER TRAIN	50-	SERVICE – OPTIONAL EQUIPMENT	60-
Brake oil reservoir	50-1	Straw chopper	60-1
– Adjusting foot brakes	50-1	– Replacement of rotating knives	60-1
– Adjusting parking brake	50-2	– Replacement of counter knives	60-1
Adjusting gear shift lever	50-3	– Drive belt	60-1
Hydrostatic drive	50-4	Straw spreader	60-3
– Hydrostatic drive oil cooler	50-4		
– Hydrostatic drive oil and filter change	50-4		
Transmission, axles and wheels	50-5	SERVICE – REPLACING DRIVE BELTS	65-
– Transmission	50-5	– General information	65-1
– Final drives	50-5	– Posi-Torq drive belts	65-1
– Front axle	50-5	– Separator drive belt	65-2
– Rear axle	50-6	– Fan drive belt	65-3
– Tires	50-7	– Feeder house drive belt	65-4
– Wheel bolts	50-8	– Straw chopper drive belt	65-5
		– Cylinder variable drive belt	65-6
SERVICE – FEEDER HOUSE, SEPARATOR AND CLEANING SHOE	55-	TROUBLESHOOTING	70-
Feeder house	55-1	– General	70-1
– Feeder conveyor chain tension	55-1	– Feeder house	70-1
– Feeder conveyor drum	55-2	– Separator	70-2
– Slip clutch on upper feeder shaft	55-2	– Propulsion system	70-5
– Feeder conveyor drive	55-3	– Steering	70-6
– Header drive	55-4	– Brakes	70-6
– Hydraulic reverser	55-6	– Engine	70-7
Separator	55-7	– Pressurizer fan	70-10
– Inspection covers	55-7	– Heater	70-10
– Stone trap	55-7	– Air conditioner	70-11
– Cleaning grain pan	55-8	– Low shaft speed monitor system	70-13
– Cylinder rasp bars	55-9	– HARVESTRAK combine monitor	70-13
– Turning cylinder	55-10		
– Separator drive	55-10		
– Concave settings	55-12		
– Concave adjustments	55-13		
Cleaning shoe	55-15		
– Curtain	55-15		
– Straw walkers	55-15		
– Straw walker bearings	55-16		
– Straw walker drive	55-17		
– Cleaning shoe drive	55-17		
– Fan	55-18		
– Chaffer and chaffer extension	55-19		
– Sieves	55-19		
Elevators and augers	55-20		
– Elevators	55-20		
– Grain elevator drive	55-21		
– Elevator slip clutch	55-22		
– Tailings elevator drive	55-22		
– Elevator augers	55-23		
Grain tank	55-24		
– Grain tank leveling auger	55-24		
– Grain tank unloading auger	55-25		
– Unloading auger drive	55-25		
– Unloading paddle drive	55-27		

INHOM-4435HYCZE-311089

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com