 


**John Deere
740
Skidder**

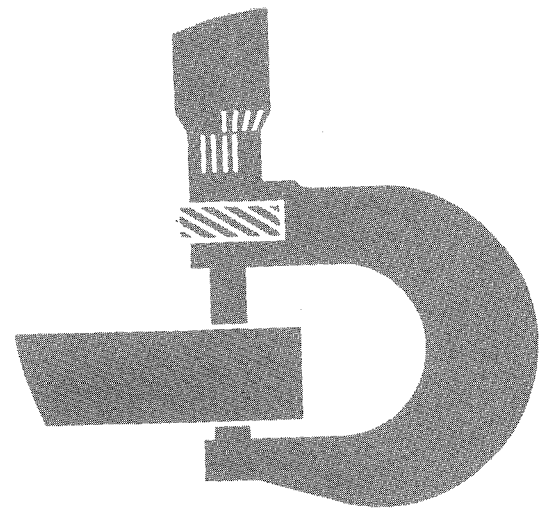

TECHNICAL MANUAL

JD740 SKIDDER Technical Manual TM-1059 (Dec-79)

SECTION AND GROUP CONTENTS OF THIS MANUAL

Section I - GENERAL INFORMATION

- Group I Contents and Index
- Group II Introduction and Safety Information

Section 10 - GENERAL

- Group 5 Specifications
- Group 10 Predelivery, Delivery, and After-Sale Services
- Group 15 Lubrication

Section 20 - ENGINE

- Group 4 Engine Removal and Installation
- Group 5 Basic Engine
- Group 10 Engine Lubrication System
- Group 15 Speed Control Linkage
- Group 20 Engine Cooling System
- Group 25 Specifications and Special Tools

Section 30 - FUEL SYSTEM

- Group 5 Fuel Tank and Filters
- Group 10 Air Intake System
- Group 15 Fuel Injection System
- Group 20 Specifications and Special Tools

Section 40 - ELECTRICAL SYSTEM

- Group 5 Batteries
- Group 10 Charging System Components
- Group 15 Starting System Components
- Group 20 Lighting and Accessory Components
- Group 25 Specifications and Special Tools

Section 50 - POWER TRAIN

- Group 5 Engine Disconnect Clutch
- Group 10 Drive Shafts
- Group 15 Power Shift Transmission
- Group 20 Axle Assemblies
- Group 25 Differential
- Group 30 Specifications and Special Tools

Section 60 - HYDRAULIC SYSTEM

- Group 5 Hydraulic Pumps
- Group 10 Auxiliary Winch Drive Motor
- Group 15 Steering Valve
- Group 20 Brake Valve
- Group 25 Miscellaneous Control Valves
- Group 30 Filters, Oil Cooler, Accumulators, and Sump
- Group 35 Cylinders, Lines, and Fittings
- Group 40 Specifications and Special Tools

Section 70 - MISCELLANEOUS

- Group 4 Separation
- Group 5 Main Winch (-218191)
- Group 6 Main Winch (218192-)
- Group 10 Auxiliary Winch
- Group 15 Frames
- Group 16 Fire Suppression System
- Group 17 Fire Extinguisher
- Group 20 Blades
- Group 25 Log Arch
- Group 30 Specifications and Special Tools


Section 80 - TESTING AND DIAGNOSIS

- Group 5 General Information
- Group 10 Engine
- Group 15 Fuel System
- Group 20 Electrical System
- Group 25 Power Train
- Group 30 Hydraulic System
- Group 31 Hydraulic System (Analyzer)
- Group 35 Miscellaneous Components
- Group 40 Specifications and Special Tools

The specifications and design information contained in this manual were correct at the time it was printed. It is John Deere's policy to continually improve and update our machines. Therefore, the specifications and design information are subject to change without notice. Wherever applicable, specifications and design information are in accordance with SAE and ICED standards.

Group II INTRODUCTION AND SAFETY INFORMATION

 INTRODUCTION

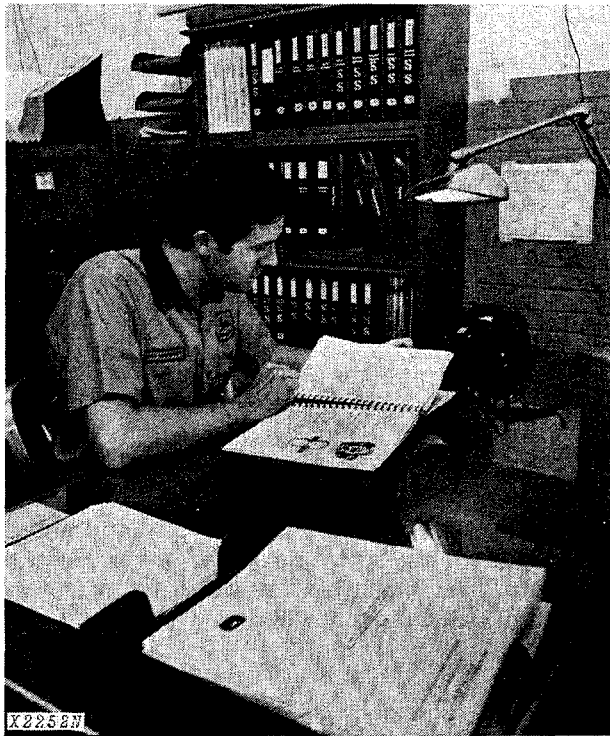

Use FOS Manuals for Reference

This technical manual is part of a twin concept of service:

The two kinds of manuals work as a team to give you both the general background and technical details of shop service.

•FOS Manuals—for reference

Fundamentals of Service (FOS) Manuals cover basic theory of operation, *fundamentals* of trouble shooting, *general* maintenance, and *basic* types of failures and their causes. FOS Manuals are for training new personnel and for reference by experienced service technicians.



When a service technician should refer to a FOS Manual for more information, a FOS symbol like the one at the left is used in the TM to identify the reference.

•Technical Manuals—for actual service

Technical Manuals are concise service guides for a specific machine. Technical manuals are on-the-job guides containing only the vital information needed by an experienced service technician.



Use Technical Manuals for Actual Service

This technical manual was planned and written for you—an experienced service technician. Keep it in a permanent binder in the shop where it is handy. Refer to it whenever in doubt about correct service procedures or specifications.

Some features of this manual:


- Inside front cover - "Table of Contents" and "Maintenance Without Accident".
- Section 10 - General specifications and services.
- Sections 20 through 70 - Removal, repair, testing (components removed), installation, and adjustment.
- Section 80 - Detailed explanation of system operation, diagnosis, visual inspection, testing, and adjustments.
- Specifications grouped and illustrated at the end of each section.
- Inside rear cover - Index.

MAINTENANCE WITHOUT ACCIDENT

 
WORK SAFELY



T27999N

 This safety alert symbol is used for important safety messages. When you see this symbol, the possibility of personal injury exists if safety message is not followed.

**EVERY EMPLOYER HAS A
SAFETY PROGRAM. KNOW
WHAT IT IS!**

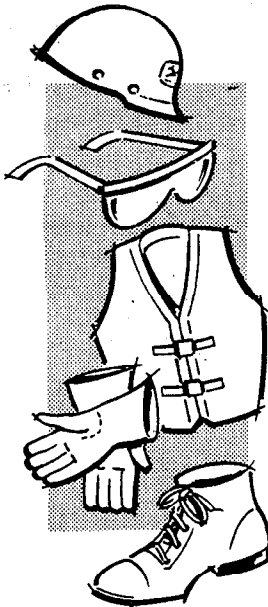

T27501N

Consult your shop foreman for specific instructions on a job, and the safety equipment required.

For instance, you may need: Hard hat, safety shoes, safety goggles, heavy gloves, reflector vests, ear protectors, respirators.



T27502N

 
ALWAYS AVOID loose clothing or any accessory—flopping cuffs, dangling neckties and scarves, or rings and wrist watches—that can catch in moving parts and put you out of work.



T27503

BE ALERT!

Plan ahead — work safely — avoid accidental damage and injury. If a careless moment does cause an accident or fire, react quickly with the tools and skills at hand — know how to use a first aid kit and a fire extinguisher — and where to get aid and assistance. In an emergency, split-second action is the key to safety.

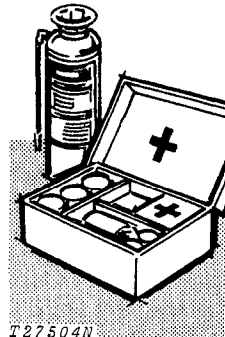

T27504N

 
MAINTENANCE WITHOUT ACCIDENT

Specific safety procedures should always be observed, whether servicing or making repairs on the skidder. Remembering these—in time!—can prevent an injury...or save your life....

AVOID FIRE HAZARDS—

Fuel Is Dangerous!

- Don't smoke while refueling.
- Don't smoke while handling highly flammable material.
- Engine should be shut off when refueling.
- Use care in refueling if the engine is hot.

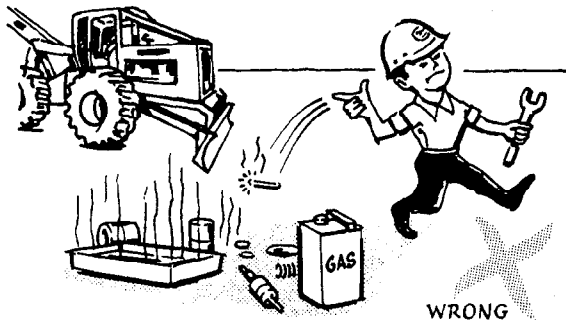

T33257N

Don't use open pans of gasoline or diesel fuel for cleaning parts. Good commercial, nonflammable solvents are preferred.

Battery Gas Is Highly Flammable!

Provide adequate ventilation when charging batteries.



T27506N

Don't check battery charge by placing metal objects across the posts.

- Don't allow sparks or open flame near batteries.
- Don't smoke near battery.

Flame Is Not a Flashlight!

Never check fuel, battery electrolyte or coolant levels with an open flame.

Never use an open flame to look for leaks anywhere on the equipment.

 
Never use an open flame as a light anywhere on or around the equipment.

KNOW WHERE FIRE EXTINGUISHERS ARE KEPT!

UNDER ALL MAINTENANCE CONDITIONS—


Do not perform any work on the skidder unless authorized to do so. Then be sure you understand the services required. Follow recommended procedures.

Never service the equipment while it is being operated.

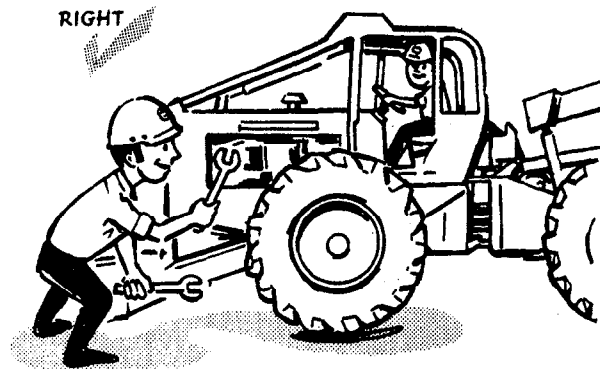

T33258N

 Avoid working on equipment with the engine running. If it is necessary to make checks with the engine running, **ALWAYS USE TWO SERVICE TECHNICIANS**—one, the operator, at the controls, the other checking within view of the operator. Also, put the transmission in neutral, set the brake, and apply any safety locks provided. **KEEP HANDS AWAY FROM MOVING PARTS.**

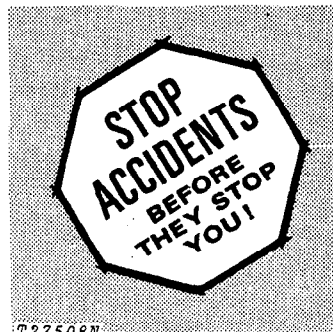

T27508N

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com