


**John Deere  
JD693-B  
Feller-Buncher**

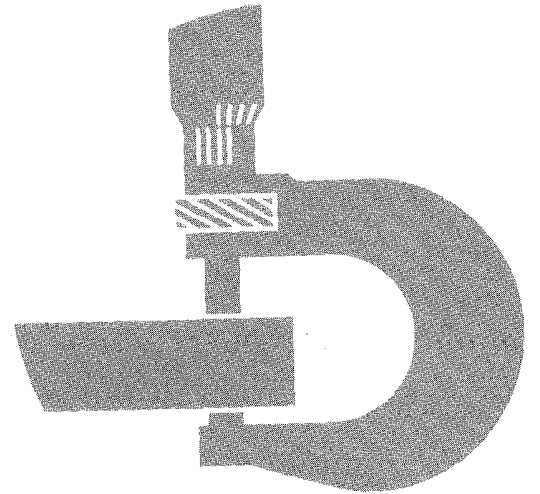

**TECHNICAL MANUAL**

**TM-1170**

Litho in U.S.A.

## SECTION AND GROUP CONTENTS OF THIS MANUAL

### SECTION I - GENERAL INFORMATION

- Group I - Contents, Index and Page List
- Group II - Introduction and Safety Information
- Group III - General Specifications
- Group IV - Predelivery, Delivery and After-Sales Service
- Group V - Lubrication

### SECTION 1 - TRACKS

- Group 0130 - Tracks Systems
- Group 0199 - Specifications and Special Tools

### SECTION 2 - AXLES AND SUSPENSION SYSTEMS

- Group 0201 - Drive Axle Housing and Support
- Group 0260 - Hydraulic System
- Group 0299 - Specifications and Special Tools

### SECTION 4 - ENGINE

- Group 0400 - Engine Removal and Installation
- Group 0401 - Crankshaft and Main Bearings
- Group 0402 - Camshaft and Valve Actuating Means
- Group 0403 - Connecting Rods and Pistons
- Group 0404 - Cylinder Block
- Group 0407 - Oiling System
- Group 0408 - Ventilating System
- Group 0409 - Cylinder Head and Valves
- Group 0410 - Exhaust Manifold
- Group 0413 - Fuel Injection System
- Group 0414 - Intake Manifold
- Group 0416 - Turbocharger
- Group 0417 - Water Pump
- Group 0418 - Thermostats, Housings and Water Piping
- Group 0419 - Oil Cooler
- Group 0420 - Fuel Filter
- Group 0421 - Fuel Transfer Pump
- Group 0422 - Starting Motor and Fastenings
- Group 0433 - Flywheel, Housing and Fastenings
- Group 0499 - Specifications and Special Tools

### SECTION 5 - ENGINE AUXILIARY SYSTEM

- Group 0505 - Cold Weather Starting Aids
- Group 0510 - Cooling Systems
- Group 0515 - Speed Controls
- Group 0520 - Intake System
- Group 0530 - External Exhaust Systems
- Group 0540 - Mounting Frame
- Group 0560 - External Fuel Supply Systems
- Group 0599 - Specifications and Special Tools

### SECTION 16 - ELECTRICAL SYSTEMS

- Group 1671 - Batteries, Support and Cables
- Group 1672 - Alternator, Regulator and Charging System Wiring
- Group 1673 - Lighting System
- Group 1674 - Wiring Harness and Switches
- Group 1675 - Systems Controls
- Group 1676 - Instruments and Indicators
- Group 1699 - Specifications and Special Tools

### SECTION 17 - FRAME, CHASSIS, OR SUPPORTING STRUCTURE

- Group 1740 - Frame Installation
- Group 1746 - Frame Bottom Guards
- Group 1749 - Chassis Weights

### SECTION 18 - OPERATOR'S STATION

- Group 1810 - Operator Enclosure
- Group 1830 - Heating and Air Conditioning
- Group 1899 - Specifications and Special Tools

### SECTION 19 - SHEET METAL AND STYLING

- Group 1910 - Hood or Engine Enclosure
- Group 1913 - Miscellaneous Shields
- Group 1921 - Grille and Grille Housing
- Group 1927 - Fenders

### SECTION 20 - SAFETY, CONVENIENCE AND MISCELLANEOUS

- Group 2003 - Fire Extinguisher

### SECTION 33 - BACKHOE AND EXCAVATOR

- Group 3315 - Controls Linkage
- Group 3340 - Frames
- Group 3360 - Hydraulic System
- Group 3399 - Specifications and Special Tools

### SECTION 39 - SHEAR

- Group 3901 - Blades and Cutting Elements
- Group 3903 - Tongue and Forks
- Group 3915 - Controls Linkage
- Group 3940 - Frame
- Group 3960 - Hydraulic System
- Group 3999 - Specifications and Special Tools

### SECTION 43 - SWING, ROTATION OR PIVOTING SYSTEM

- Group 4350 - Mechanical Drive Elements
- Group 4360 - Hydraulic System
- Group 4399 - Specifications and Special Tools

---

**SECTION AND GROUP CONTENTS OF THIS MANUAL (Continued)**

**SECTION 90 - SYSTEM TESTING**

- Group 9005 - General Information - Seven Basic  
              Steps of Diagnosing and Testing
- Group 9010 - Engine
- Group 9015 - Electrical System
- Group 9020 - Power Train
- Group 9025 - Hydraulic System
- Group 9030 - Miscellaneous Components
- Group 9031 - Heating and Air Conditioning
- Group 9035 - Specifications and Special Tools

INDEX

**A**

Accessory relay .....	1674-2
Accumulator, pilot .....	3360-53
Adjusting cylinder .....	0130-10
After-sale inspection .....	I-IV-20
Air cleaner .....	I-IV-25
Air conditioner .....	I-IV-42
Air intake hoses .....	I-IV-25
Batteries .....	I-IV-26
Chain guides and slides hardware .....	I-IV-39
Clamp control pedal .....	I-IV-37
Clamp valve switch .....	I-IV-37
Crankcase oil level and filter .....	I-IV-21
Dual speed propel switch .....	I-IV-38
Engine crankcase vent tube .....	I-IV-40
Engine speeds .....	I-IV-27
Fan belt tension .....	I-IV-27
Flow divider .....	I-IV-39
Fluid leakage .....	I-IV-41
Fuel filters .....	I-IV-26
Fuel supply pump sediment bowl .....	I-IV-27
Fuel tank sump filter .....	I-IV-26
Grease fittings .....	I-IV-28
Hardware torque values .....	I-IV-41
House lock control switches .....	I-IV-36
House lock oil level .....	I-IV-24
Hydraulic system oil level and filters .....	I-IV-22
Indicator lights and gauges .....	I-IV-34
Pre-cleaner .....	I-IV-25
Propel brake oil level .....	I-IV-24
Propel pedals .....	I-IV-35
Radiator .....	I-IV-25
Seat .....	I-IV-39
Secondary boom and shear tilt control lever .....	I-IV-35
Shear control pedal .....	I-IV-37
Swing and primary boom control lever .....	I-IV-35
Swing gearbox oil level .....	I-IV-23
Track gearbox oil level .....	I-IV-23
Track rollers and idlers oil level .....	I-IV-24
Track sag .....	I-IV-39
Track shoe hardware .....	I-IV-40
Track tension check .....	I-IV-37
Air cleaner .....	0520-1
Air conditioning system .....	1830-4
Air conditioning system testing .....	9031-2
Air filters .....	1830-28
Air intake system .....	1830-27
Alternator indicator light .....	1676-4
Alternator, regulator and charging system wiring .....	1672-1
Axles and suspension systems .....	0201-1

**B**

Backhoe and excavator:	
Controls linkage .....	3315-3
Frames .....	3340-1
Hydraulic system .....	3360-1
Batteries, support and cables .....	1671-3
Blades and cutting elements, shear .....	3901-3
Boom cylinders .....	3360-21
Booms, primary and secondary .....	3340-1
Bumper, rear .....	1749-1

**C**

Cab guard, sweep and frame .....	1810-3
Cab relay testing .....	9015-47
Camshaft and valve actuating means .....	0402-1
Charging circuit testing .....	9015-34
Chassis weights .....	1749-1
Clamp assembly, lower .....	3903-1
Clamp assembly, upper .....	3903-3
Clamp cylinder .....	3960-9
Cold weather starting aids .....	0505-3
Component location:	
Electrical system .....	9015-10
Engine system .....	9010-1
Hydraulic system .....	9025-1
Power train system .....	9020-1
Compressor .....	1830-4
Compressor relief valve .....	1830-26
Condenser .....	1830-20
Connecting rods and pistons .....	0403-1
Control valve, axle system .....	0260-7
Control valve, backhoe and excavator .....	3360-6
Control valve pilot caps .....	3360-60
Control valve, swing system .....	4360-1
Controls linkage, backhoe and excavator .....	3315-3
Controls linkage, shear .....	3915-1
Cooling systems, engine .....	0510-1
Counterbalance valve, axle system .....	0260-16
Cover, main frame bottom .....	1746-2
Cover, swing motor .....	1913-1
Cover, undercarriage .....	1746-1
Crankshaft and main bearings .....	0401-1
Crossover relief valve, swing system .....	4360-4
Cylinder block .....	0404-1
Cylinder, boom .....	3360-21
Cylinder, clamp .....	3960-9
Cylinder head and valves .....	0409-1
Cylinder, secondary boom .....	3360-17
Cylinder, shear .....	3960-7
Cylinder, tilt .....	3360-14

**D**

Delivery service .....	I-IV-20
Diagnosing malfunctions:	
Air conditioning system .....	9031-4
Electrical system .....	9015-6
Engine system .....	9010-6
Heating system .....	9031-1
Hydraulic system .....	9025-32
Power train system .....	9020-2
Track system .....	9030-1
Diagnosis and testing .....	9005-3
Drive axle housing and support .....	0201-3

**E**

Electrical systems .....	1671-1
Electrical systems testing .....	9015-1
Engine .....	0400-1
Engine auxiliary systems .....	0505-1
Engine oil pressure gauge .....	1676-2
Engine system testing .....	9010-1
Engine water temperature gauge .....	1676-3
Evaporator .....	1830-23
Exhaust manifold .....	0410-1
Expansion valve .....	1830-24
External exhaust systems, engine .....	0530-1
External fuel supply systems, engine .....	0560-1

**F**

Fenders .....	1927-1
Filter, air .....	1830-28
Filter, fuel, engine .....	0420-1
Filter, hydraulic oil .....	3360-26
Filter, oil engine .....	0407-1
Filter, pilot .....	3360-58
Fire extinguisher .....	2003-3
Fire suppression system .....	2003-5
Flow divider valves .....	0260-10
Fluid starting aid .....	0505-3
Flywheel, housing and fastenings .....	0433-1
Foot-operated pilot control valves .....	3360-37
Frame, backhoe and excavator .....	3340-1
Frame bottom guards .....	1746-1
Frame, main .....	1740-3
Frame, shear .....	3940-1
Frame, track .....	0130-3
Front idler .....	0130-5
Fuel filter .....	0420-1
Fuel gauge .....	1676-3
Fuel injection nozzles .....	0413-5
Fuel injection pump .....	0413-1
Fuel injection system .....	0413-1
Fuel tank .....	0560-1
Fuel transfer pump .....	0421-1
Fuses .....	1674-2

**G**

Gauge, engine oil pressure .....	1676-2
Gauge, engine water temperature .....	1676-3
Gauge, fuel .....	1676-3
Gauge, hydraulic oil temperature .....	1676-3
Gauge lights .....	1673-1
Gauges, testing .....	9015-42
Greases .....	I-V-2
Grille .....	1921-1

**H**

Hand held fire extinguisher .....	2003-3
Hand-operated pilot control valve .....	3360-28
Heater and air conditioning assembly .....	1830-3
Heater core .....	1830-2
Heater pipes and hoses .....	1830-2
Heater valve .....	1830-1
Heating system testing .....	9031-1
High and low refrigerant pressure switches .....	1830-27
Hood .....	1910-3
Horn switch .....	1674-1
Hour meter .....	1676-2
House lock assembly .....	4350-8
House lock solenoid testing .....	9015-45
House lock switches .....	1675-2
Hydraulic hose routing, backhoe and excavator .....	3360-11
Hydraulic hose routing, shear .....	3960-5
Hydraulic oil filter indicator light .....	1676-4
Hydraulic oil temperature gauge .....	1676-3
Hydraulic system testing .....	9025-1
Hydraulics, axle and suspension systems .....	0260-1
Hydraulics, backhoe and excavator .....	3360-1
Hydraulics, shear .....	3960-1
Hydraulics, swing system .....	4360-1

**I**

Indicator lights testing .....	9015-47
Instrument panel .....	1676-1
Instruments and indicators .....	1676-1
Intake system, engine .....	0520-1
Intake manifold .....	0414-1

**K**

Key switch .....	1674-1
------------------	--------

**L**

Light, alternator indicator .....	1676-4
Light, hydraulic oil filter indicator .....	1676-4
Light, plugged condenser indicator .....	1676-4
Light, Rome clamp valve indicator .....	1676-4
Lights, gauge .....	1673-1
Lubrication .....	I-V-1

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)