
John Deere 670A and 672A Motor Grader Repair

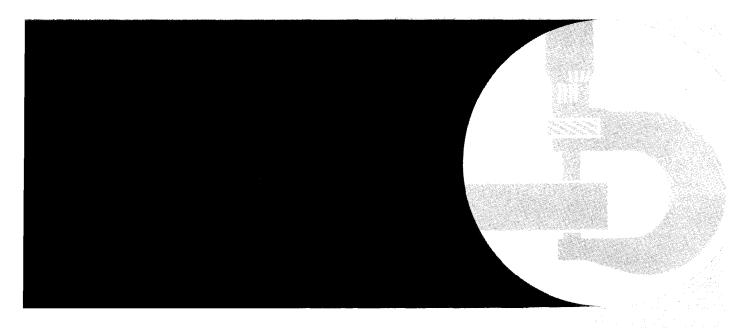



TECHNICAL MANUAL

JD670-A AND JD672-A MOTOR GRADERS

Technical Manual TM-1188 (Dec-87)

SECTION AND GROUP CONTENTS

SECTION I - GENERAL INFORMATION Group I - Contents (not used) Group II - Introduction and Safety Information Group IV - General Specifications Group IV - Predelivery, Delivery and After-Sales Services Group V - Lubrication	SECTION 5 - ENGINE AUXILIARY SYSTEMS Group 0505 - Cold Weather Starting Aids Group 0510 - Cooling Systems Group 0515 - Speed Controls Group 0520 - Intake System Group 0540 - Mounting Frame Group 0560 - External Fuel Supply Systems Group 0599 - Specifications and Special Tools
SECTION 1 - WHEELS	
Group 0110 - Powered Wheels and Fastenings	SECTION 8 - TRANSFER DRIVE
Group 0120 - Non-Powered Wheels and	Group 0841 - Housings and Covers
Fastenings	Group 0851 - Gears, Shafts, Bearings
Group 0199 - Specifications and Special Tools	Group 0899 - Specifications and Special Tools
SECTION 2 - AXLES AND SUSPENSION SYSTEMS	SECTION 9 - STEERING SYSTEM
Group 0201 - Drive Axle Housing and Support	Group 0920 - Power Steering
Group 0210 - Differential or Bevel Drive	Group 0960 - Hydraulic System
Group 0250 - Axle Shafts, Bearing and Reduction Gears	Group 0999 - Specifications and Special Tools
Group 0260 - Hydraulic System	SECTION 10 - SERVICE BRAKES
Group 0299 - Specifications and Special Tools	Group 1011 - Active Elements
	Group 1015 - Controls Linkage
SECTION 3 - TRANSMISSION	Group 1060 - Hydraulic System
Group 0315 - Controls	Group 1099 - Specifications and Special Tools
Group 0341 - Housings and Covers	
Group 0350 - Gears, Shafts, Bearings and	SECTION 11 - PARKING-EMERGENCY BRAKES
Power Shift Clutch	Group 1111 - Active Elements
Group 0360 - Hydraulic System	Group 1115 - Controls Linkage
Group 0370 - Clutch Disconnect and Controls	Group 1199 - Specifications and Special Tools
Group 0399 - Specifications and Special Tools	OPOTION 45 FOLUDIATINE ATTACHING
OFOTION 4 ENONE	SECTION 15 - EQUIPMENT ATTACHING
SECTION 4 - ENGINE	Group 1511 - Drawbar
Group 0400 - Removal and Installation	Group 1599 - Specifications and Special Tools
Group 0422 - Starting Motor and Fastenings	Continued on part page
Group 0499 - Specifications and Special Tools	Continued on next page

All information, illustrations and specifications contained in this technical manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

Copyright® 1987 DEERE & COMPANY Moline, Illinois All Rights Reserved

Previous Editions
Copyright® 1983 Deere & Company
Copyright® 1980 Deere & Company
Copyright® 1979 Deere & Company
Copyright® 1978 Deere & Company


Group 4260 - Hydraulic System

Group 4299 - Specifications and Special Tools

SECTION 16 - ELECTRICAL SYSTEMS Group 1671 - Batteries, Support and Cables	SECTION 20 - SAFETY, CONVENIENCE AND MISCELLANEOUS
· · · · · · · · · · · · · · · · · · ·	
Group 1672 - Alternator, Regulator and	
Charging System Wiring	Group 2003 - Fire Extinguisher
Group 1673 - Lighting System	Group 2004 - Horn
Group 1674 - Wiring Harness and Switches	Group 2006 - Cigar Lighter
Group 1675 - System Controls	
Group 1676 - Instruments and Indicators	SECTION 21 - MAIN HYDRAULIC SYSTEM
Group 1699 - Specifications and Special Tools	Group 2160 - Hydraulic System
·	Group 2199 - Specifications and Special Tools
SECTION 17 - FRAME, CHASSIS OR SUPPORTING	·
STRUCTURE	SECTION 34 - GRADING DEVICE
Group 1740 - Frame Installation	Group 3401 - Blade
Group 1746 - Frame Bottom Guards	Group 3415 - Controls Linkage
Group 1747 - Bumpers, Vehicle	Group 3440 - Frames
Group 1799 - Specifications and Special Tools	Group 3450 - Circle Gear Box
·	Group 3460 - Hydraulic System
SECTION 18 - OPERATOR'S STATION	Group 3499 - Specifications and Special Tools
Group 1810 - Operator Enclosure	
Group 1821 - Seat and Seat Belt	SECTION 42 - GROUND CONDITIONING TOOL
Group 1822 - Steps and Handholds	Group 4201 - Blades, Teeth, Shanks, Etc.
Group 1830 - Heating and Air Conditioning	Group 4215 - Controls Linkage
Group 1899 - Specifications and Special Tools	Group 4240 - Frames
C. C.E C.C. Charmanana and Charman Land	

Group 1910 - Hood or Engine Enclosure
Group 1913 - Miscellaneous Shields
Group 1921 - Grille and Grille Housing

Group II INTRODUCTION AND SAFETY INFORMATION INTRODUCTION

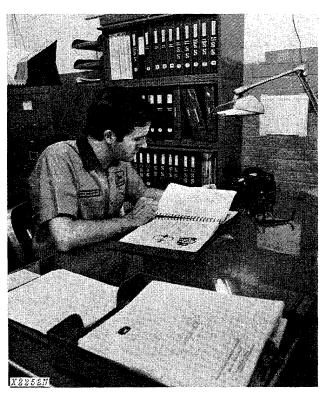

Use FOS Manuals for Reference

This technical manual is part of a twin concept of service:

The two kinds of manuals work as a team to give you both the general background and technical details of shop service.

•FOS Manuals - For Reference


Fundamentals of Service (FOS) Manuals cover basic theory of operation, fundamentals of trouble-shooting, general maintenance, and basic types of failure and their causes. FOS Manuals are for training new personnel and for reference by experienced service technicians.



When a service technician should refer to a FOS Manual for more information, A FOS symbol like the one at the left is used in the technical manual.

•Technical Manuals - For Actual Service

Technical manuals are concise service guides for specific machines. Technical manuals are on-the-job guides containing only the vital information needed by an experienced service technician.

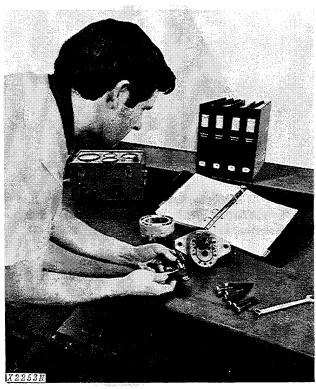

Use Technical Manuals for Actual Service

This technical manual was written for you - an experienced service technician. Keep it in a permanent binder in the shop where it is handy. Read it when you need to know correct service procedures or specifications.

Some features of this manual:

- Inside front cover "Table of Contents".
- Section I General specifications and services.
- Sections 1 through 46 Removal, repair, testing (components removed), installation, and adjustment
- Section 90 Detailed explanation of system operation, diagnosis, visual inspection, testing, and adjustments.
- Specifications are listed and illustrated at the end of each section.

MAINTENANCE WITHOUT ACCIDENT WORK SAFELY




This safety symbol is used for important safety messages. When you see this symbol, follow the safety message to avoid personal injury.

EVERY EMPLOYER HAS A SAFETY PROGRAM. KNOW WHAT IT IS!




See your shop supervisor for specific instructions on a job, and the safety equipment required.

For instance, you may need: Hard hat, safety shoes, safety goggles, heavy gloves, reflector vest, ear protectors, respirator.

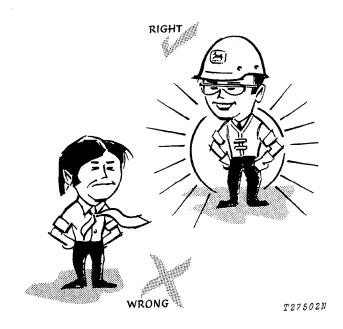

BE ALERT!

Plan ahead—work safely—know how to use a first-aid kit and a fire extinguisher—and where to get assistance.

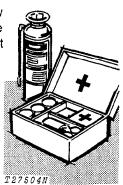

Maintenance Area

Make sure the maintenance area has enough ventilation.

Keep the maintenance area CLEAN AND DRY. Oily and wet floors are slippery. Greasy rags are a fire hazard. Wet spots are dangerous when working with electrical equipment.

Keep starting aids in a cool, well-ventilated place, out of reach of unauthorized personnel.

Thank you so much for reading.

Please click the "Buy Now!"

button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email: ebooklibonline@outlook.com