


**JD743-A
Tree Harvester
JD743-A
Feller-Buncher**

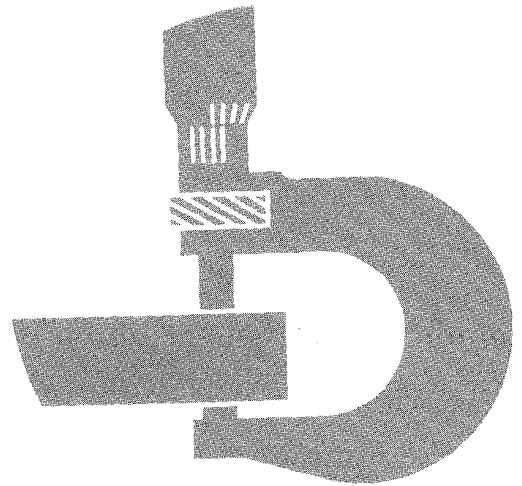

TECHNICAL MANUAL

TM-1226
LITHO IN U.S.A.

SECTION AND GROUP CONTENTS OF THIS MANUAL

SECTION I - GENERAL INFORMATION

- Group I - Contents, Index and Page List
- Group II - Introduction and Safety Information
- Group III - General Specifications
- Group IV - Predelivery, Delivery and After-Sales Services
- Group V - Lubrication

SECTION 1 - WHEELS

- Group 0110 - Powered Wheels, Tires and Fastenings
- Group 0199 - Specifications and Special Tools

SECTION 2 - AXLES AND SUSPENSION SYSTEMS

- Group 0201 - Drive Axle Housing and Support
- Group 0210 - Differential or Bevel Drive
- Group 0225 - Input Drive Shaft and U-Joints
- Group 0243 - Axle Lock Mounting
- Group 0250 - Axle Shaft, Bearings, Reduction Gears
- Group 0260 - Hydraulic System
- Group 0299 - Specifications and Special Tools

SECTION 3 - TRANSMISSION

- Group 0315 - Controls
- Group 0325 - Input Drive Shafts and U-Joints
- Group 0341 - Housings and Covers
- Group 0342 - Mounting Parts
- Group 0350 - Gears, Shafts, Bearings and Power Shift Clutch
- Group 0360 - Hydraulic System
- Group 0370 - Clutch Disconnect and Controls
- Group 0399 - Specifications and Special Tools

SECTION 4 - ENGINE

- Group 0400 - Engine Removal and Installation
- Group 0401 - Crankshaft and Main Bearings
- Group 0402 - Camshaft and Valve Actuating Means
- Group 0403 - Connecting Rods and Pistons
- Group 0404 - Cylinder Block
- Group 0407 - Oiling System
- Group 0408 - Ventilating System
- Group 0409 - Cylinder Head and Valves
- Group 0410 - Exhaust Manifold
- Group 0413 - Fuel Injection System
- Group 0414 - Intake Manifold
- Group 0416 - Turbocharger
- Group 0417 - Water Pump
- Group 0418 - Thermostats, Housings and Water Piping
- Group 0419 - Oil Cooler
- Group 0420 - Fuel Filter
- Group 0422 - Starting Motor and Fastenings
- Group 0429 - Fan Drive
- Group 0433 - Flywheel, Housing and Fastenings
- Group 0499 - Specifications and Special Tools

SECTION 5 - ENGINE AUXILIARY SYSTEMS

- Group 0505 - Cold Weather Starting Aids
- Group 0510 - Cooling Systems
- Group 0515 - Engine Speed Controls
- Group 0520 - Intake Systems
- Group 0503 - External Exhaust Systems
- Group 0540 - Mounting Frame
- Group 0560 - External Fuel Supply Systems
- Group 0599 - Specifications and Special Tools

The specifications and design information contained in this manual were correct at the time it was printed. It is John Deere's policy to continually improve and update our machines. Therefore, the specifications and design information are subject to change without notice. Wherever applicable, specifications and design information are in accordance with SAE and ICED standards.

Copyright 1980
DEERE & COMPANY
Moline, Illinois
All Rights Reserved

OO-A

SECTION AND GROUP CONTENTS OF THIS MANUAL—Continued

SECTION 9 - STEERING SYSTEM

- Group 0930 - Emergency Steering
- Group 0960 - Hydraulic System
- Group 0999 - Specifications and Special Tools

SECTION 10 - SERVICE BRAKES

- Group 1011 - Active Elements
- Group 1015 - Controls Linkage
- Group 1060 - Hydraulic System
- Group 1099 - Specifications and Special Tools

SECTION 11 - PARKING-EMERGENCY BRAKES

- Group 1111 - Active Elements
- Group 1115 - Controls Linkage
- Group 1199 - Specifications and Special Tools

SECTION 16 - ELECTRICAL SYSTEM

- Group 1671 - Batteries, Support and Cables
- Group 1672 - Alternator, Regulator and Charging System Wiring
- Group 1673 - Lighting System
- Group 1674 - Wiring Harness and Switches
- Group 1675 - System Controls
- Group 1676 - Instruments and Indicators
- Group 1699 - Specifications and Special Tools

SECTION 17 - FRAMES, CHASSIS OR SUPPORTING STRUCTURE

- Group 1740 - Frame Installation
- Group 1746 - Frame Bottom Guards
- Group 1799 - Specifications and Special Tools

SECTION 18 - OPERATOR'S STATION

- Group 1810 - Operator Enclosure
- Group 1821 - Seat and Seat Belt
- Group 1830 - Heating and Air Conditioning
- Group 1899 - Specifications and Special Tools

SECTION 19 - SHEET METAL AND STYLING

- Group 1910 - Hood or Engine Enclosure
- Group 1913 - Miscellaneous Shields
- Group 1921 - Grille and Grille Housing

SECTION 20 - SAFETY, CONVENIENCE AND MISCELLANEOUS

- Group 2001 - Radio
- Group 2002 - Mirror
- Group 2003 - Fire Extinguisher
- Group 2004 - Horn
- Group 2006 - Cigar Lighter
- Group 2099 - Specifications and Special Tools

SECTION 21 - MAIN HYDRAULIC SYSTEM

- Group 2160 - Hydraulic System
- Group 2199 - Specifications and Special Tools

SECTION 32 - BULLDOZERS

- Group 3201 - Blades
- Group 3215 - Controls Linkage
- Group 3260 - Hydraulic System
- Group 3299 - Specifications and Special Tools

SECTION 37 - ARCH OR BOOM, OR CRANES

- Group 3715 - Controls Linkage
- Group 3740 - Frames
- Group 3760 - Hydraulic System
- Group 3799 - Specifications and Special Tools

SECTION 38 - GRAPPLE

- Group 3803 - Grapple Mechanism
- Group 3813 - Shielding
- Group 3860 - Hydraulic System
- Group 3899 - Specifications and Special Tools

SECTION 39 - SHEAR

- Group 3901 - Blades and Cutting Elements
- Group 3903 - Tongue and Forks
- Group 3915 - Controls Linkage
- Group 3940 - Frame
- Group 3960 - Hydraulic System
- Group 3999 - Specifications and Special Tools

SECTION AND GROUP CONTENTS OF THIS MANUAL—Continued

SECTION 41 - MISCELLANEOUS FUNCTION MECHANICAL DRIVE

- Group 4125 - Input Drive Shafts
- Group 4141 - Housings and Covers
- Group 4151 - Gears, Shafts and Bearings
- Group 4152 - Clutch
- Group 4160 - Hydraulic System
- Group 4199 - Specifications and Special Tools

SECTION 43 - SWING, ROTATION OR PIVOTING SYSTEM

- Group 4315 - Controls
- Group 4350 - Mechanical Drive Elements
- Group 4360 - Hydraulic System
- Group 4399 - Specifications and Special Tools

SECTION 44 - CUTTING MECHANISMS

- Group 4401 - Blades
- Group 4440 - Frames
- Group 4460 - Hydraulic System
- Group 4499 - Specifications and Special Tools

SECTION 90 - SYSTEM TESTING

- Group 9005 - General Information
- Group 9010 - Engine
- Group 9015 - Electrical System
- Group 9015A - Electrical System (Automatic Control)
- Group 9020 - Power Train
- Group 9025 - Hydraulic System (Flow Meter)
- Group 9030 - Miscellaneous Components
- Group 9031 - Heating and Air Conditioning
- Group 9035 - Specifications and Special Tools

ALPHABETICAL INDEX

A

Accumulator, brake	1060-4
Active elements, service brakes	1011-3
After sales inspection	I-IV-27
Air conditioning and heating system testing ..	9031-1
Air filters	1830-34
Alternator, regulator and charging system wiring	1672-1
Automatic control circuit schematic	9015A-46
Axle housing	0250-4
Axle lock mounting	0243-1
Axle shaft, bearings, reduction gears	0250-1
Axle stabilizer cylinder	0260-7
Axle stabilizer valve	0260-1, 9025-18
Axle stabilizer valve testing	9015-32

B

Batteries, support and cables	1671-3
Blade control valve, bulldozers	3260-1
Blades and cutting elements	3901-3
Blades, bulldozer	3201-3
Blades (delimber knives)	4401-3
Block diagram	9015-3, 9015A-6
Blower motor	1830-32
Brake accumulator	1060-4, 9025-10
Brake system lines	1060-8
Brake valve	9025-11

C

C1 - C2 accumulators	0360-12
Camshaft and valve actuating means	0402-1
Cigar lighter	2006-1
Circuit protectors	1674-1
Clutch housings, transmission	0350-11
Clutch, mechanical drive	4152-1
Clutch valve linkage	0315-3
Cold weather starting aids	0505-3
Compressor	1830-5
Compressor relief valve	1830-30
Condenser	1830-21
Connecting rods and pistons	0403-1
Controls linkage, arch or boom	3715-3
Controls linkage, bulldozer	3215-1
Controls, swing, rotation system	4315-3
Cooling system	0510-1
Crankshaft and main bearings	0401-1
Cylinder block	0404-1
Cylinder, bulldozer	3260-5
Cylinder, delimber knives and feed rolls ..	4460-18
Cylinder head and valves	0409-1
Cylinders, steering	0960-10

D

(Delimber carriage), frames	4440-1
Delimber knives and feed rolls cylinders ...	4460-18
Delimber knives and feed roll valve	4460-1, 9025-22
Delivery service	I-IV-27
Diagnosing malfunctions	9015A-11, 9025-45
Differential housing with lock	0210-4
Differential case and cover	0210-1
Differential drive shaft, front	0225-3
Differential drive shaft, rear	0225-1
Differential, front	0210-1
Differential lock valve	0210-32, 9025-16
Differential lock valve hydraulics	0210-34
Differential or bevel drive	0210-1
Differential, rear	0210-1
Drive axle housing and support	0201-3

E

Electrical schematic complete	9015-43
Emergency steering	0930-3
Emergency steering accumulator	0930-3
Emergency steering low pressure warning switch	0930-6, 9025-15
Engine coolant heater	0505-5
Engine oil cooler	0419-1
Engine oiling system	0407-1
Engine removal and installation	0400-3
Engine system testing	9010-1
Engine ventilating system	0408-1
Evaporator core	1830-26
Exhaust manifold	0410-1
Expansion valve	1830-28
External exhaust systems	0530-1
External fuel supply systems	0560-1

F

Fan	0510-1
Fan belt tightener	0429-1
Fan drive	0429-1
Fan drive support	0429-3
Fire extinguisher	2003-1
Fire stack valve	9025-26
Fire suppression system	9015-41
Flywheel, housing and fastenings	0433-1
Forks and tongue	3903-3
Frames - arch or boom	3740-1
Frames (delimber carriage)	4440-1
Front differential	0210-1
Front differential drive shaft	0225-3
Fuel filter	0420-1
Fuel injection nozzles	0413-9
Fuel injection pump	0413-5
Fuel injection system	0413-1

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com