

Harvesting Units



TECHNICAL MANUAL
Harvesting
Units

TM1295 (01AUG83) English

John Deere Ottumwa Works TM1295 (01AUG83)

LITHO IN U.S.A. ENGLISH



HARVESTING UNITS TECHNICAL MANUAL TM-1295 (AUG-83)

CONTENTS

SECTION 10 - CORN HEAD UNITS

Group 05 - General Information

Group 10 - Diagnosing Malfunctions

Group 15 - Power Train

Group 20 - Corn Head Attaching Parts

SECTION 20 - MOWER BAR UNITS

Group 05 - General Information

Group 10 - Diagnosing Malfunctions

Group 15 - 1.83 m (6 ft) Reel

Group 20 - 3.66 m (12 ft) Reel

Group 25 - 1.83 m (6 ft) Main Drive Shaft

Group 30 - 3.66 m (12 ft) Main Drive Shaft

Group 35 - 1.83 m (6 ft) Auger

Group 40 - 3.66 m (12 ft) Auger

Group 45 - Knife Drive Case

Group 50 - Knives

SECTION 30 - PICKUP UNITS

Group 05 - Diagnosing Malfunctions

Group 10 - 1.68 m (5 1/2 ft) Hay Pickup

Group 15 - 2.14 m (7 ft) Hay Pickup

SECTION 40 - ROW-CROP UNITS

Group 05 - General Information

Group 10 - Diagnosing Malfunctions

Group 15 - 2-Row Row-Crop

Group 20 - 3-Row Row-Crop

Group 25 - Multi-Luber Repair (3-Row Only)

Group 30 - 4-Row Row-Crop

SECTION 50 - 483 AND 484 STALKERS

Group 05 - General Information

Group 10 - Diagnosing Malfunctions

Group 15 - Multi-Luber Repair

Group 20 - Row Units

Group 25 - Auger

Group 30 - Cutting Components

SECTION 60 - SPECIAL TOOLS

Group 05 - Purchased Tools

Group 10 - Fabricated Tools

All information, illustrations and specifications contained in this technical manual are based on the lastest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT* 1983
DEERE & COMPANY
Moline, Illinois
All rights reserved
A JOHN DEERE ILLUSTRUCTION

0000 A696583

INTRODUCTION

This technical manual is part of a twin concept of service:


FOS Manuals — for reference

Technical Manuals - for actual service

The two kinds of manuals work as a team to give you both the general background and technical details of shop service.

Fundamentals of Service (FOS) Manuals cover basic theory of operation, fundamentals of trouble shooting, general maintenance, and basic types of failures and their causes. FOS Manuals are for training new people and for reference by experienced technicians.

Technical Manuals are concise service guides for a specific machine. Technical Manuals are on-the-job guides containing only the vital information needed by an experienced technician.

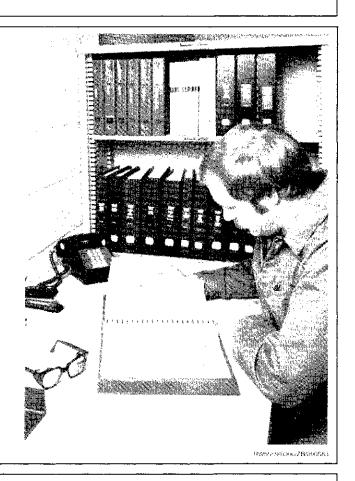


FEATURES OF THIS TECHNICAL MANUAL

- John Deere ILLUSTRATION format emphasizing more detailed pictures and fewer words.
- Instructions and illustrations grouped together in easy-to-use modules.
- Removal and installation groups preceding some repair groups. These groups show how to remove and install components from the machine rather than from major components. They also show how to acquire access to major components of a machine.
- Exploded views showing parts relationship.

This technical manual was planned and written for you — an experienced technician. Keep it in a permanent binder in the shop where it is handy. Refer to it whenever in doubt about correct service procedures or specifications.

Using the technical manual as a guide will reduce error and costly delay. It will also assure you the best in finished service work.

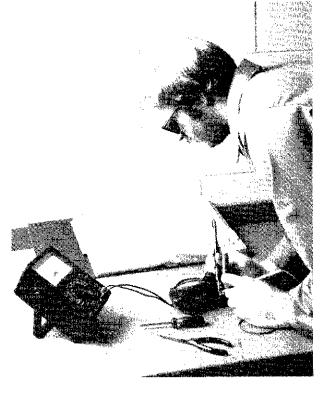

Depression Control

SAFETY MESSAGES



This safety alert symbol and the word **CAUTION** identify important safety messages in this manual and on the machine. When you see this symbol, be alert to the possibility of personal injury and carefully read the message that follows.

U10/010INT/C/090683

NOTES

The word *NOTE* is followed by a statement that identifies a qualification or exception to a previous statement. A "NOTE" may also identify nice-to-know information pertinent to, but not directly related to the previous statement.

U10/010INT/E/090683

OBSERVE SAFETY RULES



CAUTION: This safety alert symbol identifies important safety messages in this manual and on the machine. When you see this symbol, be alert to the possibility of personal injury and carefully read the message that follows.

Avoid loose clothing that can catch in moving parts and put you out of work.

Wear your safety glasses while on the job.

Avoid working on equipment with the engine running. If it is necessary to make checks with the engine running, ALWAYS USE TWO PEOPLE — with the operator, at the controls, able to see the person doing the checking. Also, place the transmission in neutral and set the brake. KEEP HANDS AWAY FROM MOVING PARTS.

Keep transmission and brake control units properly adjusted at all times. Before making adjustments, stop engine.

Before removing any housing covers, stop engine. Take all objects from your pockets which could fall into the opened housings. Don't let adjusting wrenches fall into opened housings.

Don't attempt to check belt tension while the engine is running.

Don't adjust the fuel system while the machine is in motion.



T27999/0000/B/090683

Thank you so much for reading. Please click the "Buy Now!" button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email: ebooklibonline@outlook.com