
John Deere 550B Crawler Dozer and 555B Crawler Loader

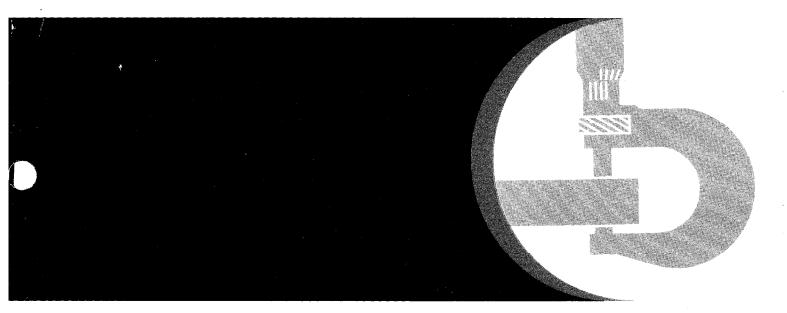



TECHNICAL MANUAL

550B CRAWLER DOZER AND 555B CRAWLER LOADER TECHNICAL MANUAL TM-1331 (AUG-87)

SECTION AND GROUP CONTENTS

SECTION I - GENERAL INFORMATION

Group I - Introduction and Safety Information

Group II - General Specifications

Group III - Torque Specifications Chart

for Cap Screws and Hydraulic Fittings

Group IV - Lubrication

SECTION 01 - TRACKS

Group 0130 - Track Systems

Track Chain, Track frame, Track Carrier Roller, Front Idler, Track Roller and Track Adjuster

SECTION 02 - AXLES AND SUSPEN-SION SYSTEMS

Group 0250 - Axle Shaft, Bearings, and Reduction Gears

Final Drive, Steering Clutch, Brake Band, Steering Clutch Housing and Linkage

SECTION 03 - TRANSMISSION

Group 0315 - Controls

Group 0350 - Gears, Shafts, Bearings, Power Shift Clutch, and Torque Converter

Group 0360 - Hydraulic System
Oil Pump, Transmission Control Valve,
Selector Valve, Oil Filter

SECTION 04 - ENGINE

Group 0400 - Removal and Installation

Group 0401 - Crankshaft and Main Bearings

Group 0402 - Camshaft and Valve Actuating Means

Group 0403 - Connecting Rods and Pistons

Group 0404 - Cylinder Block (Liners)

Group 0407 - Engine Oiling System

Group 0409 - Cylinder Head and Valves

Group 0410 - Exhaust Manifold

Group 0413 - Fuel Injection System

Group 0415 - Engine Balancer

Group 0416 - Turbocharger

Group 0417 - Water Pump

Group 0418 - Thermostats, Housing and Piping

Group 0419 - Engine Oil Cooler

Group 0420 - Fuel Filter

Group 0421 - Fuel Transfer Pump

Group 0422 - Starting System

Group 0433 - Flywheel, Housing and Fasteners

SECTION 05 - ENGINE AUXILIARY SYSTEMS

Group 0505 - Cold Weather Starting Aids

Group 0510 - Cooling Systems

Group 0515 - Speed Controls

Group 0560 - External Fuel Supply Systems

SECTION 06 - TORQUE CONVERTER

Group 0651 - Converter, Turbine, Gears, and Shafts (See Group 0350)

Continued on next page

All information, illustrations and specifications contained in this technical manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT® 1987
DEERE & COMPANY
Moline, Illinois
All rights reserved
A JOHN DEERE ILLUSTRUCTION
Previous Edition
Copywright® 1986 Deere & Company
Copywright® 1985 Deere & Company

T64;1331 16 310787

SECTION AND GROUP CONTENTS - Continued

SECTION 09 - STEERING SYSTEMS

Group 0960 - Power Steering

SECTION 15 - EQUIPMENT ATTACHING

Group 1511 - Drawbar

SECTION 16 - ELECTRICAL SYSTEM

Group 1671 - Batteries, Support, and Cables

Group 1672 - Alternator

Group 1674 - Wiring Harness and Switches

Group 1676 - Instruments and Indicators

SECTION 17 - FRAME, CHASSIS, OR SUPPORTING STRUCTURE

Group 1740 - Frame Installation

Group 1746 - Frame Bottom Guards

Group 1749 - Chassis Weights

Sprocket, Rear, and Bottom Counterweights

SECTION 18 - OPERATOR'S STATION

Group 1810 - Operator Enclosure

ROPS, Cab, Windshield Wiper Motor, Operator Seat, and Backhoe Seat

SECTION 19 - SHEET METAL

Group 1910 - Hood or Engine Enclosure

Grille and Grille Housing, Engine Side

Shields, Cowl and Cowl Support

SECTION 30 - WINCH

Group 3015 - Controls Linkage

Group 3050 - Winch Drive and Clutches

Group 3060 - Winch Hydraulic System

Winch Control Valve and Hydraulic Pump

SECTION 31 - LOADER

Group 3102 - Buckets

Group 3103 - Forks

Group 3115 - Controls Linkage

Group 3140 - Frames

Group 3160 - Hydraulic System

Loader Cylinders, Hydraulic Pump and

Loader Control Valve

SECTION 32 - BULLDOZER

Group 3201 - Blades

Group 3215 - Controls Linkage

Group 3240 - Frames

Group 3260 - Hydraulic System

Hydraulic Return Filter, Reservoir, Pump, Pump Drive, Dozer Control Valve, Auxiliary Valve, Selector Valve, Flow Divider and

Bulldozer Cylinders

SECTION 33A - BACKHOE - 9300

Group 3300A - Removal and Installation

Group 3302A - Bucket

Group 3315A - Controls Linkage

Group 3340A - Frames

Group 3360A - Hydraulic System

Control Valve, lift Check, Anti-Cavitation Valve, Relief Valve, Manifold Block and

Backhoe Cylinders

SECTION 33B - BACKHOE - 9550

Group 3300B - Removal and Installation

Group 3302B - Bucket

Group 3315B - Controls Linkage

Group 3340B - Frames

Group 3360B - Hydraulic System

Control Valve, Lift Check, Anti-cavitation Valve, Relief Valve, Manifold Block and

Backhoe Cylinders

SECTION 37 - LOG ARCH

Group 3740 - Arch Frames

SECTION 40 - WINCH DRIVE

Group 4051 - Gears, Shafts and Bearings

SECTION 42 - GROUND CONDITIONING TOOL

Group 4201 - Teeth and Shanks

Group 4240 - Frame

Group 4260 - Hydraulic System

SECTION 9005 - OPERATIONAL CHECK-OUT PROCEDURE

SECTION 9010 - ENGINE

Group 9010-05 - Theory of Operation

Group 9010-10 - System Operational Checks

Group 9010-15 - Diagnostic Information

Group 9010-20 - Adjustments

Group 9010-25 - Tests

Continued on next page

T64;1331 17 121185

SECTION AND GROUP CONTENTS—Continued

SECTION 9015 - ELECTRICAL SYSTEM

Group 9015-05 - Theory of Operation

Group 9015-10 - System Operational Checks

Group 9015-15 - Diagnostic Information

Group 9015-25 - Tests

SECTION 9020 - POWER TRAIN

Group 9020-05 - Theory of Operation

Group 9020-10 - System Operational Checks

Group 9020-15 - Diagnostic Information

Group 9020-20 - Adjustments

Group 9020-25 - Tests

SECTION 9025 - HYDRAULIC SYSTEM

Group 9025-05 - Theory of Operation

Group 9025-10 - System Operational Checks

Group 9025-15 - Diagnostic Information

Group 9025-25 - Tests

SECTION 9030 - MISCELLANEOUS COMPONENTS

Group 9030-05 - Theory of Operation

Group 9030-15 - Diagnostic Information

Group 9030-20 - Adjustments

Group 9030-25 - Tests

SECTION 99 - DEALER FABRICATED TOOLS

INTRODUCTION

This technical manual is part of a twin concept of service.


FOS Manuals - for reference

Technical Manuals - for actual service

The two kinds of manuals work as a team to give you both the general background and technical details of shop service.

Fundamentals of Service (FOS) Manuals cover basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic types of failures and their causes. FOS Manuals are for training new personnel and for reference by experienced technicians.

Technical Manuals are concise service guides for specific machines. Technical manuals are on-the-job guides containing only the vital information needed by an experienced service technician.

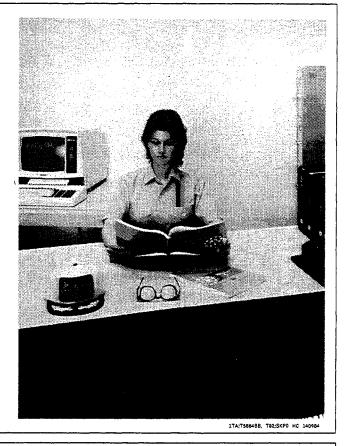


FEATURES OF THIS TECHNICAL MANUAL

- John Deere ILLUSTRUCTION format emphasizing detailed pictures and fewer words in easy-to-use modules.
- •Removal and installation groups preceding some repair groups.
- A section of system diagnostic testing.
- •Table of contents of all sections at the front of the manual and a listing of all groups and headings at the front of each section.
- •Essential tools and specifications listed at the front of each group they are used in.
- •Essential tools illustrated in numerical order at end of
- Alphabetical listing of all major components, specifications, and essential tools.
- ·Safety rules, general specifications, and lubrication specificaitons.

This technical manual was planned and written for you - an experienced service technician. Keep it in a permanent binder in the shop where it is handy. Refer to it when you need to know correct service procedures or specifications.

Using the technical manual as a guide will reduce error and costly delay. It will also assure you the best in finished service work.

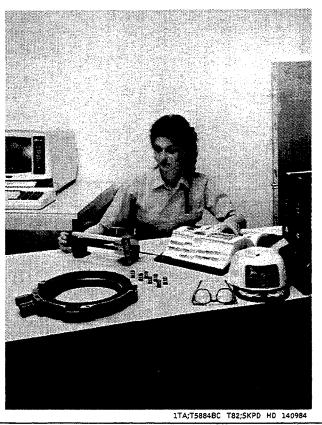

I-I-01

Thank you so much for reading.

Please click the "Buy Now!"

button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email: ebooklibonline@outlook.com