

5730 and 5830 Self Propelled Forage Harvesters



JOHN DEERE

TECHNICAL MANUAL 5730 and 5830 Self Propelled Forage Harvesters

TM1352 (03DEC93) English

John Deere Ottumwa Works
TM1352 (03DEC93)

LITHO IN U.S.A.
ENGLISH



Contents

SECTION 10—GENERAL

- Group 05—Safety
- Group 10—Specifications, Torques, and Special Tools
- Group 15—Tune-Up
- Group 20—Engine Removal

SECTION 20—ENGINE REPAIR (6466A)

SECTION 25—ENGINE REPAIR (6619A)

- Group 00—Specifications and Special Tools
- Group 05—Cylinder Head, Valves and Camshaft
- Group 10—Cylinder Block, Liners Pistons, and Rod
- Group 15—Crankshaft, Main Bearings, and Flywheel
- Group 20—Lubrication System
- Group 25—Cooling System

SECTION 30—FUEL AND AIR REPAIR

- Group 05—Air Intake System
- Group 10—Diesel Fuel System

SECTION 40—ELECTRICAL REPAIR

- Group 05—Battery Repair
- Group 10—Charging Circuit Repair
- Group 15—Starting Circuit Repair
- Group 20—Electrical Component Repair
- Group 25—Harness Repair
- Group 30—Metal Detector Repair
- Group 35—Rotary Screen Motor Repair
- Group 40—SPOUT-TRAK™ Repair

SECTION 50—POWER TRAIN

- Group 05—Hydrostatic Fitting Torques
- Group 10—Flushing Hydrostatic System
- Group 15—Hydrostatic Drive Repair
- Group 20—Transmission Repair
- Group 25—Differential Repair
- Group 30—Final Drive Repair
- Group 35—Cam Lobe Motor Repair
- Group 40—Power Rear Wheel Control Valve

SECTION 60—STEERING AND BRAKES REPAIR

- Group 05—Steering Unit Repair
- Group 10—Steering Cylinder and Tie Rod Repair
- Group 15—Brake Repair
- Group 20—Master Cylinder Repair
- Group 25—Slave Cylinder Repair

SECTION 70—HYDRAULIC REPAIR

- Group 05—Torque Hydraulic Fittings
- Group 10—Flushing the Hydraulic System
- Group 15—Hydraulic Reservoir
- Group 20—Knife Sharpener Motor Repair
- Group 25—Knife Sharpener Selector Valve Repair
- Group 30—Gear Case Cooling Pump Repair
- Group 35—Main Hydraulic Pump Repair
- Group 40—Priority and Relief Valves
- Group 45—Hydraulic Outlet
- Group 50—Harvesting Unit Lift Cylinder
- Group 55—Belt Tightener Cylinder
- Group 60—Spout Control Motor Repair
- Group 65—Electrohydraulic Valves

SECTION 80—MACHINE FUNCTIONS

- Group 05—Diagnosing malfunctions
- Group 10—Feed Roll Repair
- Group 15—Stationary Knife Adjuster Repair
- Group 20—Remove Roll Arm Repair
- Group 25—Cutterhead Knife Bracket
- Group 30—Cutterhead Repair
- Group 35—Knife Sharpener Repair
- Group 40—Feed Roll Gear Case Repair
- Group 45—Auger Repair
- Group 50—Fan and Spout Repair
- Group 55—Main Clutch Repair
- Group 60—Main Gear Case Repair

SECTION 90—OPERATOR'S STATION REPAIR

- Group 05—Pressurizer System
- Group 10—Air Conditioning System
- Group 15—Cab Removal
- Group 20—Heating System
- Group 25—Personal Posture™ Seat

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

TM1352-19-03DEC93

COPYRIGHT® 1993
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION® Manual
Previous Editions
Copyright® 1986 Deere & Company

10
20
25
30
40
50
60
70
80
90

Group 30—Miscellaneous Component

SECTION 100—KERNEL PROCESSOR REPAIR

Group 05—Kernel Processor

**SECTION 220—ENGINE OPERATION AND TESTS
(6466A)**

Group 05—System Operation

Group 10—System Operation and Tests

**SECTION 225—ENGINE OPERATION AND TESTS
(6619A)**

Group 05—System Operation

Group 10—System Tests And Diagnosis

SECTION 230—FUEL/AIR OPERATION AND TESTS

Group 05—Air Intake System

Group 10—Diesel Fuel System

SECTION 240—ELECTRICAL OPERATION AND TESTS

Group 05—Battery Testing

Group 10—Charging Circuit Diagnosis

Group 15—Starting Circuit Diagnosis

Group 20—Electrical Testing

Group 25—General Wiring Diagrams

Group 30—Iron Gard™ Metal Detector Diagnosis

Group 35—Rotary Air Screen Diagnosis

Group 40—Spout-Trak™ Diagnosis

Group 45—Electric Clutch Diagnosis

SECTION 250—POWER TRAIN OPERATION AND TESTS

Group 05—Diagnosing Power Train Malfunctions

Group 10—Power Train Operation and Tests

Group 15—Power Rear Wheel Drive Operation and Tests

SECTION 260—STEERING/BRAKES OPERATION

Group 05—Steering

Group 10—Brakes

SECTION 270—HYDRAULIC OPERATION AND TESTS

Group 05—Diagnosing Malfunctions

Group 10—Hydraulic System Operation

Group 15—Electrohydraulic Valve Operation

Group 20—Hydraulic Diagrams

Group 25—Hydraulic System Tests

SECTION 290—OPERATOR'S STATION OPERATION AND TESTS

Group 05—Diagnosing Malfunctions

Group 10—Pressurizer System

Group 15—Air Conditioning System Operation

Group 20—Air Conditioning System Tests and Diagnosis

Section 10 GENERAL

CONTENTS

	Page	Page
GROUP 05—SAFETY		
GROUP 10—SPECIFICATIONS, TORQUES, AND SPECIAL TOOLS		
Engine	10-10-1	
Hydrostatic System (Ground Drive)	10-10-2	
Lubrication System	10-10-2	
Fuel System	10-10-2	
Cooling System	10-10-2	
Electrical System	10-10-2	
Main Clutch (Blower Fan and Cutterhead Drive)	10-10-3	
Transmission	10-10-3	
Final Drive	10-10-3	
Weight (Less Harvesting Unit)	10-10-3	
Cutterhead	10-10-4	
Cutterhead Reverse Grinder	10-10-4	
Blower	10-10-4	
Augers (All Countries Except Europe)	10-10-4	
Augers (Europe)	10-10-4	
Power Rear Wheel Drive (Optional)	10-10-4	
Hydraulic System (Machine Functions)	10-10-5	
Brakes	10-10-5	
Operator's Cab	10-10-5	
Tire Options	10-10-5	
Maximum Ground Speed	10-10-6	
Capacities	10-10-7	
Dimensions	10-10-8	
English Torque Specifications	10-10-9	
Metric Torque Specifications	10-10-9	
GROUP 15—TUNE-UP		
Special Tools	10-15-1	
Other Materials	10-15-1	
General	10-15-2	
Preliminary Engine Testing	10-15-2	
Remove and Inspect Air Cleaner Elements	10-15-2	
Cleaning Primary Element	10-15-3	
Washing Primary Element	10-15-3	
Inspecting Primary Element	10-15-4	
Tighten Air Intake Connection	10-15-4	
Check Air Intake Restriction	10-15-5	
Clean Crankcase Vent Tube (5830)	10-15-5	
Cleaning the Radiator Condenser, Oil Cooler, and Vacuum Ducts	10-15-6	
Clean Rotary Screen	10-15-6	
Yearly Cooling System Flush	10-15-7	
Engine Coolant-Conditioner Filter	10-15-9	
Test Radiator and Cap.	10-15-9	
Adjust Alternator Belt	10-15-11	
Adjust Compressor Belt	10-15-12	
Check Fuel Filters	10-15-12	
Bleed Fuel System	10-15-12	
Check and Adjust Injection Pump Timing	10-15-13	
Check and Adjust Slow and Fast Idle Speeds	10-15-14	
Service Battery	10-15-14	
Make Final Engine Test	10-15-15	
Miscellaneous Checks	10-15-16	
GROUP 20—ENGINE REMOVAL		
Fabricated Tools	10-20-1	
Remove Engine	10-20-1	
Repair Engine	10-20-7	
Install Engine	10-20-7	
Remove Rotary Air Screen	10-20-8	

SAFETY AND YOU

This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury .



AB6;T81389 053;TMSAFE 071085

IMPORTANT

The **IMPORTANT** message identifies potential problems which may cause consequential damage to machine. Following recommended procedure will instruct technician how to avoid problem.

E03;;1005 V 190686

NOTES

The word *NOTE* is followed by a statement that identifies a qualification or exception to a previous statement. A "NOTE" may also identify nice-to-know information pertinent to, but not directly related to previous statement.

U10;010INT E 101281

KEEP RIDERS OFF MACHINE

Only allow the operator on the machine. Keep riders off.

Riders on machine are subject to injury such as being struck by foreign objects and being thrown off of the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.



AB6;TS173 053;RIDER 261184

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com