

7200 Front-Fold MaxEmerge®2 Drawn Conservation Planters

**John Deere Harvester Works
TM1366 (06JAN97)**

LITHO IN U.S.A.
ENGLISH

Introduction

FOREWORD

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.



This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

TO JOHN DEERE DEALERS:

IMPORTANT: Please remove this page and route through your service department.

This is a complete revision for TM-1366, 7200 Front-Fold MaxEmerge[®] 2 Drawn Conservation Planters, 8-Row Wide and 12-Row Narrow Flex-Fold, 12-Row Narrow Rigid-Fold Frame, 16-Row Narrow Flex-Fold Frame, and 24-Row Narrow Flex-Fold Frame.

Binder and tabs from old manual may be saved and used with this bound manual.

Listed is a brief explanation of “WHAT” was changed and “WHY” it was changed.

This manual was revised to include:

1. New 21 pin wiring harness connector to console.
2. OPTIONAL fold down markers for 12 row planters.
3. Vacuum blower control valve.
4. 12 row narrow flex-fold wing lock out valve.
5. Marker sequence valve for 12 row planters.
6. General update.

Contents

SECTION 10—General Information

- Group 05—Safety
- Group 10—Specifications
- Group 15—Predelivery, Delivery and After-Sale Services
- Group 20—Lubrication

SECTION 20—Electrical

- Group 05—Specifications
- Group 10—Warning Lamp
- Group 15—Operation
- Group 20—Diagnosing and Testing

SECTION 30—Hydraulic

- Group 05—Specifications
- Group 10—Operation
- Group 15—Vacuum Meter
- Group 20—Cylinders
- Group 25—Flow Dividers
- Group 30—Solenoid Valves

SECTION 40—Drives

- Group 05—Specifications
- Group 10—Drive Wheels
- Group 15—Countershaft Drive System
- Group 20—Seed Drive Transmission
- Group 25—Clutch
- Group 30—Fertilizer Drive

SECTION 50—Planting Units

- Group 05—Vacuum Seed Metering Mechanisms
- Group 10—Plateless Seed Metering Mechanisms
- Group 15—Plate Meter
- Group 20—Checking Seed Population
- Group 25—Seed Openers
- Group 30—Closing Wheels
- Group 35—Insecticide/Herbicide Meter
- Group 40—Coulter/Single-Disk Fertilizer Opener

SECTION 60—Planter Run-In

- Group 05—Planter Run-In

SECTION 70—Population Check In Field

- Group 05—General Information

Index

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

TM1366-19-06JAN97

COPYRIGHT© 1994
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION™ Manual
Previous Editions
Copyright 1992, 1989, 1988 Deere & Company

Section 10 General Information

Contents

Page

| | |
|---|----------|
| Group 05—Safety | 10-05-1 |
| Group 10—Specifications | 10-10-1 |
| Group 15—Predelivery, Delivery and After-Sale Services | 10-15-1 |
| Group 20—Lubrication | |
| General Purpose Grease | 10-20-1 |
| Lubrication Symbols | 10-20-2 |
| Roller Chain and Pesticide Gear Lubrication | 10-20-3 |
| PTO Drive Hydraulic Pump for Vacuum Meter | 10-20-4 |
| Wheel Arms and Cylinder Pins | 10-20-4 |
| Gauge Wheels, Tillage Bracket and Hitch | 10-20-5 |
| Hitch | 10-20-5 |
| Drawbar Pin, Hinge Pin and Pivot Pins | 10-20-5 |
| Pivot Pins | 10-20-6 |
| Seed Transmission Drive Chains | 10-20-6 |
| Single-Disk Fertilizer Opener | 10-20-7 |
| Unit Mounted Coulter | 10-20-7 |
| Fertilizer Drive Chain | 10-20-8 |
| Shut Off Valve and Hinge Pin | 10-20-9 |
| 12-Row Rigid-Fold | 10-20-9 |
| 16- and 24-Row Narrow | 10-20-10 |
| Alternative Lubricants and Special Lubricants | 10-20-12 |
| Special Lubricants for Vacuum Seed Meters | 10-20-12 |
| Finger Pickup and Plate Meters Only | 10-20-13 |

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com