


70
Excavator
Repair
Operation and Tests

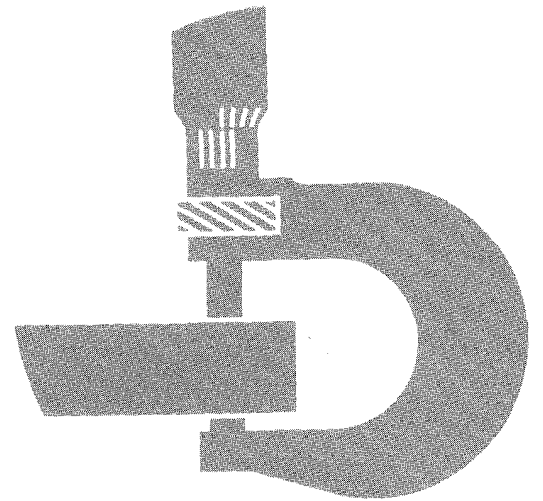

TECHNICAL MANUAL

TM1376 (20MAR90)

Litho in U.S.A.

SECTION AND GROUP CONTENTS

SECTION I—GENERAL INFORMATION

- Group I—Introduction and Safety Information
- Group II—General Specifications
- Group III—Torque Values
- Group IV—Lubrication
- Group V—Inspection Procedures

SECTION 01—TRACKS

- Group 0130—Track Systems
 - Upper Roller, Lower Roller, Front Idler, Metal Face Seals, Track Adjuster, Track Shoe, Sprocket, Track Link, Bushing and Pin, Track Chain

SECTION 02—AXLES AND SUSPENSION (PROPEL)

- Group 0250—Axle Shafts, Bearings and Reduction Gears
 - Travel Gearbox and Park Brake, Metal Face Seals
- Group 0260—Hydraulic System
 - Counterbalance Valve, Travel Motor, Rotary Manifold

SECTION 04—ENGINE

- Group 0400—Removal and Installation

NOTE: For engine repair, see CTM-4. For removal and installation of components with engine in unit, see the following groups.

SECTION 04—ENGINE—Continued

- Group 0402—Camshaft and Valve Actuating Means
- Group 0409—Cylinder Head and Valves
- Group 0410—Exhaust Manifold
- Group 0413—Fuel Injection System
- Group 0414—Intake Manifold
- Group 0417—Water Pump
- Group 0418—Thermostats, Housings and Water Piping
- Group 0419—Oil Cooler
- Group 0420—Fuel Filter
- Group 0421—Fuel Transfer Pump
- Group 0422—Starting Motor and Fastenings

SECTION 05—ENGINE AUXILIARY SYSTEM

- Group 0505—Cold Weather Starting Aids
- Group 0510—Cooling Systems

SECTION 16—ELECTRICAL SYSTEMS

- Group 1671—Batteries, Support and Cables
- Group 1672—Alternator, Regulator and Charging System Wiring
- Group 1676—Instruments and Indicators

SECTION 32—BULLDOZER

- Group 3260—Hydraulic System
 - Control Valve, Switch Valve, Hydraulic Pump, Pilot Pump, Pilot Pump Relief Valve, Pump Regulator, Shuttle, Cylinders

Continued on next page

All information, illustrations and specifications contained in this technical manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT© 1990
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION™ Manual
Previous Editions
Copyright© 1987,1986 Deere & Company

SECTION 33—EXCAVATOR

- Group 3360—Hydraulic System
 - Control Valve, Switch Valve, Hydraulic Pump, Pilot Pump, Pilot Pump Relief Valve, Pump Regulator, Shuttle, Cylinders

SECTION 43—SWING, ROTATION OR PIVOTING SYSTEM

- Group 4350—Mechanical Drive Elements
 - Swing Gearbox, Swing Bearing Seal
- Group 4360—Hydraulic System
 - Swing Lock and Crossover Relief Valve, Swing Motor

SECTION 9005—OPERATIONAL CHECK-OUT PROCEDURE

- Group 10—System Operational Checks

SECTION 9010—ENGINE OPERATION AND TESTS

- Group 05—Theory of Operation
- Group 10—System Operational Checks
- Group 15—Diagnostic Information
- Group 20—Adjustments
- Group 25—Tests

SECTION 9015—ELECTRICAL SYSTEM OPERATION AND TESTS

- Group 05—Theory of Operation
- Group 10—System Operational Checks
- Group 15—Diagnostic Information
- Group 25—Tests

SECTION 9020—POWER TRAIN OPERATION AND TESTS

- Group 05—Theory of Operation
- Group 10—System Operational Checks
- Group 15—Diagnostic Checks
- Group 20—Adjustments
- Group 25—Tests

SECTION 9025—HYDRAULIC SYSTEM OPERATION AND TESTS

- Group 05—Theory of Operation
- Group 10—System Operational Checks
- Group 15—Diagnostic Information
- Group 20—Adjustments
- Group 25—Tests

SECTION 99—DEALER FABRICATED TOOLS

- Group 9900—Dealer Fabricated Tools

HANDLE FLUIDS SAFELY—AVOID FIRES

When you work around fuel, do not smoke or work near heaters or other fire hazards.

Store flammable fluids away from fire hazards. Do not incinerate or puncture pressurized containers.

Make sure machine is clean of trash, grease, and debris.

Do not store oily rags; they can ignite and burn spontaneously.



TS227 -JUN-23AUG88

O53,FLAME -19-26JAN90

PREVENT BATTERY EXPLOSIONS

Keep sparks, lighted matches, and open flame away from the top of battery. Battery gas can explode.

Never check battery charge by placing a metal object across the posts. Use a volt-meter or hydrometer.

Do not charge a frozen battery; it may explode. Warm battery to 16°C (60°F).



TS204 -JUN-23AUG88


O53,SPARKS -19-26JAN90

PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

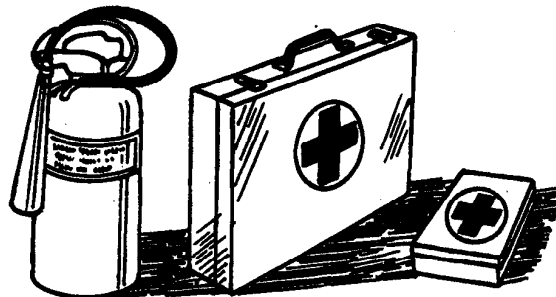

TS291 -JUN-23AUG88

O53,FIRE2 -19-26JAN90

PREVENT ACID BURNS

Sulfuric acid in battery electrolyte is poisonous. It is strong enough to burn skin, eat holes in clothing, and cause blindness if splashed into eyes.

Avoid the hazard by:


1. Filling batteries in a well-ventilated area.
2. Wearing eye protection and rubber gloves.
3. Avoiding breathing fumes when electrolyte is added.
4. Avoiding spilling or dripping electrolyte.
5. Use proper jump start procedure.

If you spill acid on yourself:

1. Flush your skin with water.
2. Apply baking soda or lime to help neutralize the acid.
3. Flush your eyes with water for 10—15 minutes. Get medical attention immediately.

If acid is swallowed:

1. Drink large amounts of water or milk.
2. Then drink milk of magnesia, beaten eggs, or vegetable oil.
3. Get medical attention immediately.

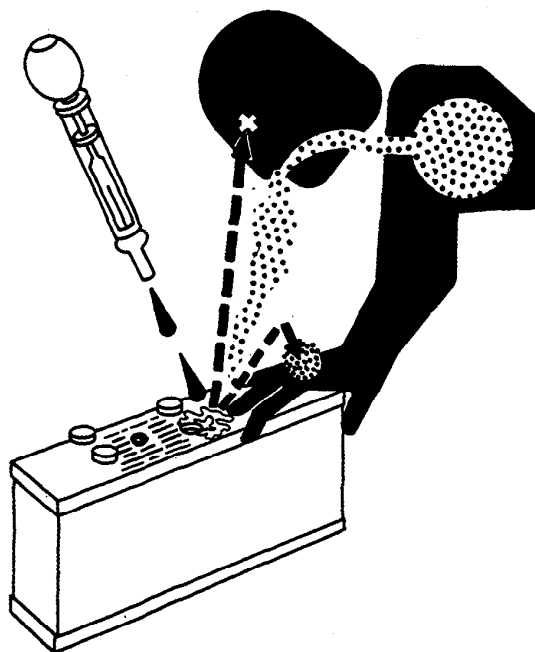

TS203
-JUN-25AUC88

O53,POISON -19-26JAN80

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com