

Technical Manual

**John Deere
925, 935, 945,
955, 965 and 975
Combines**

TM-4307



CONTENTS

SECTION 10 — GENERAL

- Group 5 — Specifications
- Group 10 — Pre-delivery, delivery and after-sales inspections
- Group 15 — Lubrication and periodic service
- Group 20 — Engine and combine tune-up
- Group 25 — Combine separation

SECTION 20 — ENGINE

- Group 5 — General information and diagnosing malfunctions
- Group 10 — Cylinder head, camshaft and balancer shafts
- Group 15 — Cylinder block, liners, pistons and connecting rods
- Group 20 — Crankshaft, main bearings and flywheel
- Group 25 — Timing gear train
- Group 30 — Engine lubricating system
- Group 35 — Engine cooling system
- Group 40 — Air intake system
- Group 45 — Speed control linkage

SECTION 30 — FUEL SYSTEM

- Group 5 — Diagnosing malfunctions
- Group 10 — Fuel tank, water trap, transfer pump and fuel filter
- Group 15 — Roto Diesel fuel injection pump
- Group 20 — Roosa Master fuel injection pump, "DM 4" type
- Group 25 — Roosa Master fuel injection nozzles
- Group 30 — Cold weather starting aids

SECTION 40 — ELECTRICAL SYSTEM

- Group 5 — Diagnosing malfunctions
- Group 10 — Components and wiring diagram
- Group 15 — Starting motor
- Group 20 — Alternator

SECTION 50 — POWER TRAIN

- Group 5 — Engine clutch and clutch linkage - combines 925, 935, 945
- Group 10 — Engine clutch and clutch linkage - combine 955
- Group 15 — Engine clutch - combines 965 and 975
- Group 18 — Reverser clutch, control and linkage - combines 965 and 975
- Group 20 — Front axle - combines 925, 935, 945
- Group 25 — Front axle - combines 955, 965 and 975
- Group 30 — Track system - combines 965 and 975
- Group 35 — Separator drive
- Group 40 — Variable drives
- Group 45 — POSI TORQ ground drive - combine 975

SECTION 60 — BRAKES AND REAR AXLE

- Group 5 — Parking brake combines 925, 935, 945
- Group 10 — Parking brake - combines 955, 965, 975
- Group 15 — Footbrakes
- Group 20 — Rear axle
- Group 25 — V-support for wide rear axle - combine 975

SECTION 70 — HYDRAULIC SYSTEM

- Group 5 — General information, and diagnosing malfunctions
- Group 10 — Pressure tests
- Group 15 — Hydraulic oil reservoir, filter, suction and pressure lines
- Group 20 — Hydraulic pump and flow driver
- Group 25 — Tandem (dual-gear) hydraulic pump - combines 965 and 975
- Group 30 — Single and three-spool control valves - combines 925 to 955
- Group 35 — Seven - spool control valves - combines 965 and 975
- Group 40 — Hydraulic cylinders
- Group 45 — Nitrogen accumulators
- Group 50 — Hydrostatic steering
- Group 55 — Hydraulic brakes
- Group 60 — Hydraulic clutch control-combines 965 and 975

CONTENTS (Contd.)

SECTION 100 — CUTTING PLATFORM AND CORN HEAD

- Group 5 — General information and diagnosing malfunctions
- Group 10 — Cutting platform and knife drive
- Group 15 — Corn head
- Group 20 — Corn head gear case

SECTION 110 — FEEDER HOUSE

- Group 5 — General information and diagnosing malfunctions
- Group 10 — Feeder house


SECTION 120 — SEPARATOR AND CLEANING UNIT

- Group 5 — General information and diagnosing malfunctions
- Group 10 — Threshing Cylinder
- Group 15 — Concave
- Group 20 — Beater
- Group 25 — Cross shaker
- Group 30 — Straw walkers, cleaning shoe with sieves and fan

SECTION 130 — ELEVATORS, GRAIN TANK AND GRAIN TANK UNLOADING AUGERS

- Group 5 — General information and diagnosing malfunctions
- Group 10 — Clean grain auger and elevator
- Group 15 — Lower tailings auger, elevator and upper auger
- Group 20 — Grain tank leveling auger and unloading augers
- Group 25 — Outer unloading auger and housing

Introduction

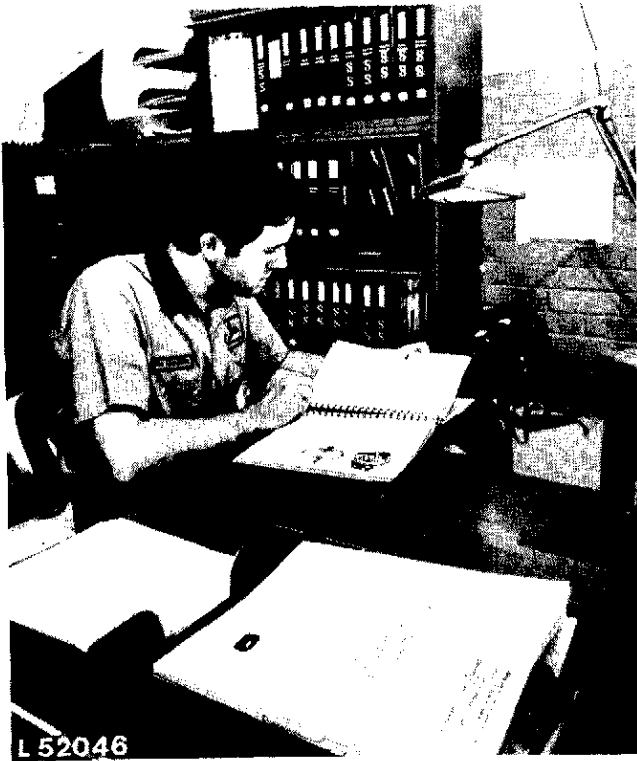

Use FOS Manuals for Reference

This technical manual is part of a twin concept of service:

- FOS Manuals — for reference
- Technical Manuals — for actual service

The two kinds of manuals work as a team to give you both the general background and technical details of shop service.

Fundamentals of Service (FOS) Manuals cover basic theory of operation, fundamentals of trouble shooting, general maintenance, and basic types of failures and their causes. FOS Manuals are for training new personnel and for reference by experienced technicians.

Technical Manuals are concise service guides for a specific machine. Technical Manuals are on-the-job guides containing only the vital information needed by an experienced technician.

IMPORTANT: Your technical manual contains the new SI metric measurements which have been standardized internationally.

Example:

New	Old
10 N (Newton)	1 kp
10 Nm (Newton-Meter)	1 mkp
1 bar	1 kp/cm ²
1 kW	= 1.36 PS (1.34 HP)



Use Technical Manuals for Actual Service



When a technician should refer to a FOS Manual for more information, a FOS symbol like the one at the left is used in the TM to identify the reference.

Some features of this technical manual:

- Table of contents on page 3 of Manual
- Contents at front of each Section
- Exploded views showing parts relationship
- Photos showing service techniques
- Specifications at end of each Group
- Special tools at end of each Group

This technical manual was planned and written for you — an experienced technician. Keep it in a permanent binder in the shop where it is handy. Refer to it whenever in doubt about correct service procedures or specifications.

Using the technical manual as a guide will reduce error and costly delay. It will also assure you the best in finished service work.



This safety alert symbol identifies important safety messages in this manual. When you see this symbol, be alert to the possibility of personal injury and carefully read the message that follows.

Section 10

General 10

CONTENTS OF THIS SECTION

	Page		Page
GROUP 5 — GENERAL		Removal and Installation of Front Axle —	
Serial numbers	5-3	Combines 925, 935 and 945	
Model numbers	5-5	Removal	25-10
Specifications	5-5	Installation	25-12
GROUP 10 — PREDELIVERY INSPECTION,		Removal and Installation of Front Axle —	
DELIVERY SERVICE AND		Combines 955, 965 and 975	
AFTER-SALES INSPECTION		Removal	25-13
Predelivery inspection	10-1	Installation	25-14
Delivery service	10-6	Removal and Installation of Transmission —	
After-sales inspection	10-7	Combines 925, 935 and 945	
GROUP 15 — LUBRICATION AND		Removal	25-14
PERIODIC SERVICE		Installation	25-15
General information	15-1	Removal and Installation of Transmission —	
GROUP 20 — ENGINE AND COMBINE		Combines 955, 965 and 975	
TUNE-UP AND ADJUSTMENTS		Removal	25-15
General information	20-1	Installation	25-16
Preliminary engine testing	20-1	Removal and Installation of Final Drives —	
Engine tune-up	20-3	Combines 955, 965 and 975	
Checking engine performance	20-4	Removal	25-17
Combine adjustments	20-4	Installation	25-17
Standard torques	20-6	Removal and Installation of Rear Axle —	
Special tools	20-7	Combines 925, 935, 945 and 955	
GROUP 25 — SEPARATION		Removal	25-17
Removal and Installation of Engine —		Installation	25-18
Combines 925 and 935		Removal and Installation of Rear Axle —	
General information	25-1	Combines 965 and 975	
Removal	25-1	Removal	25-18
Installation	25-3	Installation	25-19
Removal and Installation of Engine —		Removal and Installation of Hydraulic	
Combines 945 and 955		Steering Unit	
General information	25-3	Removal	25-19
Removal	25-3	Installation	25-20
Installation	25-5		
Removal and Installation of Engine —			
Combines 965 and 975			
General information	25-6		
Removal	25-6		
Installation	25-10		

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com