

# TM

## Technical Manual

### John Deere Mechanical Front Wheel Drive for Tractors 1030, 1130, 1630, 1830 and 2030

**TM-4326**



# Mechanical Front Wheel Drive for JD 1030, 1130, 1630, 1830 and 2030 Tractors

Technical Manual  
TM-4326 (Aug-76)

## Group Index

---

Description, Operation and Specifications

**5**

---

Drive Train

**10**

---

Multi-Disk Clutch and Solenoid

**15**

---

Drive Shaft

**20**

---

Front Axle

**25**

Copyright © 1976  
DEERE & COMPANY  
European Office  
D 68 Mannheim  
All rights reserved

All information, illustrations, and specifications contained in this technical manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

## TABLE OF CONTENTS

GROUP 5 — DESCRIPTION, OPERATION AND SPECIFICATIONS		GROUP 25 — FRONT AXLE	
	Page		Page
Description . . . . .	5-1	Removal . . . . .	25-2
Tumbler (operating) Switch . . . . .	5-1	Disassembly . . . . .	25-2
Solenoid . . . . .	5-1	Jointed Wheel Drive Shaft . . . . .	25-2
Drive Train . . . . .	5-2	Differential . . . . .	25-3
Multiple-Disk Clutch . . . . .	5-2	Axle Flange Housing and	
Drive Shaft . . . . .	5-3	Steering Knuckle . . . . .	25-4
Front Axle . . . . .	5-3	Front Axle Centerpiece . . . . .	25-5
Operation . . . . .	5-5	Inspection and Repair . . . . .	25-6
Electrical Control Circuit . . . . .	5-5	Wheel Flange, Steering Knuckle	
Hydraulic Oil Flow . . . . .	5-6	Housing, Steering Knuckle and	
Drive Train . . . . .	5-9	Axle Flange Housing . . . . .	25-6
Specifications . . . . .	5-10	Double-Jointed Drive Shaft . . . . .	25-8
		Differential . . . . .	25-8
		Components of Front Axle Centerpiece . . . . .	25-9
		Assembly . . . . .	25-9
		Front Axle Centerpiece . . . . .	25-9
		Differential . . . . .	25-9
		Axle Flange Housing and	
		Steering Knuckle . . . . .	25-10
		Double-Jointed Wheel Drive Shaft . . . . .	25-10
		Steering Knuckle Housing	
		and Wheel Flange . . . . .	25-11
		Adjustments . . . . .	25-12
		Cone Point Adjustment, Input Shaft	
		to Ring Gear . . . . .	25-12
		Preload Adjustment of	
		Input Shaft Bearing . . . . .	25-13
		Backlash Adjustment between Input	
		Shaft and Ring Gear . . . . .	25-14
		Preload Adjustment of Taper Bearings	
		in Knuckle Housing . . . . .	25-15
		Rolling Drag Torque Adjustment	
		of Wheel Flange . . . . .	25-16
		End Play Adjustment of	
		Bellcrank . . . . .	25-16
		Installation . . . . .	25-16
		Front Wheel Toe-In Check and	
		Adjustment . . . . .	25-16
		Front Wheel Steering Angle	
		Adjustment . . . . .	25-17
		Specifications . . . . .	25-18
		Torques for Hardware . . . . .	25-21
		Special Tools . . . . .	25-22
GROUP 10 — DRIVE TRAIN			
Removal . . . . .	10-1		
Repair . . . . .	10-3		
Adjustments . . . . .	10-4		
Installation . . . . .	10-7		
Specifications . . . . .	10-8		
Torques for Hardware . . . . .	10-10		
Special Tools . . . . .	10-10		
GROUP 15 — MULTIPLE-DISK CLUTCH AND SOLENOID			
Multiple-Disk Clutch . . . . .	15-1		
Removal . . . . .	15-1		
Disassembly . . . . .	15-2		
Inspection and Repair . . . . .	15-4		
Assembly . . . . .	15-4		
Installation and Adjustment . . . . .	15-5		
Solenoid . . . . .	15-7		
Repair . . . . .	15-7		
Specifications . . . . .	15-8		
Torques for Hardware . . . . .	15-9		
GROUP 20 — DRIVE SHAFT			
Removal . . . . .	20-1		
Repair . . . . .	20-2		
Installation . . . . .	20-3		
Torques for Hardware . . . . .	20-3		

---

## FOREWORD

This technical manual is a concise guide for the serviceman, containing all the vital information he requires on the Mechanical Front Wheel Drive for the JD Tractors 1030, 1130, 1630, 1830 and 2030.

The table of contents at front of the manual enables the serviceman to easily find detailed information and special characteristics of each group.

The characteristics of each subassembly group of the front wheel drive include: removal, disassembly, repair, assembly, installation, adjustments, specifications, hardware torques and special tools.

Specifications, hardware torques and special tools are shown together at the end of each group.

**IMPORTANT:** Your technical manual contains the new SI metric measurements which have been standardized internationally.

**Example:**

New	Old
10 N (Newton)	1 kp
10 Nm (Newton-Meter)	1 mkp
1 bar	1 kp/cm <sup>2</sup>
1 kW = 1.36 PS (1.34 HP)	

This technical manual was planned and written for you — the serviceman.

Always keep it handy in the workshop, ready for reference, whenever in doubt about correct service or specifications.

Using the technical manual as a guide during servicing will reduce error and costly delay. It will also assure you the best in finished service work.

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)