

Magnum 260
Magnum 290
Magnum 315
Magnum 340
TIER 3
Tractor

SERVICE MANUAL

Part number 47681312

English

May 2017

© 2017 CNH industrial Latin America LTDA. All Rights Reserved.



Link Product / Engine

| Product | Market Product | Engine |
|--------------------------------------|-----------------------|----------------|
| Magnum™ 260 18x4, with cab, tier 3 | Latin America | F2CFP614E*H003 |
| Magnum™ 290 18x4, com cabine, Tier 3 | Latin America | F2CFP614D*H003 |
| Magnum™ 315 18x4, with cab, tier 3 | Latin America | F2CFP614C*H003 |
| Magnum™ 340 18x4, with cab, tier 3 | Latin America | F2CFP614B*H003 |

Contents

INTRODUCTION

| | |
|---|------|
| Engine..... | 10 |
| [10.001] Engine and crankcase | 10.1 |
| [10.114] Pump drives | 10.2 |
| [10.202] Air cleaners and lines | 10.3 |
| [10.216] Fuel tanks | 10.4 |
| [10.310] Aftercooler..... | 10.5 |
| [10.400] Engine cooling system | 10.6 |
| [10.414] Fan and drive | 10.7 |
| Power coupling..... | 19 |
| [19.100] Drive shaft..... | 19.1 |
| Transmission..... | 21 |
| [21.105] Powershift transmission hydraulic components | 21.1 |
| [21.113] Powershift transmission | 21.2 |
| [21.135] Powershift transmission external controls..... | 21.3 |
| [21.155] Powershift transmission internal components..... | 21.4 |
| [21.200] Dropbox | 21.5 |
| [21.900] Hydraulic pump drive..... | 21.6 |
| Four-Wheel Drive (4WD) system | 23 |
| [23.202] Electro-hydraulic control | 23.1 |
| [23.314] Drive shaft..... | 23.2 |
| Front axle system | 25 |
| [25.100] Powered front axle | 25.1 |
| [25.102] Front bevel gear set and differential | 25.2 |
| [25.108] Final drive hub, steering knuckles, and shafts | 25.3 |
| [25.122] Axle suspension control..... | 25.4 |

| | |
|---|-----------|
| Rear axle system | 27 |
| [27.100] Powered rear axle..... | 27.1 |
| [27.106] Rear bevel gear set and differential..... | 27.2 |
| [27.120] Planetary and final drives | 27.3 |
| Power Take-Off (PTO) | 31 |
| [31.104] Rear electro-hydraulic control..... | 31.1 |
| [31.110] One-speed rear Power Take-Off (PTO) | 31.2 |
| [31.114] Two-speed rear Power Take-Off (PTO) | 31.3 |
| [31.146] Front Power Take-Off (PTO) | 31.4 |
| Brakes and controls | 33 |
| [33.110] Parking brake or parking lock | 33.1 |
| [33.202] Hydraulic service brakes | 33.2 |
| [33.224] Trailer brake pneumatic control | 33.3 |
| Hydraulic systems | 35 |
| [35.000] Hydraulic systems..... | 35.1 |
| [35.102] Pump control valves..... | 35.2 |
| [35.106] Variable displacement pump | 35.3 |
| [35.114] Three-point hitch control valve | 35.4 |
| [35.204] Remote control valves | 35.5 |
| [35.300] Reservoir, cooler, and filters..... | 35.6 |
| [35.304] Combination pump units | 35.7 |
| Pneumatic system | 36 |
| [36.100] Pneumatic system..... | 36.1 |
| Hitches, drawbars, and implement couplings | 37 |
| [37.110] Rear three-point hitch | 37.1 |
| Steering | 41 |
| [41.101] Steering control | 41.1 |
| [41.200] Hydraulic control components..... | 41.2 |

| | |
|---|-----------|
| [41.206] Pump | 41.3 |
| Cab climate control | 50 |
| [50.100] Heating | 50.1 |
| [50.200] Air conditioning | 50.2 |
| [50.300] Cab pressurizing system | 50.3 |
| Electrical systems | 55 |
| [55.100] Harnesses and connectors | 55.1 |
| [55.015] Engine control system | 55.2 |
| [55.302] Battery | 55.3 |
| [55.010] Fuel injection system | 55.4 |
| [55.014] Engine intake and exhaust system | 55.5 |
| [55.012] Engine cooling system | 55.6 |
| [55.640] Electronic modules | 55.7 |
| [55.024] Transmission control system | 55.8 |
| [55.020] Transmission speed sensors | 55.9 |
| [55.045] Front axle control system | 55.10 |
| [55.030] Service brake electrical system | 55.11 |
| [55.032] Trailer brake electrical system | 55.12 |
| [55.035] Remote control valve electric control | 55.13 |
| [55.130] Rear three-point hitch electronic control system | 55.14 |
| [55.408] Warning indicators, alarms, and instruments | 55.15 |
| Platform, cab, bodywork, and decals | 90 |
| [90.100] Engine hood and panels | 90.1 |
| [90.102] Engine shields, hood latches, and trims | 90.2 |
| [90.124] Pneumatically-adjusted operator seat | 90.3 |
| [90.150] Cab | 90.4 |
| [90.151] Cab interior | 90.5 |

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com