

**Farmall 55C**  
**Farmall 65C**  
**Farmall 75C**  
Efficient Power - Tractor

*PIN ZDAL00012 and above*

**SERVICE MANUAL**

Part number 47772181

English

September 2014

Copyright © 2014 CNH Industrial Italia S.p.A. All Rights Reserved.



## Link Product / Engine

Product	Market Product	Engine
Farmall® 55C senza cabina	Australia New Zealand	F5DFL463C*F004
Farmall® 55C senza cabina	Europe	F5DFL463C*F004
Farmall® 55C senza cabina	Asia Pacific	F5DFL463C*F004
Farmall® 55C senza cabina	Middle East Africa	F5DFL463C*F004
Farmall® 55C con cabina	Middle East Africa	F5DFL463C*F004
Farmall® 55C con cabina	Europe	F5DFL463C*F004
Farmall® 55C con cabina	Asia Pacific	F5DFL463C*F004
Farmall® 55C con cabina	Australia New Zealand	F5DFL463C*F004
Farmall® 65C senza cabina	Australia New Zealand	F5DFL463B*F006
Farmall® 65C senza cabina	Europe	F5DFL463B*F006
Farmall® 65C senza cabina	Asia Pacific	F5DFL463B*F006
Farmall® 65C senza cabina	Middle East Africa	F5DFL463B*F006
Farmall® 65C con cabina	Middle East Africa	F5DFL463B*F006
Farmall® 65C con cabina	Europe	F5DFL463B*F006
Farmall® 65C con cabina	Asia Pacific	F5DFL463B*F006
Farmall® 65C con cabina	Australia New Zealand	F5DFL463B*F006
Farmall® 75C senza cabina [ZxALxxxxx]	Europe	F5DFL463A*F017
Farmall® 75C senza cabina [ZxALxxxxx]	Australia New Zealand	F5DFL463A*F017
Farmall® 75C senza cabina [ZxALxxxxx]	Asia Pacific	F5DFL463A*F017
Farmall® 75C senza cabina [ZxALxxxxx]	Middle East Africa	F5DFL463A*F017
Farmall® 75C con cabina [ZxALxxxxx]	Europe	F5DFL463A*F017
Farmall® 75C con cabina [ZxALxxxxx]	Middle East Africa	F5DFL463A*F017
Farmall® 75C con cabina [ZxALxxxxx]	Asia Pacific	F5DFL463A*F017
Farmall® 75C con cabina [ZxALxxxxx]	Australia New Zealand	F5DFL463A*F017

# Contents

---

## INTRODUCTION

<b>Engine</b> .....	<b>10</b>
[10.001] Engine and crankcase .....	10.1
[10.216] Fuel tanks .....	10.2
[10.501] Exhaust Gas Recirculation (EGR) - Diesel Particulate Filter (DPF) exhaust treatment .....	10.3
[10.414] Fan and drive .....	10.4
<b>Clutch</b> .....	<b>18</b>
[18.100] Clutch mechanical release control .....	18.1
[18.104] Clutch hydraulic release control.....	18.2
[18.110] Clutch and components .....	18.3
<b>Transmission</b> .....	<b>21</b>
[21.114] Mechanical transmission .....	21.1
[21.140] Mechanical transmission internal components.....	21.2
[21.112] Power shuttle transmission.....	21.3
[21.134] Power shuttle transmission external controls .....	21.4
[21.104] Power shuttle transmission lubrication system.....	21.5
[21.154] Power shuttle transmission internal components .....	21.6
[21.160] Creeper .....	21.7
[21.162] Reverser .....	21.8
[21.109] Transmission cooler and lines.....	21.9
<b>Four-Wheel Drive (4WD) system</b> .....	<b>23</b>
[23.202] Electro-hydraulic control .....	23.1
<b>Front axle system</b> .....	<b>25</b>
[25.100] Powered front axle .....	25.1
[25.102] Front bevel gear set and differential .....	25.2
[25.108] Final drive hub, steering knuckles, and shafts .....	25.3

[25.400] Non-powered front axle .....	25.4
<b>Rear axle system.....</b>	<b>27</b>
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential .....	27.2
[27.120] Planetary and final drives .....	27.3
<b>Power Take-Off (PTO).....</b>	<b>31</b>
[31.101] Rear mechanical control .....	31.1
[31.104] Rear electro-hydraulic control.....	31.2
[31.110] One-speed rear Power Take-Off (PTO) .....	31.3
[31.114] Two-speed rear Power Take-Off (PTO) .....	31.4
<b>Brakes and controls .....</b>	<b>33</b>
[33.202] Hydraulic service brakes .....	33.1
[33.110] Parking brake or parking lock .....	33.2
[33.220] Trailer brake hydraulic control.....	33.3
<b>Hydraulic systems.....</b>	<b>35</b>
[35.104] Fixed displacement pump .....	35.1
[35.204] Remote control valves .....	35.2
[35.114] Three-point hitch control valve .....	35.3
[35.116] Three-point hitch cylinder .....	35.4
[35.701] Front loader arm hydraulic system .....	35.5
[35.723] Front loader bucket hydraulic system .....	35.6
<b>Hitches, drawbars, and implement couplings.....</b>	<b>37</b>
[37.100] Drawbars and towing hitches .....	37.1
[37.110] Rear three-point hitch .....	37.2
<b>Steering.....</b>	<b>41</b>
[41.106] Tie rods.....	41.1
[41.206] Pump .....	41.2

[41.101] Steering control .....	41.3
[41.200] Hydraulic control components.....	41.4
[41.216] Cylinders .....	41.5
<b>Wheels .....</b>	<b>44</b>
[44.511] Front wheels.....	44.1
[44.520] Rear wheels .....	44.2
<b>Cab climate control .....</b>	<b>50</b>
[50.100] Heating .....	50.1
[50.104] Ventilation .....	50.2
[50.200] Air conditioning.....	50.3
<b>Electrical systems .....</b>	<b>55</b>
[55.100] Harnesses and connectors.....	55.1
[55.201] Engine starting system .....	55.2
[55.301] Alternator.....	55.3
[55.302] Battery.....	55.4
[55.640] Electronic modules .....	55.5
[55.048] Rear Power Take-Off (PTO) control system .....	55.6
[55.408] Warning indicators, alarms, and instruments .....	55.7
[55.DTC] FAULT CODES.....	55.8
<b>Front loader and bucket.....</b>	<b>82</b>
[82.100] Arm.....	82.1
[82.300] Bucket .....	82.2
[82.AAA] Front loader and bucket generic sub-group .....	82.3
<b>Platform, cab, bodywork, and decals .....</b>	<b>90</b>
[90.150] Cab.....	90.1
[90.151] Cab interior .....	90.2
[90.160] Cab interior trim and panels.....	90.3
[90.154] Cab doors and hatches .....	90.4

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)