#### TABLE OF CONTENTS 4994 TRACTOR

SERIES 10	SECTION 1210	DESCRIPTION FORM GENERAL NUMBER General Specifications
	1215	Lubrication 8-25760
	1220	Engine Specifications - 14 Litre
	1230	Fuel System Specifications
	1260	Power Train Specifications
	1270	Brake System Specifications 8-25910
		ENCINE
20	2201	ENGINE Troubleshooting Engine
	2201 2202	Troubleshooting - Engine
	2210	Engine Removal
	2215	Cylinder Heads, Valves and Rocker Arms
	2220	Cylinder Block, Sleeves, Pistons and Rods
	2225	Crankshaft and Main Bearings
	2230	Camshaft, Bushings and Valve Lifters
	2240	Flywheel and Rear Oil Seal
	2245	Lubrication System - Pump, Oil Cleaner and Heat Exchanger 8-25040
	2255	Cooling System 8-25050
	2265	Turbocharger 8-25060
	2275	Air Induction and Exhaust System 8-25070
	2565	Turbocharger - Failure Analysis 9-78235
00		FUEL CYCTEM
30	3210	FUEL SYSTEM  Fuel System and Filters
	3210 3212	Fuel System and Filters8-25080Fuel Injection Pump8-25090
	3212	Fuel Injection Fump
	3240	Electric Fuel Pump
	3240	- Licotho i dei i dilip 0-20400
40		ELECTRICAL
	4201	Electrical System Troubleshooting
	4205	Instument Cluster Troubleshooting
	4210	Tractor Electrical Wiring Diagram 8-25250
	4214	Electrical Troubleshooting 12 Speed Power Shift Transmission 8-25270
	·4220	Cab Electrical Wiring Diagram
	4225	Steering Wiring Diagram
	4230	Starting Motor 8-25680
	4235	Battery Servicing and Testing 8-20291
	4240	Alternator 8-25690
50		STEERING
	5201	Troubleshooting and Adjusting the Steering System 8-25640
	5210	Steering Column, Pump and Valve8-25480
	5220	Steering Cylinder 8-25490
	5240	Rear Steering System Valves 8-25430
	5250	Front Steering Priority Valve
	5270	Rear Steering Oil Filters 8-25450

Reprinted


SERIES	SECTION	DESCRIPTION FORM
60		POWER TRAIN NUMBER
	6210	Transmission Removal
	6240	Power Shift Transmission 8-24560
	6245	Hydraulic PTO 8-25330
	6250	Axles and Planetaries 8-25160
	6260	Differentials and Drive Shifts 8-25170
70		BRAKES
	7210	Service and Parking Brake 8-25530
	7220	Brake Pedal and Master Cylinder 8-25360
80		HYDRAULICS
	8210	Hydraulic Oil Filters 8-25440
	8220	Hydraulic Charge Pump 8-25320
	8225	Hydraulic Pump 8-25210
	8250	Remote Hydraulic Valves 8-25370
	8260	Transmission Flow Divider Valve
	8265	Hydraulic System Pressure Inducer Valve
90		CHASSIS and ACCESSORIES
	9205	Troubleshooting Air Conditioning System 8-25650
	9215	Gauge and Testing Air Conditioning System 8-25660
	9225	Compressor Isolation, Charging and Discharging A/C System 8-25700
	9235	Servicing Air Conditioner Components 8-25710
	9245	Servicing the Cab Blower 8-25580
	9250	Operators Seat 8-25510
	9260	Hood Removal and Alignment
	9265	Hood Lifting Hand Pump 8-25500
	9270	Cab Removal 8-25800
	9290	Safety Decal Location 8-25570
100		HOW IT WORKS
	14205	Digital Instrument Cluster 8-25110

# Section 1210


## **GENERAL SPECIFICATIONS**

Written In **C**lear **A**nd **S**imple **E**nglish


### **SERIAL NUMBERS**

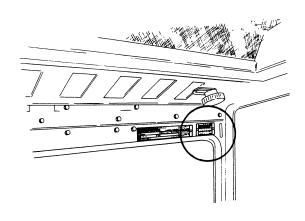


MODEL AND PRODUCT IDENTIFICATION NUMBER PLATE

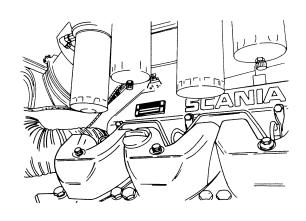


**ENGINE SERIAL NUMBER PLATE** 

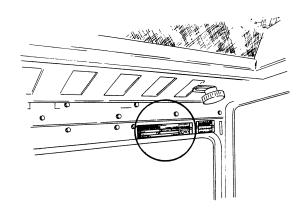

**CAB SERIAL NUMBER PLATE** 

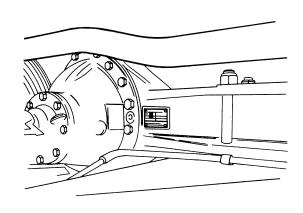

AXLE SERIAL NUMBER PLATE (Front and Rear)

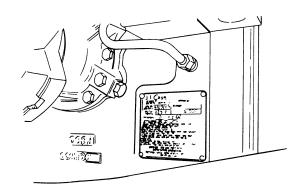

TRANSMISSION SERIAL NUMBER PLATE

Rac 8-25750 Issued 3-84 Printed in U.S.A.

# **DIESEL ENGINE SPECIFICATIONS General**

Type Eight Cylinder, Four Stroke Cycle, Turbocharged, Valve in Cylinder Head
Firing Order
Engine Idle Speed
IMPORTANT: Rocker Arm-to-Valve clearance adjustment must be made when the engine is not running.
Piston and Rod
Rings Per Piston
Main Bearings
Number of Bearings

Rac 8-25750 Issued 3-84 Printed in U.S.A.

Thank you so much for reading. Please click the "Buy Now!" button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email: ebooklibonline@outlook.com