TABLE OF CONTENTS4494 AND 4694 TRACTORS

SERIES 10	SECTION 1210 1211 1215 1216 1220 1230 1250 1260	DESCRIPTION GENERAL General Specifications - 4494 Tractor General Specifications - 4694 Tractor Lubrication - 4494 Tractor Lubrication - 4694 Tractor Engine Specifications Fuel System Specifications Steering System Specifications Power Train Specifications	8-26240 8-26270 8-26280 8-20841 8-21520 8-21530
	1270 1280	Brake System Specifications	8-21550
20	2201 2202 2110 2215 2225 2235 2245 2545 2255 2265 2265 2265 2265 2275 2290	ENGINES Troubleshooting - Engine Engine Tune-Up Engine, Front Axle and Transmission Removal Cylinder Head, Valve Train and Camshaft Cylinder Block, Sleeves, Pistons and Rods Crankshaft, Main Bearings, Flywheel and Oil Seals Lubrication System - Oil Pump, Oil Pan and Heat Exchanger Intercooler - 4694 Tractor Engine Cooling System Turbocharger - T04B Turbocharger Failure Analysis Air Induction System Reconditioning Engine Cylinder Block	8-21570 8-23071 8-21590 8-21600 8-21610 8-21620 8-26160 8-21631 8-21640 9-78235 8-21650
30	3210 3212 3213	FUEL SYSTEMFuel System and FiltersRobert Boch Fuel Injection PumpAmerican Boch Fuel Injectors	8-21670
40	4201 4205 4210 4220 4225 4226 4230 4235 4240 4280	ELECTRICAL Electrical System Troubleshooting Instrument Cluster Troubleshooting Tractor Electrical Wiring Diagram Cab Electrical Wiring Diagram Steering Electrical Wiring Diagram Hitch Electrical Wiring Diagram Starting Motor Battery Servicing and Testing Alternator System Neutral Start Switches	8-26360 8-25880
50 Reprinted	5203 5205 5210 5220 5230 5240 5250 5260 5265 5280	STEERINGElectronic Steering SystemTesting Tractor Steering SystemSteering Column, Pump and ValveSteering CylindersSteering Lines and ControlsRear Steering ValveFront Steering Priority ValveRear Steering Priority ValveRear Steering Check ValveFront and Rear Steering Adjustments	8-23700 8-21720 8-21730 8-21740 8-21750 8-21760 8-21770 8-21780 8-26430 8-21790


TABLE OF CONTENTS4494 AND 4694 TRACTORS

SERIES	SECTION	DESCRIPTION	FORM
60	02011011	POWER TRAIN	NUMBER
	6220	Torque Limiter Clutch	-
	6230	Power Shift	
	6236	Power Shift Solenoid	8-26000
	6240	Four Speed Transmission	8-25950
	6245	Hydraulic PTO	8-21850
	6250	Axles and Planetaries	8-25930
	6260	Differentials and Drive Shafts	8-21871
	6261	No-Spin Front Differential and Drive Shaft	8-25970
	6235	Power Shift Control Valve and Linkage	8-25140
70		BRAKES	
	7210	Brake Pedal, Parking Brake and Tractor Brake	8-26020
	7220	Brake Valve	8-26030
80		HYDRAULIC	
	8202	Troubleshooting Hitch System	8-21890
	8203	Hitch Alignment	
	8205	Testing Tractor Hydraulic System	
	8210	Hydraulic Oil Filters	
	8225	Hydraulic Pump	
	8250	Remote Hydraulic Valves	
	8255	Flow Divider and PTO Control Valve	
	8281	Hitch System	8-23240
	8282	Hitch System	
	8290	Break-Away Couplings and Portable Cylinders	8-20640
90		ACCESSORIES	
	9205	Troubleshooting Air Conditioning System	
	9215	Gauging and Testing Air Conditioning System	8-21970
	9225	Compressor Isolation, Removal, Installation and	
		Excavation - Discharging, Evacuation, and Charging	0.01000
	0025	the A.C. System	
	9235 9245	Servicing Air Conditioner Components	
	9245 9250	Servicing the Cab Blower	
	9260	Operators Seat	8-26010
	9280 9280	Pedal and Lever Adjustments	
	9290	Safety Decal Location	8-26210
•	3230		0-20210
100		HOW IT WORKS	
	14205	Digital Instrument Cluster	8-25110
	16430	Electrically Actuated and Hydraulic Operated	
		12 Speed Power Shift	8-26300
	18225	Case CON TROL Hydraulics	8-21350


Section 1210


GENERAL SPECIFICATIONS

 4494 TRACTORS




SERIAL NUMBERS

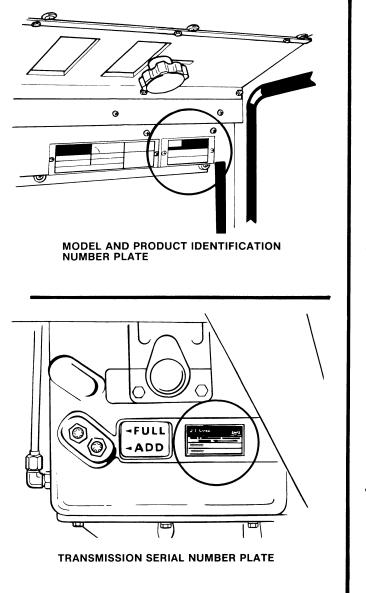


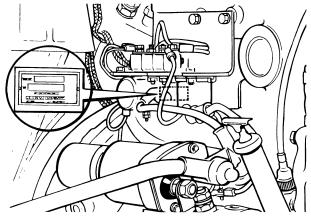

ENGINE SERIAL NUMBER PLATE

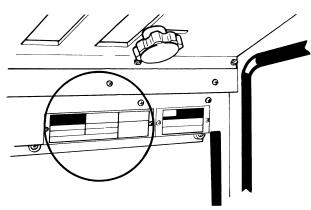

CAB SERIAL NUMBER PLATE

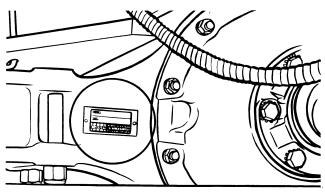

AXLE SERIAL NUMBER PLATE (Front and Rear)

DIESEL ENGINE SPECIFICATIONS

General

Type Six Cyli	nder, Four Stroke Cycle, Turbocharged, Valve in Cylinder Head
Firing Order	
Bore	4-5/8 Inches (117.5 mm)
Stroke	
Piston Displacement	
Compression Ratio	15.75 to 1
Cylinder Sleeves	Wet Type, Can be Removed.
Governor Engine Speed without Load	2340 to 2380 RPM
Rated Engine Speed	2200 RPM
Engine Idle Speed	
Rocker Arm-to-Valve Clearance (Exhaust)	0.025 Inch
	(0.635 mm)
(Intake)	0.015 Inch
	(0.381 mm)

IMPORTANT: Rocker Arm-to-Valve clearance adjustment must be made when the engine is not running.

Piston and Rod

Rings Per Piston	3
Compression Rings Per Piston	2
Dil Rings Per Piston	1
Type Piston Pin	
Type Bearings Beplacement Bearings Available, Steel Back	
with Aluminum or Copper and lead liners	••

Main Bearings

Quantity of Bearings	7
Type of Bearings Replacement Bearings Available, Steel Back	ĸ
with Aluminum or Copper and Lead Liners	i.

Engine Lubrication System

Oil Pressure	45 to 60 PSI (310 to 414 kPa)(3.1 to
	4.14 bar) with Engine Warm and Operating at Rated Speed.
Type System	Pressure and Spray with Piston Oil Cooling
Oil Pump	Gear Type
Oil Filters (2)	Full Flow, Turn on Type, ByPass
	Valve in Filter Base.
Oil Capacity	With Filters, 28 U.S. Quarts (27 litres)
	Without Filters, 24 U.S. Quarts (23 litres)
Oil Cooler	Engine Oil

Thank you so much for reading. Please click the "Buy Now!" button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email:

ebooklibonline@outlook.com