

9100 and 9200 Series Tractor Service Manuals

Table of Contents

		<u>91/9210</u> <u>91/9230</u>	<u>9240</u> <u>9260</u>	<u>91/9250</u>	<u>91/9270</u> <u>91/9280</u>
General					
	Section				
Loctite Product Chart		8-98900	8-98900	8-98900	8-98900
General Information	1001	8-81870			
General Information	1002			8-81890	
General Information	1003				8-81890
Engine					
Engine Troubleshooting	2001	8-91600	8-91600	8-91600	8-91600
Engine Tune-Up	2002	8-91611	8-91611	NR	NR
Engine Specifications	2403	8-28423	8-28423	NR	NR
Engine Removal	2003	8-82090			
Engine Removal - Cummins L10 Engine	2004		8-82100	8-82100	
Engine Removal - Cummins 855 Engine	2005				8-82110
Aftercooler System	2011	8-91701	8-91701	NR	NR
Cylinder Head and Valve Train	2415	8-28432	8-28432	NR	NR
Cylinder Block	2425	8-28442	8-28442	NR	NR
Lubrication System	2445	8-28452	8-28452	NR	NR
Cooling System	2455	8-28462	8-28462	NR	NR
Turbocharger	2465	8-28470	8-28470	NR	NR
Turbocharger Failure Analysis	2565	9-78235	9-78235	NR	NR
				NR	NR
Fuel System					
Fuel System and Filters	3410	8-28480	8-28480	NR	NR
Fuel Injection Pump	3412	8-28492	8-28492	NR	NR
Fuel Injectors	3413	8-28501	8-28501	NR	NR
Electrical					
Wiring Schematics and Troubleshooting - P.I.N. JCB0003600 through JCB0028399	4001	8-81630			
Wiring Schematics and Troubleshooting - P.I.N. JCB0028400 and After	4008	8-98820			
Wiring Schematics and Troubleshooting - Prior to P.I.N. JCB0028400	4005		8-82440		
Wiring Schematics and Troubleshooting - P.I.N. JCB0028400 and After	4010		8-82790		
Wiring Schematics and Troubleshooting - P.I.N. JCB0003600 through JCB0028399	4002			8-81700	
Wiring Schematics and Troubleshooting - P.I.N. JCB0028400 and After	4009			8-82780	
Wiring Schematics and Troubleshooting - 9170/9180	4003				8-81710

NR - Not Required, See your Cummins Engine Service Center.

Reprinted

9100 and 9200 Series Tractor Service Manuals

Table of Contents

	<u>91/9210</u>	<u>9240</u>	<u>91/9250</u>	<u>91/9270</u>
	<u>91/9230</u>	<u>9260</u>		<u>91/9280</u>
Electrical - (cont'd)				
Section				
Wiring Schematics and Troubleshooting - 9270/9280 Prior to P.I.N. JCB0028400	4006			8-82620
Wiring Schematics and Troubleshooting - 9270/9280 P.I.N. JCB0028400 and After	4007			8-82720
Alternator - Robert Bosch	4004	8-91791	8-91791	8-91791
Alternator - Delco 21-SI	4014	8-82740	8-82740	8-82740
Starting Motor - Nippondenso	4011	8-95970	8-95970	
Starting Motor - Delco 42-MT	4012		8-82120	8-82120
Battery Servicing and Testing	4235	8-20291	8-20291	8-20291
Steering				
Steering Column	5001	8-82130	8-82130	8-82130
Steering Hand Pump	5002		8-82140	8-82140
Steering Turntable and Cylinders	5003	8-81760		
Front Axle Electronic Alignment and Calibration	5004	8-81790		
Articulating Steering Makeup Valve	5005	8-82150		
Steering Valves (Priority)	5006			8-82160
Articulation Steering Cylinders	5007	8-82170	8-82170	8-82170
Steering Hand Pump	5008	8-82230		
Double Selector Steering Valve	5009	8-82430		
Electronic Steering Calibration - Rigid Frame	5010		8-82600	
Steering Components	5011		8-82800	
Electric Controlled Rear Steering Operation	5012		8-82830	
Front Axle Steering Operation and Alignment	5013	8-82850		8-82850
Power Train				
Transmission Removal	6001	8-82180		
Transmission Removal - Synchromesh	6002		8-82190	8-82190
Transmission Removal - Power Shift	6012		8-82370	8-82370
Transmission Removal - Power Shift	6020			8-82870
EW-16 Power Shift Transmission Service	6004	8-81941	8-81941	8-81941
Synchromesh Transmission Service	6019		8-82611	8-82611
PTO Drive Unit	6005	8-81781	8-81781	8-81781
Rear PTO Driveline Carrier/Hanger Bearing Replacement	6007	8-82200	8-82200	8-82200
Axle - K593	6011	8-81650		
- K592	6003			8-81120
- K595 Steerable	6018		8-82420	
- K598	6010			8-81800
Axle - Raba 698-68/78 and 698-85/95	6024		8-83030	8-83030
Axle Removal	6006	8-82210		
Axle Removal	6013		8-82220	8-82220
Transmission Power Shift Charge Pump	6014	8-81860	8-81860	8-81860
PTO Dropbox	6008	8-81950	8-81950	8-81950
Differential Lock Electric Shift Motor	6009	8-82650	8-82650	8-82650
Transmission Drive Coupler	6015	8-82240		

9100 and 9200 Series Tractor Service Manuals

Table of Contents

	<u>91/9210</u>	<u>9240</u>	<u>91/9250</u>	<u>91/9270</u>
	<u>91/9230</u>	<u>9260</u>		<u>91/9280</u>
Power Train - (cont'd)				
Section				
Transmission Drive Coupler	6016	8-82250	8-82250	
Transmission Drive Coupler	6017			8-82260
Master Clutch Removal on Tractor w/Synchromesh Transmission	6021	8-82670	8-82670	8-82670
12 Speed Synchroshift and 24 Speed Hi-Lo Synchroshift Transmission Repair - Model HM-2 P.I.N. JEE003803 and After	6023			8-83020
Brakes				
Caliper Disc System - Prior to P.I.N. JEE0032460	7001	8-82270	8-82270	8-82270
Caliper Disc System - P.I.N. JEE0032460 and After	7002	8-82820	8-82820	8-82820
Master Cylinder	7003	8-82860	8-82860	8-82860
Hydraulic System				
Hydraulic Schematics	8001	8-81640	8-81640	
Troubleshooting and Testing	8002	8-81730	8-81730	
Hydraulic Schematics - 9170/9180	8003			8-81720
Troubleshooting and Testing - 9170/9180	8004			8-81740
Hydraulic Schematics	8010	8-82450		
Troubleshooting and Testing	8011	8-82460		
Hydraulic Schematics - 9270/9280	8012			8-82520
Troubleshooting and Testing - 9270/9280	8013			8-82530
Priority Remote Valve	8005	8-81920	8-81920	8-81920
Hydraulic Piston Pump	8006	8-82280	8-82280	8-82280
Hydraulic Gear Pump	8014	8-82810		
Hydraulic Gear Pump	8009	8-82290	8-82290	8-82290
Hydraulic Filters	8008	8-82310	8-82310	8-82310
Hitch Alignment	8022	8-81690	8-81690	8-81690
Hitch Valve and Null Adjustment	8023	8-81930	8-81930	8-81930
Chassis				
Cab Removal and Installation	9001	8-82320	8-82320	8-82320
A/C Compressor R12 Refrigerant	9004	8-82350	8-82350	8-82350
A/C Compressor R-134a Refrigerant	9016	8-82940	8-82940	8-82940
Air Conditioning System - Prior to P.I.N. JCB0028400	9005	8-82360	8-82360	8-82360
Air Conditioning System - P.I.N. JCB0028400 and After	9014	8-82750	8-82750	8-82750
A/C System Service with R-134a	9015	8-82930	8-82930	8-82930
Air/Air Seat	9011	8-95560	8-95560	8-95560
Mechanical Seat	9009	7-38470	7-38470	7-38470
Radiator and Front End Removal	9008	8-82380		
Drawbar	9010	8-82390	8-82390	8-82390
Hinge Bearing Replacement and Connecting Link Removal	9012	8-82400	8-82400	8-82400
Hood, Grill, Radiator and Support	9006	8-82700	8-82700	
Center Hinge Removal and Bearing Replacement - Prior to P.I.N. JCB0027096	9013			8-81770

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com