




SERVICE MANUAL

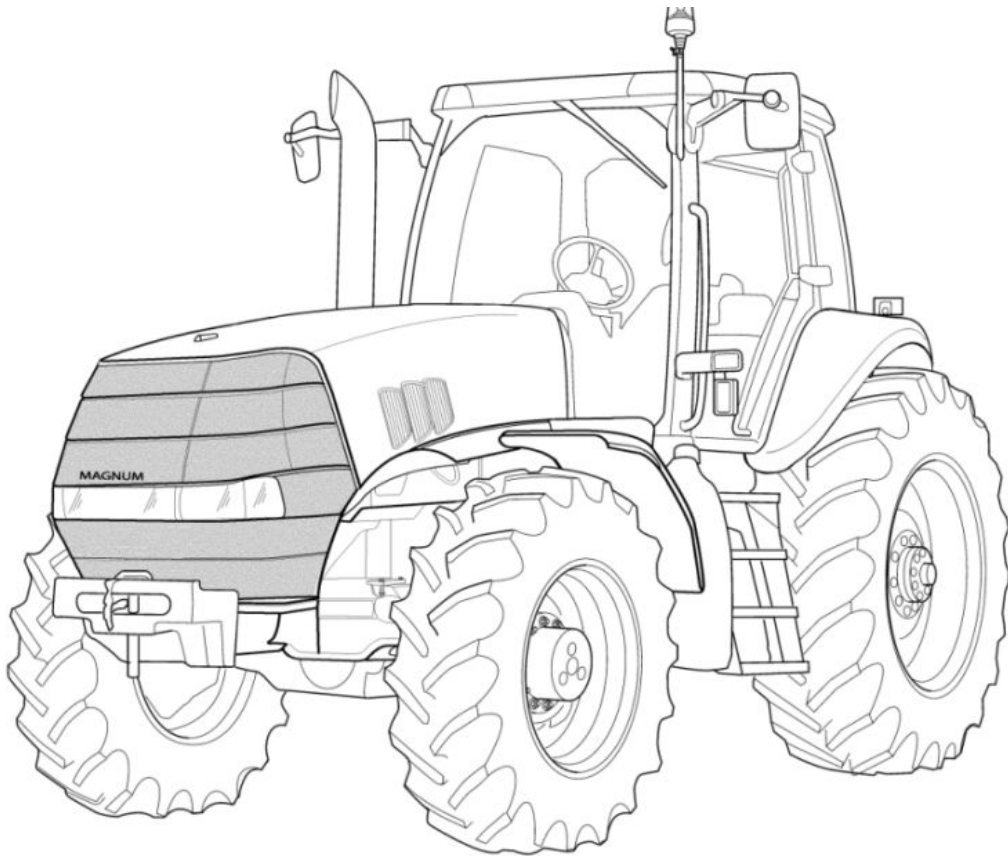

Magnum 225 [Z8Rx06001 -]
Magnum 250 [Z8Rx06001 -]
Magnum 280 [Z8Rx06001 -]
Magnum 310 [Z8Rx06001 -]
Magnum 335 [Z8Rx06001 -]

Contents

INTRODUCTION

DISTRIBUTION SYSTEMS..... A

PRIMARY HYDRAULIC POWER SYSTEM..... A.10.A

PRIMARY HYDRAULIC POWER SYSTEM Electro-hydraulic remote valve..... A.10.C

PNEUMATIC SYSTEM..... A.20.A

ELECTRICAL POWER SYSTEM..... A.30.A

LIGHTING SYSTEM..... A.40.A

ELECTRONIC SYSTEM..... A.50.A

FAULT CODES..... A.50.A

POWER PRODUCTION..... B

ENGINE..... B.10.A

FUEL AND INJECTION SYSTEM..... B.20.A

ENGINE COOLANT SYSTEM..... B.50.A

LUBRICATION SYSTEM..... B.60.A

STARTING SYSTEM..... B.80.A

POWER TRAIN..... C

POWER COUPLING Drop box..... C.10.E

POWER COUPLING Fixed coupling..... C.10.B

TRANSMISSION Powershift..... C.20.E

REAR PTO Hydraulic..... C.40.C

BAR AXLE..... C.60.A

TRAVELLING..... D

FRONT AXLE..... D.10.A

2WD-4WD SYSTEM Hydraulic..... D.14.C

STEERING Hydraulic..... D.20.C

SERVICE BRAKE Hydraulic..... D.30.C

PARKING BRAKE Hydraulic..... D.32.C

BRAKE CONNECTION Hydraulic..... D.34.C

BRAKE CONNECTION Pneumatic.....	D.34.E
SUSPENSION Hydraulic	D.40.C
BODY AND STRUCTURE	E
SHIELD	E.20.A
USER CONTROLS AND SEAT	E.32.A
USER CONTROLS AND SEAT Operator seat	E.32.C
USER PLATFORM	E.34.A
ENVIRONMENT CONTROL Heating, ventilation and air-conditioning.....	E.40.D
SAFETY SECURITY ACCESSORIES Safety	E.50.B
WORKING ARM	H
HITCH Rear hitch.....	H.10.C



INTRODUCTION

Safety rules

Magnum 225, Magnum 250, Magnum 280, Magnum 310, Magnum 335



Improper machine operation can cause injury or death. Always operate all machine controls from the operator's seat.

84-60



Before starting engine, study operator's manual safety messages. Read all safety signs on machine. Clear the area of other persons. Learn and practice safe use of controls before operating. It is your responsibility to understand and follow manufacturer's instructions on machine operation, service, and to observe pertinent laws and regulations. Operators and service manuals can be obtained from your equipment dealer.

D46-59C



If you wear clothing that is too loose or do not use the correct safety equipment for your job, you can be injured. Always wear clothing that will not catch on objects. Extra safety equipment that can be required includes hard hat, safety shoes, ear protection, eye or face protection, heavy gloves and reflector clothing.

M492



When working in the area of the fan belt with the engine running, avoid loose clothing if possible, and use extreme caution.

M493



When doing checks and tests on the equipment hydraulics, follow the procedures as they are written. DO NOT change the procedure.

M494



Lower all attachments to the ground or use stands to safely support the attachments before you do any maintenance or service.

M496



Fluid under pressure can have sufficient force to penetrate the skin, causing serious personal injury. Always protect the skin and eyes from escaping fluid under pressure. Before disconnecting lines or fittings, be sure to release all pressure by operating the tractor control valves. Before applying pressure to the system, be sure all connections are tight and that hoses and connections are not damaged. If injured by escaping fluid, obtain medical assistance at once. Serious infection or reaction can develop if medical treatment is not administered immediately. Failure to comply could result in death or serious injury.

M1184

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com