

The CASE logo is displayed in white, bold, italicized capital letters. It is positioned on a black trapezoidal background that tapers to the left. A horizontal orange bar is located directly beneath the letters.

**REPAIR MANUAL  
CRAWLER DOZER**

**750L  
850L  
TIER 3**

87728445 NA

Issued 01Mar 08



## REPAIR MANUAL



**750L**  
**850L**

# Contents

---

## INTRODUCTION

## DISTRIBUTION SYSTEMS

A

PRIMARY HYDRAULIC POWER SYSTEM	A.10.A
SECONDARY HYDRAULIC POWER SYSTEM	A.12.A
ELECTRICAL POWER SYSTEM	A.30.A
LIGHTING SYSTEM	A.40.A
FAULT CODES	A.50.A

## POWER PRODUCTION

B

ENGINE	B.10.A
FUEL AND INJECTION SYSTEM	B.20.A
AIR INTAKE SYSTEM	B.30.A
ENGINE COOLANT SYSTEM	B.50.A
LUBRICATION SYSTEM	B.60.A
STARTING SYSTEM	B.80.A

## POWER TRAIN

C

POWER COUPLING Fixed coupling	C.10.B
TRANSMISSION Hydrostatic	C.20.F

## TRAVELLING

D

Final drive	D.15.A
SERVICE BRAKE Hydraulic	D.30.C
PARKING BRAKE Hydraulic	D.32.C
WHEELS AND TRACKS Tracks	D.50.B

## BODY AND STRUCTURE

E

USER CONTROLS AND SEAT	E.32.A
USER CONTROLS AND SEAT Operator seat	E.32.C
USER PLATFORM	E.34.A
ENVIRONMENT CONTROL Heating system	E.40.B
ENVIRONMENT CONTROL Air-conditioning system	E.40.C

ENVIRONMENT CONTROL Heating, ventilation and air-conditioning	E.40.D
SAFETY SECURITY ACCESSORIES Safety	E.50.B
<b>TOOL POSITIONING</b>	<b>G</b>
LIFTING	G.10.A
TILTING	G.20.A
SWINGING	G.40.A
<b>WORKING ARM</b>	<b>H</b>
SINGLE ARM TOOL ATTACHMENT Lift	H.50.B
<b>TOOLS AND COUPLERS</b>	<b>J</b>
DIGGING Non-articulated digging tools	J.20.B
LANDSCAPING Dozer blade	J.40.F



## INTRODUCTION

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)