

# W14B LOADER

## Table of Contents

DIVISION/SECTION	SECTION NO.	FORM NO.
<b>1 GENERAL</b>		
Safety Rules, Service Manual Introduction, and Torque Specifications .....	1001	8-42830
Fluids and Lubricants Chart, Maintenance Chart .....	1002	8-42830
General Engine Specifications .....	1010	8-27130
Detailed Engine Specifications .....	1024	8-26061
<b>2 ENGINE</b>		
Engine Removal and Installation, Radiator Removal and Installation .....	2000	8-42830
Engine Accessories (Air Cleaner, Ether Injection, Mufflers, Turbocharger) .....	2001	8-42830
Stall Tests .....	2002	8-24830
Cylinder Head and Valve Train .....	2415	8-26071
Cylinder Block, Crankshaft, Pistons, Rods, Camshaft, Oil Seals, Flywheel, and Crankshaft .....	2425	8-26081
Lubrication System .....	2445	8-26091
Cooling System .....	2455	8-26101
Turbocharger (Tear-down) .....	2465	8-26110
Turbocharger Failure Analysis .....	2565	9-78235
<b>3 FUEL SYSTEM</b>		
Fuel lines, Fuel Tank, and Engine Controls .....	3001	8-42830
Fuel System and Filters .....	3410	8-26131
Bosch Fuel Injection Pump, Drive Gear Timing .....	3412	8-26141
Fuel Injectors .....	3413	8-26150
<b>4 ELECTRICAL SYSTEM</b>		
Removal and Installation of Electrical Components .....	4001	8-42830
Specifications and Troubleshooting .....	4002	8-42830
Wiring Diagrams .....	Rear Pocket	
Instrument Cluster and Optional Gauges .....	4004	8-42830
Batteries .....	4005	8-44360
Starter and Starter Solenoid .....	4006	8-42240
40 Ampere Alternator .....	4017	8-42830
65 Ampere Alternator .....	4018	8-42830
<b>5 STEERING</b>		
Removal and Installation of Steering Components .....	5000	8-42830
Troubleshooting and Pressure Check .....	5002	8-42830
Hydraulic Schematic .....	Rear Pocket	
Steering Control Valve .....	5007	8-42830
Flow Control Valve .....	5008	8-42830
Center Pivot .....	5023	8-42830
Auxiliary Steering Pump and Check Valve .....	5025	8-42830
Steering Cylinder .....	See Section 8090	

**6 POWER TRAIN**

Removal and Installation of Transmission, Axles, and Differentials .....	6100	8-42831
Maintenance .....	6101	8-42830
Troubleshooting and Pressure Checks .....	6102	8-42830
Torque Converter, Transmission, and Control Valve .....	6110	8-42830
Transmission Controls .....	6111	8-42830
Drive Shafts and Trunnions .....	6125	8-42830
Differential and Planetary .....	6126	8-42830
Wheels and Tires .....	6129	8-42831

**7 BRAKES**

Removal and Installation of Brake System Components .....	7100	8-42830
Specifications, Diagram, Troubleshooting, Leakage Tests, and Adjustments .....	7102	8-42830
Air Compressor and Governor .....	7103	8-42830
Reservoirs and Relief Valve .....	7104	8-42830
Brake Valve .....	7105	8-42830
Brake Actuator .....	7107	8-41150
Pressure Reducing Valve and Pressure Protection Valve .....	7109	8-41150
Air Horn and Air Valve .....	7110	8-41150
Disc Brake .....	7121	8-42830
Parking Brake Actuator and Parking Brake Valve .....	7126	8-41150

**8 HYDRAULIC**

Removal and Installation of Hydraulic System Components ...	8000	8-42830
Maintenance .....	8001	8-42830
Specifications, Troubleshooting and Pressure Checks .....	8002	8-42830
Hydraulic Diagram .....	Rear Pocket	
Cleaning the Hydraulic System .....	8003	8-42830
Pump .....	8005	8-42830
Loader Control Valve .....	8007	8-42830
Cylinders .....	8090	8-42830

**9 MOUNTED EQUIPMENT**

Air Conditioning Troubleshooting .....	9002	8-41150
Air Conditioning System .....	9003	8-42830
Loader .....	9010	8-42830
ROPS Cab and Canopy .....	9061	8-41150
Seat and Seat Belts .....	9064	8-41150
Noise Control .....	9201	8-42830

**REAR POCKET**

Electrical Schematic - Front Harness .....	860421
Electrical Schematic - Rear Harness .....	860422
Electrical Schematic - Cab .....	860423
Hydraulic Schematic .....	860228

# 1001

## **SAFETY RULES SERVICE MANUAL INTRODUCTION AND TORQUE SPECIFICATIONS**

### **TABLE OF CONTENTS**

<b>Safety Rules</b> .....	1001-2	<b>Product Identification Number (PIN) and Serial Numbers</b> .....	1001-5
<b>Service Manual Introduction</b> .....	1001-4	<b>Torque Specifications</b> .....	1001-6

## SAFETY RULES

 **This symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED.** The message that follows the symbol contains important information about safety. Carefully read the message. Make sure you fully understand the causes of possible injury or death. 1-1-C


**IMPORTANT:** To prevent injury on job, follow the Warning, Caution, and Danger notes in this section and other sections throughout this manual. Follow the instructions carefully.


The procedures recommended and shown in this manual are good, effective service methods. However, all possible procedures and service hazards may not be covered. Therefore, if you use a tool or procedure not recommended, you must make sure that the method you select is a safe method.

Put the warning tag shown below on the key for the key switch when you are servicing or repairing this machine. One warning tag is on every new machine. You can buy additional warning tags, part number 331-4614, from Service Parts Supply.



780449


 **WARNING:** Read operator's manual to familiarize yourself with control lever functions. 46-27


 **WARNING:** Operate tractor and equipment controls from the seat position only. Any other method could result in serious injury. 48-55

 **WARNING:** This is a one man machine, no riders allowed. 35-8




750143

 **WARNING:** If you wear clothing that is too loose or do not use the correct safety equipment for your job, you can be injured. Always wear clothing that will not catch on objects. Extra safety equipment that can be required includes hard hat, safety shoes, ear protection, eye or face protection, heavy gloves and reflector clothing. 45-3-A

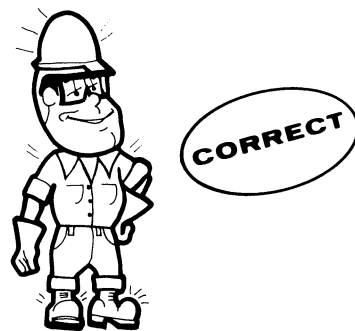


750213A

 **WARNING:** When working in the area of the fan belt with the engine running, avoid loose clothing if possible, and use extreme caution. 35-4

**WARNING:** If the bucket must be raised during servicing or repairs, use an acceptable stand to hold the loader frame in place. 18-94

**WARNING:** Use insulated gloves or mittens when working with hot parts. 47-41A

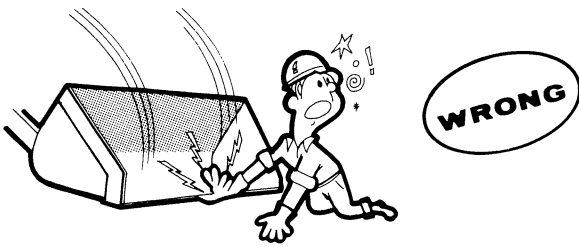

742679

**CAUTION:** When removing hardened pins such as a pivot pin, or a hardened shaft, use a soft head (brass or bronze) hammer or use a driver made from brass or bronze and a steel head hammer. 46-17

**WARNING:** When doing checks and tests on the equipment hydraulics, follow the procedures as they are written. DO NOT change the procedure. 47-44


**CAUTION:** When using a hammer to remove and install pivot pins or separate parts, using compressed air or using a grinder, wear eye protection that completely encloses the eyes (approved goggles or other approved eye protectors). 46-13

**WARNING:** When putting the hydraulic cylinders on this machine through the necessary cycles to check operation or to remove air from a circuit, make sure all people are out of the way. 47-45

**CAUTION:** When servicing or repairing the machine, keep the shop floor and operator's compartment and steps free of oil, water, grease, tools, etc. Use an oil absorbing material and/or shop cloths as required. Use safe practices at all times. 40-8

**WARNING:** Locate the machine on level ground and block the wheels securely before working under the machine. Failure to follow the above procedure can result in personal injury. 46-77

**CAUTION:** Use suitable floor (service) jacks or chain hoists to raise wheels or track off the floor. Always block machine in place with suitable safety stands. 40-7-A

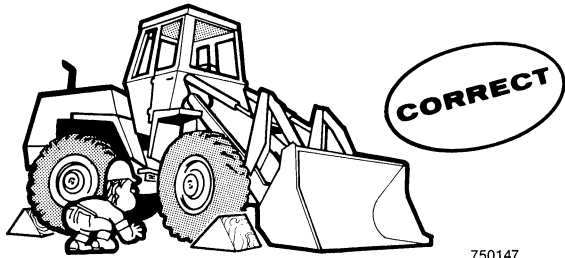

750147

**CAUTION:** Some components of this machine are very heavy. Use suitable lifting equipment or additional help as instructed in this service manual. 40-10

**CAUTION:** Pin sized and smaller streams of hydraulic oil under pressure can penetrate the skin and result in serious infection. If hydraulic oil under pressure does penetrate the skin, seek medical treatment immediately. Maintain all hoses and tubes in good condition. Make sure all connections are tight. Make a replacement of any tube or hose that is damaged or thought to be damaged. DO NOT use your hand to check for leaks; use a piece of cardboard or wood. 40-6-A

**DANGER:** Engine exhaust fumes can cause death. If it is necessary to start the engine in a closed place, remove the exhaust fumes from the area with an exhaust pipe extension. If you do not have an exhaust pipe extension, open the doors and get outside air into the area. 48-56



750149

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)