



1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

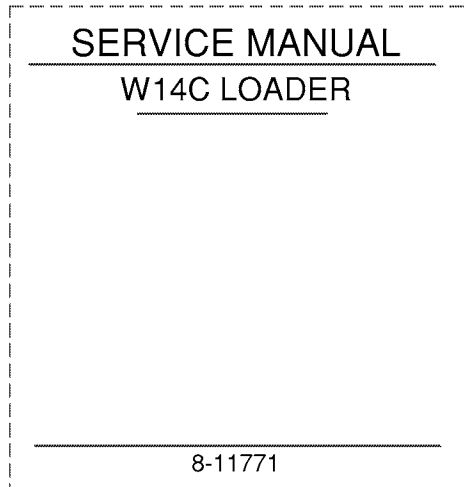


1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

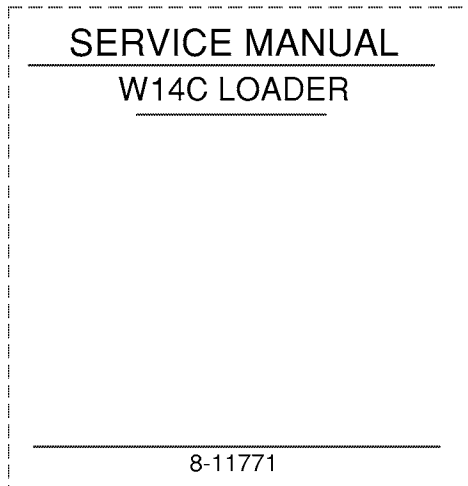

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

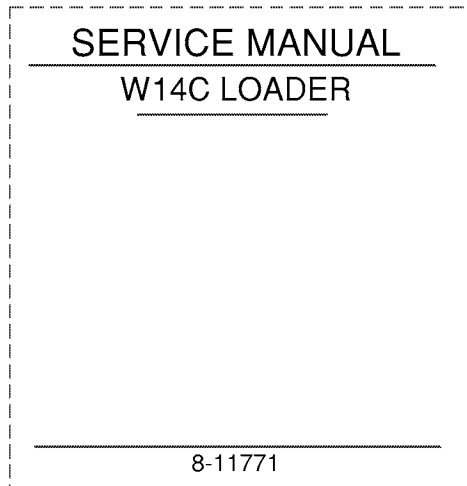

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

W14C Loader

Table of Contents

DIVISION/SECTION	SECTION NO.	FORM NO.
1 GENERAL		
Section Index - General		8-13980
Standard Torque Specifications	1001	8-71600
Fluids and Lubricants	1002	8-13990
2 ENGINES		
Section Index - Engines		8-14000
Engine Removal and Installation and Radiator Removal and Installation	2000	8-14010
Stall Tests	2002	8-14020
Detailed Engine Specifications	2401	8-26062
Cylinder Head and Valve Train	2415	8-26072
Cylinder Block, Pistons, Rods, Camshaft, Main Bearings, Oil Seals, and Flywheel	2425	8-26083
Lubrication System	2445	8-26092
Cooling System	2455	8-26102
Turbocharger	2465	8-26110
Turbocharger Failure Analysis	2565	9-78235
3 FUEL SYSTEM		
Section Index - Fuel System		8-14030
Fuel System and Filters	3410	8-26131
Fuel Injection Pump and Drive Gear	3412	8-26141
Fuel Injectors	3413	8-26151
4 ELECTRICAL SYSTEM		
Section Index - Electrical		8-14041
Electrical Specifications, Troubleshooting, and Schematics	4001	8-14051
Starter and Starter Solenoid	4002	8-11950
45 Amp Alternator A186124	4003	8-73841
Batteries	4004	8-71701
Instrument Cluster and Gauges	4005	8-14070
65 Ampere Alternator	4006	8-73860
45 Amp Alternator A187916	4007	7-43600
5 STEERING		
Section Index - Steering		8-14080
Removal and Installation of Steering Components	5001	8-14090
Specifications, Schematic, and Troubleshooting	5002	8-14100
Steering Control Valve	5003	8-14110
Flow Control Valve	5004	8-73910
Steering Cylinder	5005	8-14120
Center Pivot	5006	8-14130
Auxiliary Steering Pump and Check Valve	5025	8-42830

Reprinted

DIVISION/SECTION	SECTION NO.	FORM NO.
6 POWER TRAIN		
Section Index - Power Train.....		8-14140
Removal and Installation of Power Train Components.....	6001	8-14150
Transmission Specification and Troubleshooting.....	6002	8-14160
Transmission Repair.....	6003	8-14171
Differential and Planetary.....	6004	8-14181
Drive Shafts, Center Bearing, and Universal Joints.....	6005	8-14190
Wheels and Tires.....	6006	8-14200
7 BRAKES		
Section Index - Brakes.....		8-14210
Removal and Installation of Brake Components.....	7000	8-14220
Specifications, Schematics, Pressure Checks, and Adjustments.....	7001	8-14231
Brake Master Cylinder.....	7002	8-73080
Brake Valve.....	7003	8-73090
Parking Brake.....	7004	8-14240
Brakes.....	7005	8-14251
Brake Pump.....	7006	8-14260
NOTE: For parking brake and brake pedal adjustments, see Section 9009.		
8 HYDRAULICS		
Section Index - Hydraulics.....		8-14270
Removal and Installation of Hydraulic Components.....	8001	8-14280
Specifications, Troubleshooting and Schematics.....	8002	8-14291
Cleaning the Hydraulic System.....	8003	8-74160
Loader Control Valve.....	8004	8-14300
Hydraulic Pump.....	8005	8-67401
Cylinders.....	8006	8-14311
9 MOUNTED EQUIPMENT		
Section Index - Mounted Equipment.....		8-14320
Air Conditioning Troubleshooting.....	9001	8-14330
Discharging and Charging the Air Conditioning System.....	9002	8-14340
Removal and Installation of Air Conditioning Components.....	9003	8-14350
Air Conditioning Compressor and Clutch.....	9004	8-14360
Loader.....	9005	8-14370
ROPS Cab and ROPS Canopy.....	9006	8-14380
Seat and Seat Belt.....	9007	8-74271
Suspension Seat.....	9008	8-74280
Pedals and Levers.....	9009	8-14390

1001


STANDARD TORQUE SPECIFICATIONS


TABLE OF CONTENTS

Torque Specifications - Decimal Hardware	1001-2	Torque Specifications - Steel Hydraulic Fittings	1001-4
Torque Specifications - Metric Hardware ...	1001-3	Torque Specifications - O-ring Face Seal Fittings	1001-5

TORQUE SPECIFICATIONS - DECIMAL HARDWARE

Use the torques in this chart when special torques are not given. These torques apply to fasteners with both UNC and UNF threads as received from suppliers, dry, or when lubricated with engine oil. Not applicable if special graphites, molydisulfide greases, or other extreme pressure lubricants are used.

Grade 5 Bolts, Nuts, and Studs		
		
Size	Pound-Feet	Newton metres
1/4 in	9-11	12-15
5/16 in	17-21	23-28
3/8 in	35-42	48-57
7/16 in	54-64	73-87
1/2 in	80-96	109-130
9/16 in	110-132	149-179
5/8 in	150-180	203-244
3/4 in	270-324	366-439
7/8 in	400-480	542-651
1.0 in	580-696	787-944
1-1/8 in	800-880	1085-1193
1-1/4 in	1120-1240	1519-1681
1-3/8 in	1460-1680	1980-2278
1-1/2 in	1940-2200	2631-2983

Grade 8 Bolts, Nuts, and Studs		
		
Size	Pound-Feet	Newton metres
1/4 in	12-15	16-20
5/16 in	24-29	33-39
3/8 in	45-54	61-73
7/16 in	70-84	95-114
1/2 in	110-132	149-179
9/16 in	160-192	217-260
5/8 in	220-264	298-358
3/4 in	380-456	515-618
7/8 in	600-720	814-976
1.0 in	900-1080	1220-1465
1-1/8 in	1280-1440	1736-1953
1-1/4 in	1820-2000	2468-2712
1-3/8 in	2380-2720	3227-3688
1-1/2 in	3160-3560	4285-4827

NOTE: Use thick nuts with Grade 8 bolts.

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com