



1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

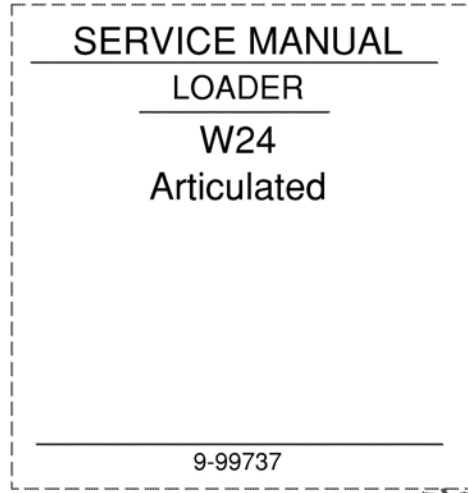


1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

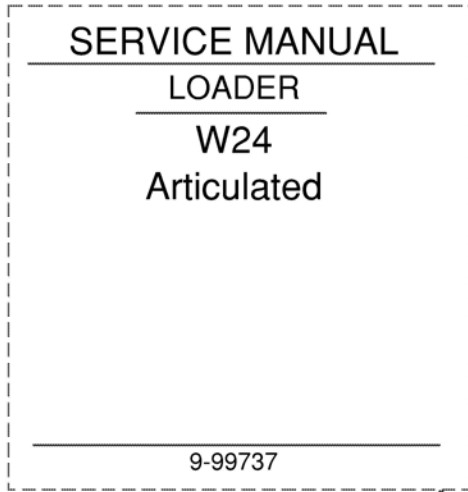

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

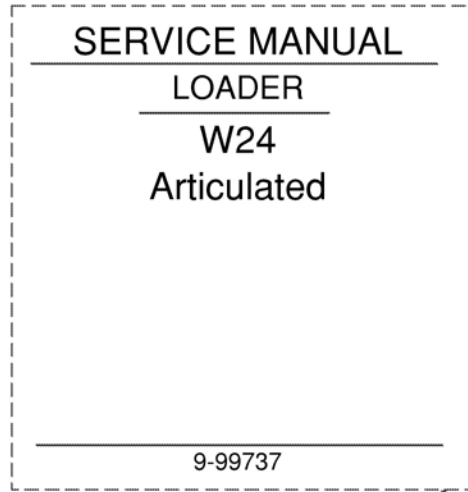

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

Table of Contents

SERIES/SECTION	SECTION NO.	FORM NO.
10 SERIES - GENERAL		
Maintenance and Lubrication	IX	9-99736
Detailed Engine Specifications	1020	9-77185
20 SERIES - ENGINE		
Stall Checks and Engine Removal and Installation	I	9-99736
Engine Diagnosis	2001	9-76365
Engine Tune-Up	2002	9-76379
Cylinder Head, Valve Train, and Camshaft	2015	9-76166
Cylinder Block, Sleeves, Pistons and Rods	2025	9-76176
Crankshaft, Main Bearings, Flywheel, and Oil Seals	2035	9-76187
Lubrication System	2046	9-76805
Cooling System	2055	9-76337
Turbocharger Failure Analysis	2565	9-78235
30 SERIES - FUEL SYSTEM		
Electric Fuel Pump	34	9-99735
Fuel System and Filters	3010	9-75297
Robert Bosch Fuel Injection Pumps	3012	9-74937
Roosa Master Fuel Injectors	3013	9-74959
40 SERIES - HYDRAULICS		
Hydraulic System	VI	9-99736
50 SERIES - STEERING		
Steering	VII	9-99736
60 SERIES - POWER TRAIN		
Notice - Power Shift Transmission	Sheet	9-99735
Allison Powershaft Transmission Service Manual		SA 1277
Differentials and Planetaries	IV	9-99736
Brakes and Air Operated Controls and Accessories	V	9-99736
80 SERIES - ELECTRICAL		
Electrical System	II	9-99736
90 SERIES - MOUNTED EQUIPMENT		
Loader	VIII	9-99736


Reprinted

TABLE OF CONTENTS


SERIAL NUMBER LOCATION	3
SCHEDULED MAINTENANCE	4
LUBRICANTS	
Engine Lubricating Oil	6
Transmission and Converter Oil	7
Hydraulic and Steering System Oil	7
Differentials and Planetaries	7
Grease Fittings	7
FUEL	7
SERVICING THE AIR CLEANER ELEMENTS	8
FUEL SHUT-OFF ADJUSTMENT	9
SHIFT LINKAGE ROUTING AND ADJUSTMENT	10
SERVICING THE HYDRAULIC RESERVOIR	11
TRANSMISSION AND CONVERTER OIL AND FILTER CHANGE	12
TORQUE SPECIFICATIONS	13

SERIAL NUMBER LOCATIONS


Loader Serial Number

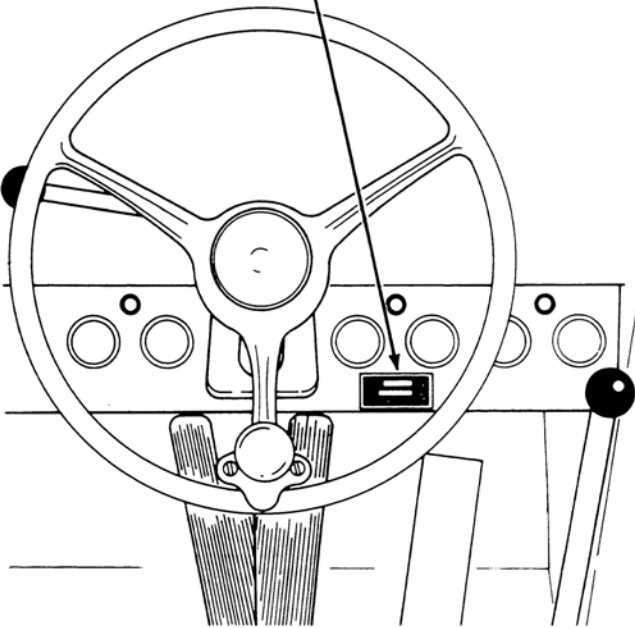

Engine Serial Number

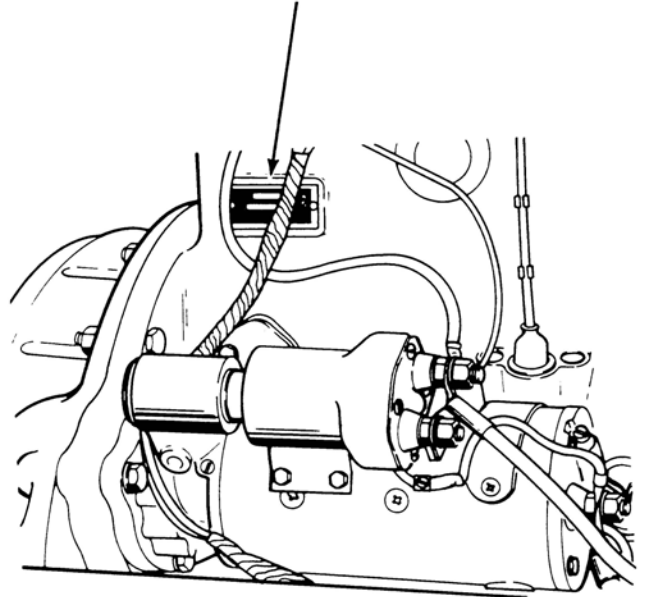

Transmission Serial Number

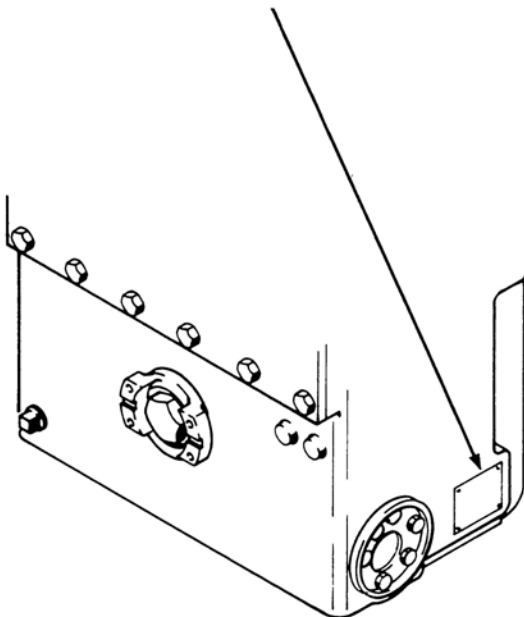

Axle Serial Number

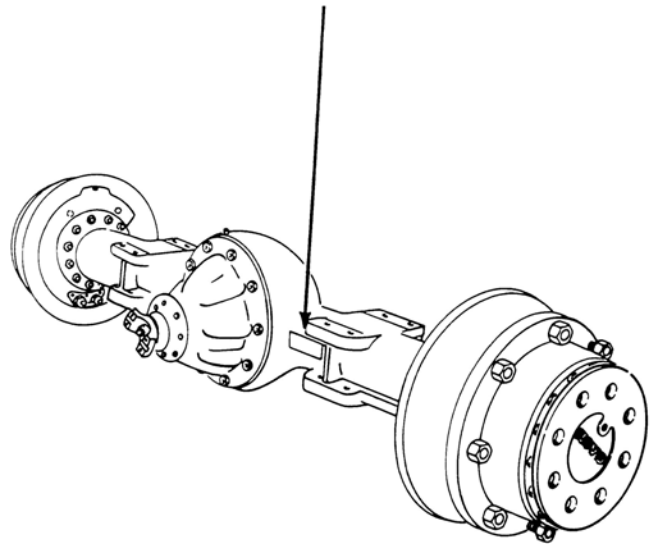


Figure 1

MAINTENANCE CHART

INTERVAL	TYPE OF SERVICE	FLUIDS & LUBRICANTS
Run-In Every 2 Hours	Check wheel bolt torque until stabilized. Torque 380 to 420 foot pounds. (Dry threads).	
Run-In After First 20 Hours	Change engine oil. Replace engine oil filter	See page 6.
Every 10 Hours Or Daily	Grease the loader pivot points. Check engine oil level. Drain water from main air reservoir. Drain water from auxiliary air reservoir. Check radiator coolant level.	See page 7.
Every 60 Hours Or Weekly	Grease rear axle trunion pivots. Grease upper and lower hinge pins. Grease steering cylinders. Check hydraulic oil level. Check transmission oil level. Check battery electrolyte level. Lubricate brake pedal. Drain water from 1st stage fuel filter.	See page 7. See page 7. See page 7. Distilled water. Few drops engine oil.
Every 150 Hours	Change engine oil. Grease all drive line grease fittings and plugs. Grease pitman arm link. Check brake master cylinders fluid level.	See page 6. See page 7. See page 7. SAE J1703 fluid
Every 300 Hours	Replace engine oil filter.	

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com