

586H
588H
Tier 4B (final)
Rough Terrain Forklift

SERVICE MANUAL

Part number 47821916
1st edition English
April 2015



Link Product / Engine

Product	Market Product	Engine
586H Two-Wheel Drive (2WD) TIER 4B (FINAL)	North America	F5HFL463D*F005
586H Four-Wheel Drive (4WD) TIER 4B (FINAL)	North America	F5HFL463D*F005
588H Two-Wheel Drive (2WD) TIER 4B (FINAL)	North America	F5HFL463A*F001
588H Four-Wheel Drive (4WD) TIER 4B (FINAL)	North America	F5HFL463A*F001

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.202] Air cleaners and lines	10.2
[10.216] Fuel tanks	10.3
[10.206] Fuel filters	10.4
[10.218] Fuel injection system.....	10.5
[10.220] Throttle linkage.....	10.6
[10.254] Intake and exhaust manifolds and muffler	10.7
[10.304] Engine lubrication system.....	10.8
[10.400] Engine cooling system	10.9
[10.414] Fan and drive	10.10
[10.501] Exhaust Gas Recirculation (EGR) - Diesel Particulate Filter (DPF) exhaust treatment	10.11
Transmission.....	21
[21.109] Transmission cooler and lines.....	21.1
[21.112] Power shuttle transmission.....	21.2
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential	27.2
[27.120] Planetary and final drives	27.3
[27.550] Non-powered rear axle.....	27.4
Brakes and controls	33

[33.110] Parking brake or parking lock	33.1
[33.202] Hydraulic service brakes	33.2
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.102] Pump control valves.....	35.2
[35.104] Fixed displacement pump.....	35.3
[35.300] Reservoir, cooler, and filters.....	35.4
[35.322] Regulated/Low pressure system	35.5
[35.359] Main control valve.....	35.6
[35.728] Telescopic arm control	35.7
[35.740] Telescopic arm hydraulic system.....	35.8
Frames and ballasting	39
[39.140] Ballasts and supports	39.1
Steering.....	41
[41.101] Steering control	41.1
[41.200] Hydraulic control components.....	41.2
[41.216] Cylinders	41.3
Wheels.....	44
[44.511] Front wheels.....	44.1
[44.520] Rear wheels.....	44.2
Electrical systems.....	55
[55.100] Harnesses and connectors.....	55.1
[55.201] Engine starting system.....	55.2
[55.301] Alternator.....	55.3
[55.302] Battery.....	55.4
[55.408] Warning indicators, alarms, and instruments	55.5
[55.991] Telematics	55.6
[55.DTC] FAULT CODES.....	55.7

Telescopic single arm	83
[83.122] Telescopic arm	83.1
Platform, cab, bodywork, and decals	90
[90.100] Engine hood and panels	90.1
[90.114] Operator protections	90.2
[90.116] Fenders and guards	90.3
[90.120] Mechanically-adjusted operator seat.....	90.4

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com