

Magnum™ 250

Magnum™ 280

Magnum™ 310

Magnum™ 340

Magnum™ 380

Magnum™ 310 Rowtrac™

Magnum™ 340 Rowtrac™

Magnum™ 380 Rowtrac™

**Continuously Variable Transmission (CVT)
Tractor**

PIN ZJRF04001 and above

SERVICE MANUAL

Part number 51537926

1st edition English

March 2019



Link Product / Engine

Product	Market Product	Engine
Magnum™ 250 CVT TIER 2 [ZJRF04001 -]	Australia New Zealand	F2CFA613G*E024
Magnum™ 250 CVT TIER 2 [ZJRF04001 -]	Asia Pacific	F2CFA613G*E024
Magnum™ 280 CVT TIER 2 [ZJRF04001 -]	Asia Pacific	F2CFA613G*E024
Magnum™ 280 CVT TIER 2 [ZJRF04001 -]	Latin America	F2CFA613G*E024
Magnum™ 280 CVT TIER 2 [ZJRF04001 -]	Australia New Zealand	F2CFA613G*E024
Magnum™ 310 CVT TIER 2 [ZJRF04001 -]	Asia Pacific	F2CFA613G*E024
Magnum™ 310 CVT TIER 2 [ZJRF04001 -]	Australia New Zealand	F2CFA613G*E024
Magnum™ 310 CVT TIER 2 [ZJRF04001 -]	Latin America	F2CFA613G*E024
Magnum™ 340 CVT TIER 2 [ZJRF04001 -]	Asia Pacific	F2CFA614D*E021
Magnum™ 340 CVT TIER 2 [ZJRF04001 -]	Australia New Zealand	F2CFA614D*E021
Magnum™ 340 CVT TIER 2 [ZJRF04001 -]	Latin America	F2CFA614D*E021
Magnum™ 380 CVT TIER 2 [ZJRF04001 -]	Asia Pacific	F2CFA614D*E021
Magnum™ 380 CVT TIER 2 [ZJRF04001 -]	Latin America	F2CFA614D*E021
Magnum™ 380 CVT TIER 2 [ZJRF04001 -]	Australia New Zealand	F2CFA614D*E021
Magnum™ 310 Rowtrac™ CVT TIER 2 [ZJRF04001 -]	Australia New Zealand	F2CFA613B*E023
Magnum™ 310 Rowtrac™ CVT TIER 2 [ZJRF04001 -]	Asia Pacific	F2CFA613B*E023
Magnum™ 310 Rowtrac™ CVT TIER 2 [ZJRF04001 -]	Latin America	F2CFA613B*E023
Magnum™ 340 Rowtrac™ CVT TIER 2 [ZJRF04001 -]	Asia Pacific	F2CFA614D*E021
Magnum™ 340 Rowtrac™ CVT TIER 2 [ZJRF04001 -]	Australia New Zealand	F2CFA614D*E021
Magnum™ 340 Rowtrac™ CVT TIER 2 [ZJRF04001 -]	Latin America	F2CFA614D*E021
Magnum™ 380 Rowtrac™ CVT TIER 2 [ZJRF04001 -]	Asia Pacific	F2CFA614D*E021
Magnum™ 380 Rowtrac™ CVT TIER 2 [ZJRF04001 -]	Latin America	F2CFA614D*E021
Magnum™ 380 Rowtrac™ CVT TIER 2 [ZJRF04001 -]	Australia New Zealand	F2CFA614D*E021

Contents

INTRODUCTION

Engine	10
[10.001] Engine and crankcase	10.1
[10.101] Cylinder heads	10.2
[10.202] Air cleaners and lines	10.3
[10.206] Fuel filters	10.4
[10.216] Fuel tanks	10.5
[10.254] Intake and exhaust manifolds and muffler	10.6
[10.304] Engine lubrication system.....	10.7
[10.310] Aftercooler.....	10.8
[10.400] Engine cooling system	10.9
[10.414] Fan and drive	10.10
Transmission	21
[21.504] Continuously Variable Transmission (CVT)	21.1
[21.505] Continuously Variable Transmission (CVT) external controls.....	21.2
[21.506] Continuously Variable Transmission (CVT) hydraulic components	21.3
[21.507] Continuously Variable Transmission (CVT) internal components.....	21.4
[21.900] Hydraulic pump drive.....	21.5
Four-Wheel Drive (4WD) system	23
[23.202] Electro-hydraulic control	23.1
[23.314] Drive shaft.....	23.2
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3
[25.122] Axle suspension control.....	25.4

Rear axle system	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential.....	27.2
[27.120] Planetary and final drives	27.3
[27.610] Rear axle track yoke assembly	27.4
Power Take-Off (PTO)	31
[31.104] Rear electro-hydraulic control.....	31.1
[31.110] One-speed rear Power Take-Off (PTO)	31.2
[31.114] Two-speed rear Power Take-Off (PTO)	31.3
[31.146] Front Power Take-Off (PTO)	31.4
Brakes and controls	33
[33.110] Parking brake or parking lock	33.1
[33.202] Hydraulic service brakes	33.2
[33.220] Trailer brake hydraulic control.....	33.3
[33.224] Trailer brake pneumatic control	33.4
Hydraulic systems	35
[35.000] Hydraulic systems.....	35.1
[35.102] Pump control valves.....	35.2
[35.106] Variable displacement pump	35.3
[35.114] Three-point hitch control valve	35.4
[35.124] Three-point hitch hydraulic adjustment	35.5
[35.204] Remote control valves	35.6
[35.300] Reservoir, cooler, and filters.....	35.7
[35.304] Combination pump units	35.8
Hitches, drawbars, and implement couplings	37
[37.110] Rear three-point hitch	37.1
[37.120] Rear three-point hitch linkage.....	37.2
[37.162] Front hitch.....	37.3

Frames and ballasting	39
[39.100] Frame	39.1
Steering.....	41
[41.101] Steering control	41.1
[41.200] Hydraulic control components.....	41.2
[41.206] Pump	41.3
[41.432] Autoguidance steering	41.4
Wheels	44
[44.520] Rear wheels	44.1
Tracks and track suspension.....	48
[48.100] Tracks	48.1
[48.130] Track frame and driving wheels.....	48.2
[48.134] Track tension units	48.3
[48.138] Track rollers	48.4
Cab climate control	50
[50.100] Heating	50.1
[50.200] Air conditioning.....	50.2
[50.300] Cab pressurizing system	50.3
Electrical systems	55
[55.000] Electrical system	55.1
[55.010] Fuel injection system.....	55.2
[55.012] Engine cooling system	55.3
[55.013] Engine oil system	55.4
[55.014] Engine intake and exhaust system.....	55.5
[55.015] Engine control system.....	55.6
[55.024] Transmission control system	55.7
[55.045] Front axle control system	55.8
[55.046] Rear axle control system.....	55.9

[55.047] Steering control system	55.10
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system.....	55.11
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls.....	55.12
[55.100] Harnesses and connectors.....	55.13
[55.130] Rear three-point hitch electronic control system	55.14
[55.201] Engine starting system	55.15
[55.301] Alternator	55.16
[55.302] Battery.....	55.17
[55.408] Warning indicators, alarms, and instruments	55.18
[55.510] Cab or platform harnesses and connectors.....	55.19
[55.512] Cab controls.....	55.20
[55.513] Cab transmission controls.....	55.21
[55.518] Wiper and washer system.....	55.22
[55.640] Electronic modules	55.23
[55.DTC] FAULT CODES.....	55.24
Platform, cab, bodywork, and decals	90
[90.100] Engine hood and panels	90.1
[90.102] Engine shields, hood latches, and trims	90.2
[90.124] Pneumatically-adjusted operator seat.....	90.3
[90.150] Cab.....	90.4
[90.151] Cab interior.....	90.5
[90.160] Cab interior trim and panels.....	90.6

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com