

Magnum™ 250
Magnum™ 280
Magnum™ 310
Magnum™ 340
Magnum™ 310 Rowtrac™
Magnum™ 340 Rowtrac™
Powershift Transmission (PST)
Tractor
PIN ZJRF04001 and above

SERVICE MANUAL

Part number 51537929
1st edition English
March 2019



Link Product / Engine

Product	Market Product	Engine
Magnum™ 250 PST TIER 2 [ZJRF04001 -]	Australia New Zealand	F2CFA613G*E024
Magnum™ 250 PST TIER 2 [ZJRF04001 -]	Middle East Africa	F2CFA613G*E024
Magnum™ 250 PST TIER 2 [ZJRF04001 -]	North America	F2CFA613G*E024
Magnum™ 250 PST TIER 2 [ZJRF04001 -]	Latin America	F2CFA613G*E024
Magnum™ 250 PST TIER 2 [ZJRF04001 -]	Europe	F2CFA613G*E024
Magnum™ 250 PST TIER 2 [ZJRF04001 -]	Asia Pacific	F2CFA613G*E024
Magnum™ 280 PST TIER 2 [ZJRF04001 -]	North America	F2CFA613D*E024
Magnum™ 280 PST TIER 2 [ZJRF04001 -]	Asia Pacific	F2CFA613D*E024
Magnum™ 280 PST TIER 2 [ZJRF04001 -]	Latin America	F2CFA613D*E024
Magnum™ 280 PST TIER 2 [ZJRF04001 -]	Europe	F2CFA613D*E024
Magnum™ 280 PST TIER 2 [ZJRF04001 -]	Middle East Africa	F2CFA613D*E024
Magnum™ 280 PST TIER 2 [ZJRF04001 -]	Australia New Zealand	F2CFA613D*E024
Magnum™ 310 PST TIER 2 [ZJRF04001 -]	Europe	F2CFA613G*E023
Magnum™ 310 PST TIER 2 [ZJRF04001 -]	North America	F2CFA613G*E023
Magnum™ 310 PST TIER 2 [ZJRF04001 -]	Latin America	F2CFA613G*E023
Magnum™ 310 PST TIER 2 [ZJRF04001 -]	Asia Pacific	F2CFA613G*E023
Magnum™ 310 PST TIER 2 [ZJRF04001 -]	Middle East Africa	F2CFA613G*E023
Magnum™ 310 PST TIER 2 [ZJRF04001 -]	Australia New Zealand	F2CFA613G*E023
Magnum™ 340 PST TIER 2 [ZJRF04001 -]	Australia New Zealand	F2CFA614D*E021
Magnum™ 340 PST TIER 2 [ZJRF04001 -]	Europe	F2CFA614D*E021
Magnum™ 340 PST TIER 2 [ZJRF04001 -]	North America	F2CFA614D*E021
Magnum™ 340 PST TIER 2 [ZJRF04001 -]	Latin America	F2CFA614D*E021
Magnum™ 340 PST TIER 2 [ZJRF04001 -]	Asia Pacific	F2CFA614D*E021
Magnum™ 340 PST TIER 2 [ZJRF04001 -]	Middle East Africa	F2CFA614D*E021

Product	Market Product	Engine
Magnum™ 310 Rowtrac™ PST TIER 2 [ZJRF04001 -]	Latin America	F2CFA613B*E023
Magnum™ 310 Rowtrac™ PST TIER 2 [ZJRF04001 -]	Asia Pacific	F2CFA613B*E023
Magnum™ 310 Rowtrac™ PST TIER 2 [ZJRF04001 -]	Middle East Africa	F2CFA613B*E023
Magnum™ 310 Rowtrac™ PST TIER 2 [ZJRF04001 -]	Europe	F2CFA613B*E023
Magnum™ 310 Rowtrac™ PST TIER 2 [ZJRF04001 -]	North America	F2CFA613B*E023
Magnum™ 310 Rowtrac™ PST TIER 2 [ZJRF04001 -]	Australia New Zealand	F2CFA613B*E023
Magnum™ 340 Rowtrac™ PST TIER 2 [ZJRF04001 -]	Asia Pacific	F2CFA614D*E021
Magnum™ 340 Rowtrac™ PST TIER 2 [ZJRF04001 -]	Europe	F2CFA614D*E021
Magnum™ 340 Rowtrac™ PST TIER 2 [ZJRF04001 -]	Australia New Zealand	F2CFA614D*E021
Magnum™ 340 Rowtrac™ PST TIER 2 [ZJRF04001 -]	North America	F2CFA614D*E021
Magnum™ 340 Rowtrac™ PST TIER 2 [ZJRF04001 -]	Middle East Africa	F2CFA614D*E021
Magnum™ 340 Rowtrac™ PST TIER 2 [ZJRF04001 -]	Latin America	F2CFA614D*E021

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.101] Cylinder heads	10.2
[10.202] Air cleaners and lines	10.3
[10.206] Fuel filters	10.4
[10.216] Fuel tanks	10.5
[10.254] Intake and exhaust manifolds and muffler	10.6
[10.304] Engine lubrication system.....	10.7
[10.310] Aftercooler.....	10.8
[10.400] Engine cooling system	10.9
[10.414] Fan and drive	10.10
Transmission.....	21
[21.105] Powershift transmission hydraulic components.....	21.1
[21.113] Powershift transmission	21.2
[21.135] Powershift transmission external controls.....	21.3
[21.155] Powershift transmission internal components.....	21.4
[21.200] Dropbox	21.5
[21.900] Hydraulic pump drive.....	21.6
Four-Wheel Drive (4WD) system	23
[23.202] Electro-hydraulic control	23.1
[23.314] Drive shaft.....	23.2
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3

[25.122] Axle suspension control	25.4
Rear axle system	27
[27.100] Powered rear axle	27.1
[27.106] Rear bevel gear set and differential	27.2
[27.120] Planetary and final drives	27.3
[27.610] Rear axle track yoke assembly	27.4
Power Take-Off (PTO)	31
[31.104] Rear electro-hydraulic control	31.1
[31.110] One-speed rear Power Take-Off (PTO)	31.2
[31.114] Two-speed rear Power Take-Off (PTO)	31.3
[31.146] Front Power Take-Off (PTO)	31.4
Brakes and controls	33
[33.110] Parking brake or parking lock	33.1
[33.202] Hydraulic service brakes	33.2
[33.220] Trailer brake hydraulic control	33.3
[33.224] Trailer brake pneumatic control	33.4
Hydraulic systems	35
[35.000] Hydraulic systems	35.1
[35.102] Pump control valves	35.2
[35.106] Variable displacement pump	35.3
[35.114] Three-point hitch control valve	35.4
[35.124] Three-point hitch hydraulic adjustment	35.5
[35.204] Remote control valves	35.6
[35.300] Reservoir, cooler, and filters	35.7
[35.304] Combination pump units	35.8
Hitches, drawbars, and implement couplings	37
[37.110] Rear three-point hitch	37.1
[37.120] Rear three-point hitch linkage	37.2

[37.162] Front hitch	37.3
Frames and ballasting	39
[39.100] Frame	39.1
Steering.....	41
[41.101] Steering control	41.1
[41.200] Hydraulic control components.....	41.2
[41.206] Pump	41.3
[41.432] Autoguidance steering	41.4
Wheels	44
[44.520] Rear wheels.....	44.1
Tracks and track suspension	48
[48.100] Tracks	48.1
[48.130] Track frame and driving wheels	48.2
[48.134] Track tension units	48.3
[48.138] Track rollers	48.4
Cab climate control	50
[50.100] Heating.....	50.1
[50.200] Air conditioning	50.2
[50.300] Cab pressurizing system.....	50.3
Electrical systems	55
[55.000] Electrical system	55.1
[55.010] Fuel injection system	55.2
[55.012] Engine cooling system	55.3
[55.013] Engine oil system	55.4
[55.014] Engine intake and exhaust system.....	55.5
[55.015] Engine control system.....	55.6
[55.024] Transmission control system.....	55.7
[55.045] Front axle control system	55.8

[55.046] Rear axle control system.....	55.9
[55.047] Steering control system	55.10
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system.....	55.11
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls.....	55.12
[55.100] Harnesses and connectors.....	55.13
[55.130] Rear three-point hitch electronic control system	55.14
[55.201] Engine starting system	55.15
[55.301] Alternator.....	55.16
[55.302] Battery.....	55.17
[55.408] Warning indicators, alarms, and instruments	55.18
[55.510] Cab or platform harnesses and connectors.....	55.19
[55.512] Cab controls.....	55.20
[55.513] Cab transmission controls.....	55.21
[55.518] Wiper and washer system.....	55.22
[55.640] Electronic modules	55.23
[55.DTC] FAULT CODES.....	55.24
Platform, cab, bodywork, and decals.....	90
[90.100] Engine hood and panels	90.1
[90.102] Engine shields, hood latches, and trims	90.2
[90.124] Pneumatically-adjusted operator seat.....	90.3
[90.150] Cab.....	90.4
[90.151] Cab interior.....	90.5
[90.160] Cab interior trim and panels.....	90.6

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com