

WD1903
WD2303
Self-Propelled Windrower
from PIN YCG667001 and above

SERVICE MANUAL

Part number 47487699
1st edition English
January 2013



Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.202] Air cleaners and lines	10.2
[10.206] Fuel filters	10.3
[10.216] Fuel tanks	10.4
[10.218] Fuel injection system.....	10.5
[10.254] Intake and exhaust manifolds and muffler	10.6
[10.400] Engine cooling system	10.7
Front axle system	25
[25.310] Final drives	25.1
Rear axle system.....	27
[27.550] Non-powered rear axle.....	27.1
Hydrostatic drive.....	29
[29.100] Transmission and steering hydrostatic control	29.1
[29.202] Hydrostatic transmission	29.2
[29.218] Pump and motor components.....	29.3
Power Take-Off (PTO).....	31
[31.226] Hydraulic pump drive.....	31.1
Brakes and controls	33
[33.110] Parking brake / Parking lock	33.1
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.102] Pump control valves.....	35.2
[35.104] Fixed displacement pump.....	35.3
[35.105] Charge pump.....	35.4

[35.300] Reservoir, cooler, and filters.....	35.5
[35.565] Cutter control circuit.....	35.6
[35.910] Draper header hydraulic drive.....	35.7
Steering.....	41
[41.101] Steering control	41.1
Wheels.....	44
[44.520] Rear wheels	44.1
Cab climate control	50
[50.100] Heating	50.1
[50.104] Ventilation	50.2
[50.200] Air conditioning.....	50.3
Electrical systems	55
[55.000] Electrical system	55.1
[55.010] Fuel injection system.....	55.2
[55.013] Engine oil system	55.3
[55.014] Engine intake and exhaust system.....	55.4
[55.015] Engine control system.....	55.5
[55.019] Hydrostatic drive control system	55.6
[55.031] Parking brake electrical system	55.7
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system.....	55.8
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls.....	55.9
[55.100] Harnesses and connectors.....	55.10
[55.201] Engine starting system	55.11
[55.202] Cold start aid	55.12
[55.404] External lighting	55.13
[55.512] Cab controls.....	55.14
[55.518] Wiper/Washer system.....	55.15
[55.520] Cab harvesting controls	55.16

[55.634] Merger electrical control system	55.17
[55.661] Cab header controls.....	55.18
[55.662] Header height control	55.19
[55.830] Rotary screen drive and cleaning	55.20
[55.DTC] FAULT CODES.....	55.21
Attachments/Headers.....	58
[58.110] Attachment/Header cutting mechanism	58.1
[58.130] Attachment/Header frame.....	58.2
Platform, cab, bodywork, and decals.....	90
[90.124] Pneumatically-adjusted operator seat.....	90.1
[90.150] Cab.....	90.2
[90.151] Cab interior.....	90.3
[90.154] Cab doors and hatches	90.4

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com