

Puma 170 CVX
Puma 185 CVX
Puma 200 CVX
Puma 215 CVX
Puma 230 CVX
Puma 170
Puma 185
Puma 200
Puma 215
Tractor

SERVICE MANUAL

Part number 47524320

English
May 2013





SERVICE MANUAL



**PUMA 170 CVX , PUMA 170 , PUMA 185 CVX , PUMA 185 , PUMA 200 CVX ,
PUMA 200 , PUMA 215 CVX , PUMA 215 , PUMA 230 CVX**

Link Product / Engine

Product	Market Product	Engine
PUMA 170	North America	F4DFE613L*A
PUMA 170	Europe	F4DFE613L*A
PUMA 170	International Region	F4DFE613L*A
PUMA 185	International Region	F4DFE613K*A
PUMA 185	North America	F4DFE613K*A
PUMA 185	Europe	F4DFE613K*A
PUMA 200	Europe	F4DFE613J*A
PUMA 200	North America	F4DFE613J*A
PUMA 200	International Region	F4DFE613J*A
PUMA 215	North America	F4DFE613H*A
PUMA 215	International Region	F4DFE613H*A
PUMA 215	Europe	F4DFE613H*A
PUMA 170 CVX	International Region	F4DFE613L*A
PUMA 170 CVX	Europe	F4DFE613L*A
PUMA 185 CVX	Europe	F4DFE613K*A
PUMA 185 CVX	International Region	F4DFE613K*A
PUMA 200 CVX	Europe	F4DFE613J*A
PUMA 200 CVX	International Region	F4DFE613J*A
PUMA 215 CVX	Europe	F4DFE613H*A
PUMA 215 CVX	International Region	F4DFE613H*A
PUMA 230 CVX	Europe	F4DFE613G*A
PUMA 230 CVX	International Region	F4DFE613G*A

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.102] Pan and covers	10.2
[10.216] Fuel tanks	10.3
[10.210] Lift pump and lines	10.4
[10.218] Fuel injection system.....	10.5
[10.250] Turbocharger and lines.....	10.6
[10.254] Intake and exhaust manifolds and muffler	10.7
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment.....	10.8
[10.400] Engine cooling system	10.9
[10.414] Fan and drive	10.10
[10.408] Oil cooler and lines.....	10.11
Transmission.....	21
[21.113] Powershift transmission	21.1
[21.155] Powershift transmission internal components.....	21.2
[21.160] Creeper	21.3
[21.166] Overdrive.....	21.4
[21.504] Continuously Variable Transmission (CVT)	21.5
[21.505] Continuously Variable Transmission (CVT) external controls.....	21.6
[21.506] Continuously Variable Transmission (CVT) lubrication system	21.7
[21.507] Continuously Variable Transmission (CVT) internal components.....	21.8
[21.109] Transmission cooler and lines.....	21.9
Four-Wheel Drive (4WD) system	23
[23.202] Electro-hydraulic control	23.1
[23.314] Drive shaft.....	23.2
Front axle system	25

[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3
[25.122] Axle suspension control	25.4
Rear axle system	27
[27.100] Powered rear axle	27.1
[27.106] Rear bevel gear set and differential	27.2
[27.120] Planetary and final drives	27.3
Power Take-Off (PTO)	31
[31.101] Rear mechanical control	31.1
[31.104] Rear electro-hydraulic control	31.2
[31.114] Two-speed rear Power Take-Off (PTO)	31.3
[31.116] Three-speed rear Power Take-Off (PTO)	31.4
[31.119] Four-speed rear Power Take-Off (PTO)	31.5
[31.146] Front Power Take-Off (PTO)	31.6
Brakes and controls	33
[33.202] Hydraulic service brakes	33.1
[33.110] Parking brake or parking lock	33.2
[33.220] Trailer brake hydraulic control	33.3
[33.224] Trailer brake pneumatic control	33.4
[33.350] Anti-lock Brake System (ABS)	33.5
Hydraulic systems	35
[35.000] Hydraulic systems	35.1
[35.300] Reservoir, cooler, and filters	35.2
[35.106] Variable displacement pump	35.3
[35.102] Pump control valves	35.4
[35.105] Charge pump	35.5
[35.322] Regulated/Low pressure system	35.6

[35.204] Remote control valves	35.7
[35.220] Auxiliary hydraulic pump and lines	35.8
[35.114] Three-point hitch control valve	35.9
[35.162] Front hitch cylinders and lines	35.10
Pneumatic system	36
[36.100] Pneumatic system.....	36.1
Hitches, drawbars, and implement couplings.....	37
[37.120] Rear three-point hitch linkage.....	37.1
[37.162] Front hitch.....	37.2
[37.110] Rear three-point hitch	37.3
[37.106] Automatic pickup hitch	37.4
Frames and ballasting	39
[39.100] Frame	39.1
Steering.....	41
[41.101] Steering control	41.1
[41.106] Tie rods.....	41.2
[41.200] Hydraulic control components.....	41.3
[41.216] Cylinders	41.4
[41.432] Autoguidance steering	41.5
Wheels.....	44
[44.511] Front wheels.....	44.1
[44.520] Rear wheels.....	44.2
Cab climate control	50
[50.100] Heating	50.1
[50.104] Ventilation	50.2
[50.200] Air conditioning.....	50.3
Electrical systems	55
[55.610] Ground speed control	55.1

[55.000] Electrical system	55.2
[55.100] Harnesses and connectors.....	55.3
[55.015] Engine control system.....	55.4
[55.301] Alternator.....	55.5
[55.302] Battery.....	55.6
[55.988] Selective Catalytic Reduction (SCR) electrical system	55.7
[55.640] Electronic modules	55.8
[55.513] Cab transmission controls.....	55.9
[55.024] Transmission control system	55.10
[55.020] Transmission speed sensors.....	55.11
[55.021] Transmission pressure sensors	55.12
[55.022] Transmission temperature sensors	55.13
[55.045] Front axle control system	55.14
[55.048] Rear Power Take-Off (PTO) control system	55.15
[55.049] Front Power Take-Off (PTO) control system	55.16
[55.031] Parking brake electrical system	55.17
[55.035] Remote control valve electric control	55.18
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls.....	55.19
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system.....	55.20
[55.047] Steering control system	55.21
[55.523] Cab hitch controls	55.22
[55.130] Rear three-point hitch electronic control system	55.23
[55.911] Global Positioning System (GPS)	55.24
[55.680] Autopilot/Autoguidance	55.25
[55.408] Warning indicators, alarms, and instruments	55.26
[55.350] Anti-lock Brake System (ABS) electrical system.....	55.27
[55.032] Trailer brake electrical system	55.28
[55.030] Service brake electrical system	55.29
[55.DTC] FAULT CODES.....	55.30

Platform, cab, bodywork, and decals	90
[90.100] Engine hood and panels	90.1
[90.150] Cab	90.2

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com