

**AXIAL-FLOW® 7230**  
**AXIAL-FLOW® 8230**  
**AXIAL-FLOW® 9230**

Combine

*from PIN YDG218533 and above*

**SERVICE MANUAL**

**Part number 47548079**

1<sup>st</sup> edition English

May 2013



# Contents

---

## INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase .....	10.1
[10.202] Air cleaners and lines .....	10.2
[10.216] Fuel tanks .....	10.3
[10.210] Lift pump and lines .....	10.4
[10.310] Aftercooler.....	10.5
[10.400] Engine cooling system .....	10.6
[10.414] Fan and drive .....	10.7
[10.418] Rotary screen .....	10.8
[10.450] Engine air compressor .....	10.9
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment.....	10.10
Main gearbox and drive .....	14
[14.100] Main gearbox and drive .....	14.1
Transmission.....	21
[21.100] Mechanical transmission lubrication system .....	21.1
[21.114] Mechanical transmission .....	21.2
[21.130] Mechanical transmission external controls.....	21.3
[21.145] Gearbox internal components.....	21.4
[21.182] Differential.....	21.5
Front axle system .....	25
[25.100] Powered front axle .....	25.1
[25.108] Final drive hub, steering knuckles, and shafts .....	25.2
[25.310] Final drives .....	25.3
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1

[27.124] Final drive hub, steering knuckles, and shafts .....	27.2
<b>Hydrostatic drive .....</b>	<b>29</b>
[29.100] Transmission and steering hydrostatic control .....	29.1
[29.202] Hydrostatic transmission .....	29.2
[29.218] Pump and motor components .....	29.3
[29.300] Rear hydrostatic transmission .....	29.4
<b>Power Take-Off (PTO) .....</b>	<b>31</b>
[31.146] Front Power Take-Off (PTO) .....	31.1
<b>Brakes and controls .....</b>	<b>33</b>
[33.110] Parking brake or parking lock .....	33.1
[33.202] Hydraulic service brakes .....	33.2
<b>Hydraulic systems.....</b>	<b>35</b>
[35.000] Hydraulic systems .....	35.1
[35.102] Pump control valves.....	35.2
[35.106] Variable displacement pump .....	35.3
[35.220] Auxiliary hydraulic pump and lines .....	35.4
[35.300] Reservoir, cooler, and filters.....	35.5
[35.350] Safety and main relief valves .....	35.6
[35.359] Main control valve .....	35.7
[35.410] Header or attachment height system .....	35.8
[35.415] Header or attachment tilting system .....	35.9
[35.440] Grain tank unload system .....	35.10
[35.536] Crop processor system .....	35.11
<b>Steering.....</b>	<b>41</b>
[41.101] Steering control .....	41.1
[41.200] Hydraulic control components.....	41.2
[41.216] Cylinders .....	41.3
<b>Wheels .....</b>	<b>44</b>

[44.511] Front wheels.....	44.1
[44.520] Rear wheels.....	44.2
<b>Tracks and track suspension .....</b>	<b>48</b>
[48.100] Tracks .....	48.1
[48.130] Track frame and driving wheels .....	48.2
[48.134] Track tension units .....	48.3
[48.138] Track rollers .....	48.4
<b>Cab climate control .....</b>	<b>50</b>
[50.100] Heating.....	50.1
[50.104] Ventilation .....	50.2
[50.200] Air conditioning.....	50.3
<b>Electrical systems.....</b>	<b>55</b>
[55.000] Electrical system .....	55.1
[55.010] Fuel injection system.....	55.2
[55.011] Fuel tank system .....	55.3
[55.012] Engine cooling system .....	55.4
[55.013] Engine oil system .....	55.5
[55.014] Engine intake and exhaust system.....	55.6
[55.015] Engine control system.....	55.7
[55.023] Transmission position sensors .....	55.8
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system.....	55.9
[55.100] Harnesses and connectors.....	55.10
[55.201] Engine starting system.....	55.11
[55.202] Cold start aid .....	55.12
[55.301] Alternator.....	55.13
[55.302] Battery.....	55.14
[55.421] Feeding control system .....	55.15
[55.426] Harvest material flow control system.....	55.16
[55.640] Electronic modules.....	55.17

[55.988] Selective Catalytic Reduction (SCR) electrical system .....	55.18
[55.DTC] FAULT CODES.....	55.19
<b>Attachments/Headers.....</b>	<b>58</b>
[58.130] Attachment/Header frame.....	58.1
<b>Product feeding .....</b>	<b>60</b>
[60.105] Floating roll, feed chain, and drive .....	60.1
[60.110] Feeder housing.....	60.2
[60.112] Stone trapping system .....	60.3
[60.150] Feeder drive system .....	60.4
<b>Threshing .....</b>	<b>66</b>
[66.000] Threshing .....	66.1
[66.110] Concave control system.....	66.2
[66.260] Threshing mechanism drive system .....	66.3
[66.331] Rotor .....	66.4
<b>Separation .....</b>	<b>72</b>
[72.220] Discharge beater .....	72.1
[72.420] Rotary separator .....	72.2
<b>Residue handling.....</b>	<b>73</b>
[73.210] Straw chopper drive system.....	73.1
[73.215] Straw chopper electro-magnetic clutch support.....	73.2
[73.230] Straw chopper.....	73.3
[73.335] Chaff spreader .....	73.4
<b>Cleaning .....</b>	<b>74</b>
[74.000] Cleaning.....	74.1
[74.100] Self-leveling frame .....	74.2
[74.101] Cleaning drive systems .....	74.3
[74.110] Grain pan.....	74.4
[74.114] Upper shaker shoe .....	74.5

[74.118] Lower shaker shoe .....	74.6
[74.130] Fan housing .....	74.7
[74.136] Fan drive system .....	74.8
[74.140] Tailings return system .....	74.9
<b>Crop storage / Unloading .....</b>	<b>80</b>
[80.101] Clean grain elevator .....	80.1
[80.150] Grain tank .....	80.2
[80.175] Grain tank unload drive system .....	80.3
[80.180] Grain tank unload .....	80.4
<b>Platform, cab, bodywork, and decals .....</b>	<b>90</b>
[90.100] Engine hood and panels .....	90.1
[90.105] Machine shields and guards .....	90.2
[90.124] Pneumatically-adjusted operator seat .....	90.3
[90.150] Cab .....	90.4
[90.151] Cab interior .....	90.5

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)