

MAXXUM 110 EP
MAXXUM 115 EP
MAXXUM 120 EP
MAXXUM 125 EP
MAXXUM 130 EP
MAXXUM 140 EP
MAXXUM 110 Multicontroller EP
MAXXUM 115 Multicontroller EP
MAXXUM 120 Multicontroller EP
MAXXUM 125 Multicontroller EP
MAXXUM 130 Multicontroller EP
MAXXUM 140 Multicontroller EP
MAXXUM CVT 110
MAXXUM CVT 120
MAXXUM CVT 130
Tractor

SERVICE MANUAL

Part number 47665857

English

February 2014



SERVICE MANUAL



**MAXXUM 110 EP , MAXXUM 110 Multicontroller EP , MAXXUM 115 EP
 , MAXXUM 115 Multicontroller EP , MAXXUM 120 EP , MAXXUM 120
 Multicontroller EP , MAXXUM 125 EP , MAXXUM 125 Multicontroller EP ,
 MAXXUM 130 EP , MAXXUM 130 Multicontroller EP , MAXXUM 140 EP ,
 MAXXUM 140 Multicontroller EP , MAXXUM CVT 110 , MAXXUM CVT 120 ,
 MAXXUM CVT 130**

Link Product / Engine

Product	Market Product	Engine
MAXXUM CVT 110	International Region	F4DFE413C*A
MAXXUM CVT 120	International Region	F4DFE413B*A
MAXXUM CVT 130	International Region	F4DFE413A*A
MAXXUM 110 EP	International Region	F4DFE413E*A
MAXXUM 110 Multicontroller EP	International Region	F4DFE413C*A
MAXXUM 115 EP	International Region	F4DFE613F*A
MAXXUM 115 Multicontroller EP	International Region	F4DFE613F*A
MAXXUM 120 EP	International Region	F4DFE413D*A
MAXXUM 120 Multicontroller EP	International Region	F4DFE413B*A
MAXXUM 125 EP	International Region	F4DFE613E*A
MAXXUM 125 Multicontroller EP	International Region	F4DFE613E*A
MAXXUM 130 EP	International Region	F4DFE413C*A
MAXXUM 130 Multicontroller EP	International Region	F4DFE413A*A
MAXXUM 140 EP	International Region	F4DFE6132*A
MAXXUM 140 Multicontroller EP	International Region	F4DFE6132*A

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.216] Fuel tanks	10.2
[10.218] Fuel injection system.....	10.3
[10.202] Air cleaners and lines	10.4
[10.250] Turbocharger and lines.....	10.5
[10.254] Intake and exhaust manifolds and muffler	10.6
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment.....	10.7
[10.400] Engine cooling system	10.8
[10.414] Fan and drive	10.9
[10.310] Aftercooler.....	10.10
Clutch	18
[18.112] Slip clutch or flywheel damper	18.1
Transmission.....	21
[21.112] Power shuttle transmission.....	21.1
[21.134] Power shuttle transmission external controls	21.2
[21.154] Power shuttle transmission internal components	21.3
[21.111] Semi-Powershift transmission	21.4
[21.133] Semi-Powershift transmission external controls	21.5
[21.103] Semi-Powershift transmission lubrication system.....	21.6
[21.152] Semi-Powershift transmission internal components	21.7
[21.504] Continuously Variable Transmission (CVT)	21.8
[21.505] Continuously Variable Transmission (CVT) external controls.....	21.9
[21.506] Continuously Variable Transmission (CVT) lubrication system	21.10
[21.507] Continuously Variable Transmission (CVT) internal components.....	21.11
[21.160] Creeper	21.12

[21.166] Overdrive	21.13
Four-Wheel Drive (4WD) system	23
[23.202] Electro-hydraulic control	23.1
[23.314] Drive shaft.....	23.2
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3
[25.122] Axle suspension control.....	25.4
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential.....	27.2
[27.120] Planetary and final drives	27.3
Power Take-Off (PTO).....	31
[31.104] Rear electro-hydraulic control.....	31.1
[31.114] Two-speed rear Power Take-Off (PTO)	31.2
[31.116] Three-speed rear Power Take-Off (PTO)	31.3
[31.142] Front Power Take-Off (PTO) control	31.4
[31.146] Front Power Take-Off (PTO)	31.5
Brakes and controls	33
[33.202] Hydraulic service brakes	33.1
[33.110] Parking brake or parking lock	33.2
[33.204] Front axle brake.....	33.3
[33.220] Trailer brake hydraulic control.....	33.4
[33.224] Trailer brake pneumatic control	33.5
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1

[35.300] Reservoir, cooler, and filters.....	35.2
[35.104] Fixed displacement pump.....	35.3
[35.106] Variable displacement pump	35.4
[35.105] Charge pump.....	35.5
[35.322] Regulated/Low pressure system.....	35.6
[35.204] Remote control valves	35.7
[35.220] Auxiliary hydraulic pump and lines	35.8
[35.114] Three-point hitch control valve	35.9
[35.116] Three-point hitch cylinder	35.10
[35.160] Front hitch controls and lines	35.11
Hitches, drawbars, and implement couplings.....	37
[37.120] Rear three-point hitch linkage.....	37.1
Frames and ballasting	39
[39.100] Frame	39.1
Steering.....	41
[41.101] Steering control	41.1
[41.106] Tie rods.....	41.2
[41.200] Hydraulic control components.....	41.3
[41.206] Pump.....	41.4
[41.216] Cylinders	41.5
Wheels.....	44
[44.511] Front wheels.....	44.1
[44.520] Rear wheels.....	44.2
Cab climate control	50
[50.100] Heating	50.1
[50.104] Ventilation	50.2
[50.200] Air conditioning.....	50.3
Electrical systems.....	55

[55.000] Electrical system	55.1
[55.100] Harnesses and connectors.....	55.2
[55.015] Engine control system.....	55.3
[55.301] Alternator.....	55.4
[55.302] Battery.....	55.5
[55.011] Fuel tank system	55.6
[55.988] Selective Catalytic Reduction (SCR) electrical system	55.7
[55.012] Engine cooling system	55.8
[55.640] Electronic modules	55.9
[55.513] Cab transmission controls.....	55.10
[55.024] Transmission control system.....	55.11
[55.020] Transmission speed sensors.....	55.12
[55.021] Transmission pressure sensors	55.13
[55.022] Transmission temperature sensors	55.14
[55.023] Transmission position sensors	55.15
[55.610] Ground speed control	55.16
[55.048] Rear Power Take-Off (PTO) control system	55.17
[55.031] Parking brake electrical system	55.18
[55.035] Remote control valve electric control	55.19
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls.....	55.20
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system.....	55.21
[55.047] Steering control system	55.22
[55.130] Rear three-point hitch electronic control system	55.23
[55.911] Global Positioning System (GPS)	55.24
[55.405] External lighting switches and relays	55.25
[55.510] Cab or platform harnesses and connectors.....	55.26
[55.408] Warning indicators, alarms, and instruments	55.27
[55.DTC] FAULT CODES.....	55.28

Platform, cab, bodywork, and decals	90
[90.150] Cab	90.1
[90.100] Engine hood and panels	90.2

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com