

**Magnum™ 250**  
**Magnum™ 280**  
**Magnum™ 310**  
**Magnum™ 340**  
**Magnum™ 310 Rowtrac™**  
**Magnum™ 340 Rowtrac™**  
**Powershift Transmission (PST)**  
**Tractor**  
*PIN ZFRF05001 and above*

**SERVICE MANUAL**

Part number 47917977  
1<sup>st</sup> edition English  
October 2015



## Link Product / Engine

Product	Market Product	Engine
Magnum™ 250 PST TIER 2 [ZFRF05001 - ]	Latin America	F2CFE613G*B001
Magnum™ 250 PST TIER 2 [ZFRF05001 - ]	North America	F2CFE613G*B001
Magnum™ 250 PST TIER 2 [ZFRF05001 - ]	Asia Pacific	F2CFE613G*B001
Magnum™ 250 PST TIER 2 [ZFRF05001 - ]	Middle East Africa	F2CFE613G*B001
Magnum™ 250 PST TIER 2 [ZFRF05001 - ]	Australia New Zealand	F2CFE613G*B001
Magnum™ 280 PST TIER 2 [ZFRF05001 - ]	North America	F2CFE614G*B002
Magnum™ 310 PST TIER 2 [ZFRF05001 - ]	Middle East Africa	F2CFA613B*E023
Magnum™ 310 PST TIER 2 [ZFRF05001 - ]	Australia New Zealand	F2CFA613B*E023
Magnum™ 310 PST TIER 2 [ZFRF05001 - ]	Asia Pacific	F2CFA613B*E023
Magnum™ 310 PST TIER 2 [ZFRF05001 - ]	Latin America	F2CFA613B*E023
Magnum™ 310 PST TIER 2 [ZFRF05001 - ]	North America	F2CFA613B*E023
Magnum™ 340 PST TIER 2 [ZFRF05001 - ]	North America	F2CFA614D*E021
Magnum™ 340 PST TIER 2 [ZFRF05001 - ]	Asia Pacific	F2CFA614D*E021
Magnum™ 340 PST TIER 2 [ZFRF05001 - ]	Middle East Africa	F2CFA614D*E021
Magnum™ 340 PST TIER 2 [ZFRF05001 - ]	Australia New Zealand	F2CFA614D*E021
Magnum™ 340 PST TIER 2 [ZFRF05001 - ]	Latin America	F2CFA614D*E021
Magnum™ 310 Rowtrac™ PST TIER 2 [ZFRF05001 - ]	Australia New Zealand	F2CFA613B*E023
Magnum™ 310 Rowtrac™ PST TIER 2 [ZFRF05001 - ]	Latin America	F2CFA613B*E023
Magnum™ 310 Rowtrac™ PST TIER 2 [ZFRF05001 - ]	Middle East Africa	F2CFA613B*E023
Magnum™ 310 Rowtrac™ PST TIER 2 [ZFRF05001 - ]	Asia Pacific	F2CFA613B*E023
Magnum™ 340 Rowtrac™ PST TIER 2 [ZFRF05001 - ]	Asia Pacific	F2CFA614D*E021
Magnum™ 340 Rowtrac™ PST TIER 2 [ZFRF05001 - ]	Australia New Zealand	F2CFA614D*E021
Magnum™ 340 Rowtrac™ PST TIER 2 [ZFRF05001 - ]	Latin America	F2CFA614D*E021
Magnum™ 340 Rowtrac™ PST TIER 2 [ZFRF05001 - ]	Middle East Africa	F2CFA614D*E021

# Contents

---

## INTRODUCTION

<b>Engine</b> .....	<b>10</b>
[10.001] Engine and crankcase .....	10.1
[10.101] Cylinder heads .....	10.2
[10.202] Air cleaners and lines .....	10.3
[10.216] Fuel tanks .....	10.4
[10.218] Fuel injection system.....	10.5
[10.254] Intake and exhaust manifolds and muffler .....	10.6
[10.304] Engine lubrication system.....	10.7
[10.310] Aftercooler.....	10.8
[10.400] Engine cooling system .....	10.9
[10.414] Fan and drive .....	10.10
<b>Power coupling</b> .....	<b>19</b>
[19.100] Drive shaft.....	19.1
[19.110] Flywheel damper .....	19.2
[19.120] Drive shaft shield assembly .....	19.3
<b>Transmission</b> .....	<b>21</b>
[21.105] Powershift transmission lubrication system .....	21.1
[21.113] Powershift transmission .....	21.2
[21.135] Powershift transmission external controls.....	21.3
[21.155] Powershift transmission internal components.....	21.4
[21.200] Dropbox .....	21.5
[21.900] Hydraulic pump drive.....	21.6
<b>Four-Wheel Drive (4WD) system</b> .....	<b>23</b>
[23.202] Electro-hydraulic control .....	23.1
[23.314] Drive shaft.....	23.2

<b>Front axle system .....</b>	<b>25</b>
[25.100] Powered front axle .....	25.1
[25.102] Front bevel gear set and differential .....	25.2
[25.108] Final drive hub, steering knuckles, and shafts .....	25.3
[25.122] Axle suspension control .....	25.4
<b>Rear axle system.....</b>	<b>27</b>
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential.....	27.2
[27.120] Planetary and final drives .....	27.3
[27.610] Rear axle track yoke assembly .....	27.4
<b>Power Take-Off (PTO).....</b>	<b>31</b>
[31.104] Rear electro-hydraulic control.....	31.1
[31.110] One-speed rear Power Take-Off (PTO) .....	31.2
[31.114] Two-speed rear Power Take-Off (PTO) .....	31.3
[31.146] Front Power Take-Off (PTO) .....	31.4
<b>Brakes and controls .....</b>	<b>33</b>
[33.110] Parking brake or parking lock .....	33.1
[33.202] Hydraulic service brakes .....	33.2
[33.220] Trailer brake hydraulic control.....	33.3
[33.224] Trailer brake pneumatic control .....	33.4
<b>Hydraulic systems.....</b>	<b>35</b>
[35.000] Hydraulic systems.....	35.1
[35.102] Pump control valves.....	35.2
[35.106] Variable displacement pump .....	35.3
[35.114] Three-point hitch control valve .....	35.4
[35.124] Three-point hitch hydraulic adjustment .....	35.5
[35.204] Remote control valves .....	35.6
[35.300] Reservoir, cooler, and filters.....	35.7

[35.304] Combination pump units .....	35.8
<b>Hitches, drawbars, and implement couplings.....</b>	<b>37</b>
[37.110] Rear three-point hitch .....	37.1
[37.162] Front hitch .....	37.2
<b>Steering.....</b>	<b>41</b>
[41.101] Steering control .....	41.1
[41.200] Hydraulic control components.....	41.2
[41.206] Pump .....	41.3
[41.432] Autoguidance steering .....	41.4
[41.910] Auxiliary steering .....	41.5
<b>Wheels .....</b>	<b>44</b>
[44.520] Rear wheels .....	44.1
<b>Tracks and track suspension.....</b>	<b>48</b>
[48.100] Tracks .....	48.1
[48.130] Track frame and driving wheels.....	48.2
[48.134] Track tension units .....	48.3
[48.138] Track rollers .....	48.4
<b>Cab climate control .....</b>	<b>50</b>
[50.100] Heating .....	50.1
[50.200] Air conditioning.....	50.2
[50.300] Cab pressurizing system.....	50.3
<b>Electrical systems .....</b>	<b>55</b>
[55.000] Electrical system .....	55.1
[55.010] Fuel injection system.....	55.2
[55.012] Engine cooling system .....	55.3
[55.013] Engine oil system .....	55.4
[55.014] Engine intake and exhaust system.....	55.5

[55.015] Engine control system.....	55.6
[55.024] Transmission control system.....	55.7
[55.045] Front axle control system .....	55.8
[55.046] Rear axle control system.....	55.9
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system.....	55.10
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls.....	55.11
[55.100] Harnesses and connectors.....	55.12
[55.130] Rear three-point hitch electronic control system .....	55.13
[55.201] Engine starting system.....	55.14
[55.301] Alternator.....	55.15
[55.302] Battery.....	55.16
[55.408] Warning indicators, alarms, and instruments .....	55.17
[55.512] Cab controls.....	55.18
[55.513] Cab transmission controls.....	55.19
[55.518] Wiper and washer system.....	55.20
[55.640] Electronic modules.....	55.21
[55.DTC] FAULT CODES.....	55.22
<b>Platform, cab, bodywork, and decals.....</b>	<b>90</b>
[90.100] Engine hood and panels .....	90.1
[90.102] Engine shields, hood latches, and trims .....	90.2
[90.124] Pneumatically-adjusted operator seat.....	90.3
[90.150] Cab.....	90.4
[90.151] Cab interior.....	90.5
[90.160] Cab interior trim and panels.....	90.6

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)