

**PUMA® 185
PUMA® 200
PUMA® 220
PUMA® 185 CVT
PUMA® 200 CVT
PUMA® 220 CVT
PUMA® 240 CVT
TIER 4B (FINAL)
Tractor**

SERVICE MANUAL

Part number 47936453

English

November 2015



Link Product / Engine

Product	Market Product	Engine
PUMA® 185 CVT	Asia Pacific	F4DFE613K*B006
PUMA® 185 CVT	Australia New Zealand	F4DFE613K*B006
PUMA® 185 CVT	Middle East Africa	F4DFE613K*B006
PUMA® 200 CVT	Asia Pacific	F4DFE613J*B006
PUMA® 200 CVT	Middle East Africa	F4DFE613J*B006
PUMA® 200 CVT	Australia New Zealand	F4DFE613J*B006
PUMA® 220 CVT	Australia New Zealand	F4DFE613H*B003
PUMA® 220 CVT	Asia Pacific	F4DFE613H*B003
PUMA® 220 CVT	Middle East Africa	F4DFE613H*B003
PUMA® 240 CVT	Middle East Africa	F4DFE613B*B006
PUMA® 240 CVT	Australia New Zealand	F4DFE613B*B006
PUMA® 240 CVT	Asia Pacific	F4DFE613B*B006
PUMA® 185	Middle East Africa	F4DFE613K*B006
PUMA® 185	Australia New Zealand	F4DFE613K*B006
PUMA® 185	Asia Pacific	F4DFE613K*B006
PUMA® 200	Middle East Africa	F4DFE613J*B006
PUMA® 200	Asia Pacific	F4DFE613J*B006
PUMA® 200	Australia New Zealand	F4DFE613J*B006
PUMA® 220	Asia Pacific	F4DFE613H*B003
PUMA® 220	Australia New Zealand	F4DFE613H*B003
PUMA® 220	Middle East Africa	F4DFE613H*B003

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.216] Fuel tanks	10.2
[10.218] Fuel injection system.....	10.3
[10.254] Intake and exhaust manifolds and muffler	10.4
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment.....	10.5
[10.400] Engine cooling system	10.6
[10.414] Fan and drive	10.7
[10.408] Oil cooler and lines.....	10.8
[10.101] Cylinder heads	10.9
Clutch	18
[18.112] Slip clutch or flywheel damper	18.1
Transmission.....	21
[21.113] Powershift transmission	21.1
[21.155] Powershift transmission internal components.....	21.2
[21.160] Creeper	21.3
[21.166] Overdrive.....	21.4
[21.504] Continuously Variable Transmission (CVT)	21.5
[21.505] Continuously Variable Transmission (CVT) external controls.....	21.6
[21.507] Continuously Variable Transmission (CVT) internal components.....	21.7
[21.506] Continuously Variable Transmission (CVT) lubrication system	21.8
[21.109] Transmission cooler and lines.....	21.9
Four-Wheel Drive (4WD) system	23
[23.202] Electro-hydraulic control	23.1
[23.314] Drive shaft.....	23.2

Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3
[25.122] Axle suspension control	25.4
Rear axle system	27
[27.100] Powered rear axle	27.1
[27.106] Rear bevel gear set and differential	27.2
[27.120] Planetary and final drives	27.3
[27.126] Spur gear and final drives	27.4
Power Take-Off (PTO)	31
[31.101] Rear mechanical control	31.1
[31.104] Rear electro-hydraulic control	31.2
[31.114] Two-speed rear Power Take-Off (PTO)	31.3
[31.116] Three-speed rear Power Take-Off (PTO)	31.4
[31.119] Four-speed rear Power Take-Off (PTO)	31.5
[31.146] Front Power Take-Off (PTO)	31.6
Brakes and controls	33
[33.202] Hydraulic service brakes	33.1
[33.110] Parking brake or parking lock	33.2
[33.220] Trailer brake hydraulic control	33.3
[33.224] Trailer brake pneumatic control	33.4
[33.350] Anti-lock Brake System (ABS)	33.5
Hydraulic systems	35
[35.000] Hydraulic systems	35.1
[35.300] Reservoir, cooler, and filters	35.2
[35.106] Variable displacement pump	35.3
[35.102] Pump control valves	35.4

[35.105] Charge pump.....	35.5
[35.230] Priority valves	35.6
[35.322] Regulated/Low pressure system	35.7
[35.204] Remote control valves	35.8
[35.220] Auxiliary hydraulic pump	35.9
[35.114] Three-point hitch control valve	35.10
[35.162] Front hitch cylinders and lines	35.11
Pneumatic system	36
[36.100] Pneumatic system.....	36.1
Hitches, drawbars, and implement couplings.....	37
[37.120] Rear three-point hitch linkage.....	37.1
[37.110] Rear three-point hitch	37.2
[37.162] Front hitch.....	37.3
[37.106] Automatic pickup hitch	37.4
Frames and ballasting	39
[39.100] Frame	39.1
Steering.....	41
[41.101] Steering control	41.1
[41.106] Tie rods.....	41.2
[41.200] Hydraulic control components.....	41.3
[41.216] Cylinders	41.4
[41.432] Autoguidance steering	41.5
Wheels	44
[44.511] Front wheels.....	44.1
[44.520] Rear wheels.....	44.2
Cab climate control	50
[50.100] Heating	50.1

[50.104] Ventilation	50.2
[50.200] Air conditioning	50.3
Electrical systems	55
[55.000] Electrical system	55.1
[55.100] Harnesses and connectors	55.2
[55.640] Electronic modules	55.3
[55.015] Engine control system	55.4
[55.301] Alternator	55.5
[55.302] Battery	55.6
[55.011] Fuel tank system	55.7
[55.010] Fuel injection system	55.8
[55.988] Selective Catalytic Reduction (SCR) electrical system	55.9
[55.513] Cab transmission controls	55.10
[55.020] Transmission speed sensors	55.11
[55.021] Transmission pressure sensors	55.12
[55.022] Transmission temperature sensors	55.13
[55.023] Transmission position sensors	55.14
[55.610] Ground speed control	55.15
[55.045] Front axle control system	55.16
[55.048] Rear Power Take-Off (PTO) control system	55.17
[55.049] Front Power Take-Off (PTO) control system	55.18
[55.031] Parking brake electrical system	55.19
[55.035] Remote control valve electric control	55.20
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls	55.21
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system	55.22
[55.047] Steering control system	55.23
[55.523] Cab hitch controls	55.24
[55.130] Rear three-point hitch electronic control system	55.25
[55.911] Global Positioning System (GPS)	55.26

[55.408] Warning indicators, alarms, and instruments	55.27
[55.350] Anti-lock Brake System (ABS) electrical system	55.28
[55.512] Cab controls	55.29
[55.030] Service brake electrical system	55.30
[55.510] Cab or platform harnesses and connectors	55.31
[55.DTC] FAULT CODES	55.32
Platform, cab, bodywork, and decals	90
[90.100] Engine hood and panels	90.1
[90.150] Cab	90.2

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com