

PUMA® 150
PUMA® 165
PUMA® 150 CVT
PUMA® 165 CVT
PUMA® 175 CVT
TIER 4B (FINAL)
Tractor

SERVICE MANUAL

Part number 47936460

English

November 2015



Link Product / Engine

Product	Market Product	Engine
PUMA® 150 CVT	Asia Pacific	F4DFE613N*B006
PUMA® 150 CVT	Middle East Africa	F4DFE613N*B006
PUMA® 150 CVT	Australia New Zealand	F4DFE613N*B006
PUMA® 165 CVT	Asia Pacific	F4DFE613M*B003
PUMA® 165 CVT	Middle East Africa	F4DFE613M*B003
PUMA® 165 CVT	Australia New Zealand	F4DFE613M*B003
PUMA® 175 CVT	Middle East Africa	F4DFE613K*B008
PUMA® 175 CVT	Australia New Zealand	F4DFE613K*B008
PUMA® 175 CVT	Asia Pacific	F4DFE613K*B008
PUMA® 150	Middle East Africa	F4DFE613N*B006
PUMA® 150	Australia New Zealand	F4DFE613N*B006
PUMA® 150	Asia Pacific	F4DFE613N*B006
PUMA® 165	Middle East Africa	F4DFE613M*B003
PUMA® 165	Australia New Zealand	F4DFE613M*B003
PUMA® 165	Asia Pacific	F4DFE613M*B003

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.101] Cylinder heads	10.2
[10.216] Fuel tanks	10.3
[10.210] Lift pump and lines	10.4
[10.218] Fuel injection system.....	10.5
[10.202] Air cleaners and lines	10.6
[10.250] Turbocharger and lines.....	10.7
[10.254] Intake and exhaust manifolds and muffler	10.8
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment.....	10.9
[10.400] Engine cooling system	10.10
[10.414] Fan and drive	10.11
[10.408] Oil cooler and lines.....	10.12
Clutch	18
[18.112] Slip clutch or flywheel damper	18.1
Transmission.....	21
[21.111] Semi-Powershift transmission	21.1
[21.133] Semi-Powershift transmission external controls	21.2
[21.103] Semi-Powershift transmission lubrication system.....	21.3
[21.152] Semi-Powershift transmission internal components	21.4
[21.113] Powershift transmission	21.5
[21.504] Continuously Variable Transmission (CVT)	21.6
[21.505] Continuously Variable Transmission (CVT) external controls.....	21.7
[21.506] Continuously Variable Transmission (CVT) lubrication system	21.8
[21.507] Continuously Variable Transmission (CVT) internal components.....	21.9
[21.160] Creeper	21.10

[21.166] Overdrive	21.11
Four-Wheel Drive (4WD) system	23
[23.202] Electro-hydraulic control	23.1
[23.314] Drive shaft.....	23.2
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3
[25.122] Axle suspension control.....	25.4
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential.....	27.2
[27.120] Planetary and final drives	27.3
[27.126] Spur gear and final drives.....	27.4
Power Take-Off (PTO).....	31
[31.101] Rear mechanical control	31.1
[31.104] Rear electro-hydraulic control.....	31.2
[31.114] Two-speed rear Power Take-Off (PTO)	31.3
[31.116] Three-speed rear Power Take-Off (PTO)	31.4
[31.146] Front Power Take-Off (PTO)	31.5
Brakes and controls	33
[33.202] Hydraulic service brakes	33.1
[33.300] Pneumatic service brakes.....	33.2
[33.110] Parking brake or parking lock	33.3
[33.220] Trailer brake hydraulic control.....	33.4
[33.224] Trailer brake pneumatic control	33.5
Hydraulic systems.....	35

[35.000] Hydraulic systems.....	35.1
[35.300] Reservoir, cooler, and filters.....	35.2
[35.106] Variable displacement pump	35.3
[35.105] Charge pump.....	35.4
[35.220] Auxiliary hydraulic pump	35.5
[35.322] Regulated/Low pressure system.....	35.6
[35.204] Remote control valves	35.7
[35.114] Three-point hitch control valve	35.8
[35.160] Front hitch controls and lines	35.9
[35.162] Front hitch cylinders and lines	35.10
Pneumatic system	36
[36.100] Pneumatic system.....	36.1
Hitches, drawbars, and implement couplings.....	37
[37.110] Rear three-point hitch	37.1
[37.120] Rear three-point hitch linkage.....	37.2
[37.162] Front hitch.....	37.3
Frames and ballasting	39
[39.100] Frame	39.1
Steering.....	41
[41.101] Steering control	41.1
[41.106] Tie rods.....	41.2
[41.200] Hydraulic control components.....	41.3
[41.216] Cylinders	41.4
[41.432] Autoguidance steering	41.5
Wheels	44
[44.511] Front wheels.....	44.1
[44.520] Rear wheels.....	44.2
Cab climate control	50

[50.100] Heating	50.1
[50.104] Ventilation	50.2
[50.200] Air conditioning	50.3
Electrical systems	55
[55.000] Electrical system	55.1
[55.100] Harnesses and connectors	55.2
[55.015] Engine control system	55.3
[55.301] Alternator	55.4
[55.302] Battery	55.5
[55.011] Fuel tank system	55.6
[55.010] Fuel injection system	55.7
[55.988] Selective Catalytic Reduction (SCR) electrical system	55.8
[55.640] Electronic modules	55.9
[55.513] Cab transmission controls	55.10
[55.020] Transmission speed sensors	55.11
[55.021] Transmission pressure sensors	55.12
[55.022] Transmission temperature sensors	55.13
[55.023] Transmission position sensors	55.14
[55.610] Ground speed control	55.15
[55.045] Front axle control system	55.16
[55.048] Rear Power Take-Off (PTO) control system	55.17
[55.030] Service brake electrical system	55.18
[55.031] Parking brake electrical system	55.19
[55.512] Cab controls	55.20
[55.035] Remote control valve electric control	55.21
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls	55.22
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system	55.23
[55.047] Steering control system	55.24

[55.130] Rear three-point hitch electronic control system	55.25
[55.911] Global Positioning System (GPS)	55.26
[55.510] Cab or platform harnesses and connectors	55.27
[55.408] Warning indicators, alarms, and instruments	55.28
[55.DTC] FAULT CODES	55.29
Platform, cab, bodywork, and decals	90
[90.150] Cab	90.1
[90.100] Engine hood and panels	90.2
[90.116] Fenders and guards	90.3

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.
You can download the most
perfect and complete manual in
the world immediately.

Our support email:
ebooklibonline@outlook.com