

WD1904
WD2304
Tier 3
Self-Propelled Windrower
PIN YGG677501 and above

SERVICE MANUAL

Part number 48126549
1st edition English
April 2017



Link Product / Engine

| Product | Market Product | Engine |
|--|-----------------------|----------|
| WD1904 Tier 3, containerized [YGG677501 -] | Middle East Africa | F4HE9687 |
| WD1904 Tier 3, containerized [YGG677501 -] | Latin America | F4HE9687 |
| WD1904 Tier 3, containerized [YGG677501 -] | Australia New Zealand | F4HE9687 |
| WD1904 Tier 3, containerized [YGG677501 -] | Asia Pacific | F4HE9687 |
| WD1904 Tier 3 [YGG677501 -] | Latin America | F4HE9687 |
| WD1904 Tier 3 [YGG677501 -] | Australia New Zealand | F4HE9687 |
| WD1904 Tier 3 [YGG677501 -] | Asia Pacific | F4HE9687 |
| WD1904 Tier 3 [YGG677501 -] | Middle East Africa | F4HE9687 |
| WD2304 Tier 3, containerized [YGG677501 -] | Latin America | F4HE9687 |
| WD2304 Tier 3, containerized [YGG677501 -] | Australia New Zealand | F4HE9687 |
| WD2304 Tier 3, containerized [YGG677501 -] | Asia Pacific | F4HE9687 |
| WD2304 Tier 3, containerized [YGG677501 -] | Middle East Africa | F4HE9687 |
| WD2304 Tier 3 [YGG677501 -] | Asia Pacific | F4HE9687 |
| WD2304 Tier 3 [YGG677501 -] | Australia New Zealand | F4HE9687 |
| WD2304 Tier 3 [YGG677501 -] | Latin America | F4HE9687 |
| WD2304 Tier 3 [YGG677501 -] | Middle East Africa | F4HE9687 |

Contents

INTRODUCTION

| | |
|--|------|
| Engine..... | 10 |
| [10.202] Air cleaners and lines | 10.1 |
| [10.218] Fuel injection system..... | 10.2 |
| [10.400] Engine cooling system | 10.3 |
| [10.414] Fan and drive | 10.4 |
| [10.250] Turbocharger and lines..... | 10.5 |
| [10.304] Engine lubrication system..... | 10.6 |
| Front axle system | 25 |
| [25.310] Final drives | 25.1 |
| Rear axle system..... | 27 |
| [27.550] Non-powered rear axle..... | 27.1 |
| Hydrostatic drive..... | 29 |
| [29.100] Transmission and steering hydrostatic control | 29.1 |
| [29.130] Neutralizer plate assembly..... | 29.2 |
| [29.202] Hydrostatic transmission | 29.3 |
| [29.218] Pump and motor components..... | 29.4 |
| Brakes and controls | 33 |
| [33.110] Parking brake or parking lock | 33.1 |
| Hydraulic systems..... | 35 |
| [35.000] Hydraulic systems..... | 35.1 |
| [35.100] Main lift system..... | 35.2 |
| [35.105] Charge pump..... | 35.3 |
| [35.128] Auxiliary hydraulic function control | 35.4 |
| [35.220] Auxiliary hydraulic pump | 35.5 |
| [35.300] Reservoir, cooler, and filters..... | 35.6 |

| | |
|---|-----------|
| [35.304] Combination pump units | 35.7 |
| [35.410] Header or attachment height system | 35.8 |
| [35.415] Header or attachment tilting system | 35.9 |
| [35.602] Header or attachment leveling system | 35.10 |
| [35.760] Header reverser drive | 35.11 |
| [35.910] Head and header hydraulic drive | 35.12 |
| Frames and ballasting | 39 |
| [39.105] Lift arm | 39.1 |
| [39.140] Ballasts and supports | 39.2 |
| Steering..... | 41 |
| [41.101] Steering control | 41.1 |
| [41.200] Hydraulic control components..... | 41.2 |
| [41.432] Autoguidance steering | 41.3 |
| Wheels | 44 |
| [44.511] Front wheels..... | 44.1 |
| Cab climate control | 50 |
| [50.200] Air conditioning | 50.1 |
| Electrical systems | 55 |
| [55.670] Header leveling control..... | 55.1 |
| [55.000] Electrical system | 55.2 |
| [55.100] Harnesses and connectors..... | 55.3 |
| [55.015] Engine control system..... | 55.4 |
| [55.201] Engine starting system | 55.5 |
| [55.301] Alternator..... | 55.6 |
| [55.302] Battery..... | 55.7 |
| [55.202] Cold start aid | 55.8 |
| [55.011] Fuel tank system | 55.9 |
| [55.010] Fuel injection system..... | 55.10 |

| | |
|--|-----------|
| [55.014] Engine intake and exhaust system..... | 55.11 |
| [55.013] Engine oil system | 55.12 |
| [55.640] Electronic modules | 55.13 |
| [55.640] Electronic modules | 55.14 |
| [55.019] Hydrostatic drive control system | 55.15 |
| [55.522] Cab Power Take-Off (PTO) controls | 55.16 |
| [55.031] Parking brake electrical system | 55.17 |
| [55.512] Cab controls | 55.18 |
| [55.036] Hydraulic system control | 55.19 |
| [55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system..... | 55.20 |
| [55.047] Steering control system | 55.21 |
| [55.661] Cab header controls..... | 55.22 |
| [55.662] Header height control | 55.23 |
| [55.634] Merger electrical control system | 55.24 |
| [55.785] Precision farming system | 55.25 |
| [55.911] Satellite navigation systems..... | 55.26 |
| [55.518] Wiper and washer system..... | 55.27 |
| [55.404] External lighting | 55.28 |
| [55.405] External lighting switches and relays | 55.29 |
| [55.510] Cab or platform harnesses and connectors..... | 55.30 |
| [55.680] Autopilot/Autoguidance | 55.31 |
| [55.DTC] FAULT CODES..... | 55.32 |
| Platform, cab, bodywork, and decals..... | 90 |
| [90.124] Pneumatically-adjusted operator seat..... | 90.1 |
| [90.150] Cab..... | 90.2 |
| [90.151] Cab interior..... | 90.3 |
| [90.154] Cab doors and hatches | 90.4 |

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com