

**OPTUM® 270 CVT
OPTUM® 300 CVT
TIER 4B (FINAL)
Tractor**

PIN ZFEM01001 and above

SERVICE MANUAL

Part number 48193162

English

November 2017

© 2017 CNH Industrial Österreich GmbH. All Rights Reserved.

CASE II
AGRICULTURE

Link Product / Engine

Product	Market Product	Engine
OPTUM® 270 CVT - [ZFEM01001 - ZGEM02931]	Middle East Africa	F4DFE617M*B001
OPTUM® 270 CVT - [ZFEM01001 - ZGEM02931]	Asia Pacific	F4DFE617M*B001
OPTUM® 270 CVT - [ZGEM02932 - ZGEM04528]	Middle East Africa	F4DFE617M*B001
OPTUM® 270 CVT - [ZGEM02932 - ZGEM04528]	Asia Pacific	F4DFE617M*B001
OPTUM® 270 CVT - [ZGEM04529 -]	Middle East Africa	F4DFE617M*B001
OPTUM® 270 CVT - [ZGEM04529 -]	Asia Pacific	F4DFE617M*B001
OPTUM® 270 CVT - [ZFEM50001 - ZGEM50841]	Asia Pacific	F4DFE617M*B001
OPTUM® 270 CVT - [ZFEM50001 - ZGEM50841]	Middle East Africa	F4DFE617M*B001
OPTUM® 270 CVT - [ZFEM50001 - ZGEM50841]	Australia New Zealand	F4DFE617M*B001
OPTUM® 270 CVT - [ZGEM50842 - ZGEM51829]	Australia New Zealand	F4DFE617M*B001
OPTUM® 270 CVT - [ZGEM50842 - ZGEM51829]	Asia Pacific	F4DFE617M*B001
OPTUM® 270 CVT - [ZGEM50842 - ZGEM51829]	Middle East Africa	F4DFE617M*B001
OPTUM® 270 CVT - [ZGEM51830 -]	Middle East Africa	F4DFE617M*B001
OPTUM® 270 CVT - [ZGEM51830 -]	Australia New Zealand	F4DFE617M*B001
OPTUM® 270 CVT - [ZGEM51830 -]	Asia Pacific	F4DFE617M*B001
OPTUM® 300 CVT - [ZFEM01001 - ZGEM02931]	Asia Pacific	F4DFE617L*B002
OPTUM® 300 CVT - [ZFEM01001 - ZGEM02931]	Middle East Africa	F4DFE617L*B002
OPTUM® 300 CVT - [ZGEM02932 - ZGEM04528]	Middle East Africa	F4DFE617L*B002
OPTUM® 300 CVT - [ZGEM02932 - ZGEM04528]	Asia Pacific	F4DFE617L*B002
OPTUM® 300 CVT - [ZGEM04529 -]	Middle East Africa	F4DFE617L*B002
OPTUM® 300 CVT - [ZGEM04529 -]	Asia Pacific	F4DFE617L*B002
OPTUM® 300 CVT - [ZFEM50001 - ZGEM50841]	Asia Pacific	F4DFE617L*B002
OPTUM® 300 CVT - [ZFEM50001 - ZGEM50841]	Middle East Africa	F4DFE617L*B002
OPTUM® 300 CVT - [ZFEM50001 - ZGEM50841]	Australia New Zealand	F4DFE617L*B002

Product	Market Product	Engine
OPTUM® 300 CVT - [ZGEM50842 - ZGEM51829]	Middle East Africa	F4DFE617L*B002
OPTUM® 300 CVT - [ZGEM50842 - ZGEM51829]	Australia New Zealand	F4DFE617L*B002
OPTUM® 300 CVT - [ZGEM50842 - ZGEM51829]	Asia Pacific	F4DFE617L*B002
OPTUM® 300 CVT - [ZGEM51830 -]	Australia New Zealand	F4DFE617L*B002
OPTUM® 300 CVT - [ZGEM51830 -]	Asia Pacific	F4DFE617L*B002
OPTUM® 300 CVT - [ZGEM51830 -]	Middle East Africa	F4DFE617L*B002

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.216] Fuel tanks	10.2
[10.202] Air cleaners and lines	10.3
[10.254] Intake and exhaust manifolds and muffler	10.4
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment	10.5
[10.400] Engine cooling system	10.6
[10.414] Fan and drive	10.7
[10.310] Aftercooler.....	10.8
Clutch	18
[18.112] Slip clutch or flywheel damper	18.1
Transmission.....	21
[21.504] Continuously Variable Transmission (CVT)	21.1
[21.505] Continuously Variable Transmission (CVT) external controls.....	21.2
[21.506] Continuously Variable Transmission (CVT) hydraulic components	21.3
[21.507] Continuously Variable Transmission (CVT) internal components.....	21.4
Four-Wheel Drive (4WD) system	23
[23.202] Electro-hydraulic control	23.1
[23.314] Drive shaft.....	23.2
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3
[25.122] Axle suspension control.....	25.4
Rear axle system.....	27

[27.100] Powered rear axle	27.1
[27.106] Rear bevel gear set and differential	27.2
[27.120] Planetary and final drives	27.3
Power Take-Off (PTO)	31
[31.104] Rear electro-hydraulic control	31.1
[31.119] Four-speed rear Power Take-Off (PTO)	31.2
[31.142] Front Power Take-Off (PTO) control	31.3
[31.146] Front Power Take-Off (PTO)	31.4
Brakes and controls	33
[33.202] Hydraulic service brakes	33.1
[33.110] Parking brake or parking lock	33.2
[33.240] Emergency brake	33.3
[33.220] Trailer brake hydraulic control	33.4
[33.224] Trailer brake pneumatic control	33.5
[33.204] Front axle brake	33.6
[33.200] Brake cooling	33.7
[33.350] Anti-lock Brake System (ABS)	33.8
Hydraulic systems	35
[35.000] Hydraulic systems	35.1
[35.300] Reservoir, cooler, and filters	35.2
[35.106] Variable displacement pump	35.3
[35.230] Priority valves	35.4
[35.204] Remote control valves	35.5
[35.220] Auxiliary hydraulic pump	35.6
[35.114] Three-point hitch control valve	35.7
[35.116] Three-point hitch cylinder	35.8
[35.124] Three-point hitch hydraulic adjustment	35.9
[35.160] Front hitch controls and lines	35.10

[35.162] Front hitch cylinders and lines	35.11
Hitches, drawbars, and implement couplings.....	37
[37.100] Drawbars and towing hitches	37.1
[37.106] Automatic pickup hitch	37.2
[37.162] Front hitch	37.3
Frames and ballasting	39
[39.100] Frame	39.1
[39.140] Ballasts and supports	39.2
Steering.....	41
[41.101] Steering control	41.1
[41.106] Tie rods.....	41.2
[41.200] Hydraulic control components.....	41.3
[41.216] Cylinders	41.4
[41.432] Autoguidance steering	41.5
Wheels	44
[44.511] Front wheels.....	44.1
[44.520] Rear wheels.....	44.2
Cab climate control	50
[50.100] Heating.....	50.1
[50.104] Ventilation	50.2
[50.200] Air conditioning	50.3
Electrical systems.....	55
[55.045] Front axle control system	55.1
[55.000] Electrical system	55.2
[55.100] Harnesses and connectors.....	55.3
[55.015] Engine control system.....	55.4
[55.301] Alternator	55.5

[55.302] Battery.....	55.6
[55.988] Selective Catalytic Reduction (SCR) electrical system	55.7
[55.640] Electronic modules	55.8
[55.513] Cab transmission controls.....	55.9
[55.024] Transmission control system	55.10
[55.020] Transmission speed sensors	55.11
[55.021] Transmission pressure sensors	55.12
[55.022] Transmission temperature sensors	55.13
[55.023] Transmission position sensors and switches	55.14
[55.048] Rear Power Take-Off (PTO) control system	55.15
[55.049] Front Power Take-Off (PTO) control system	55.16
[55.519] Cab brake controls	55.17
[55.031] Parking brake electrical system	55.18
[55.512] Cab controls.....	55.19
[55.035] Remote control valve electric control	55.20
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls.....	55.21
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system.....	55.22
[55.047] Steering control system	55.23
[55.130] Rear three-point hitch electronic control system	55.24
[55.160] Front hitch electronic control system.....	55.25
[55.911] Satellite navigation systems.....	55.26
[55.404] External lighting	55.27
[55.510] Cab or platform harnesses and connectors.....	55.28
[55.408] Warning indicators, alarms, and instruments	55.29
[55.550] Tire Pressure Monitoring System (TPMS)	55.30
[55.350] Anti-lock Brake System (ABS) electrical system.....	55.31
[55.DTC] FAULT CODES.....	55.32
Platform, cab, bodywork, and decals.....	90
[90.150] Cab.....	90.1

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com