

Farmall 110U
Farmall 120U
Tractor

SERVICE MANUAL

Part number 51487935
English
May 2018



Link Product / Engine

Product	Market Product	Engine
Farmall® 110U With 16x16 Semi-Powershift transmission [HLRFU110VHLP08233 -]	Asia Pacific	F5GFL413V*C001
Farmall® 110U With 16x16 Semi-Powershift transmission [HLRFU110VHLP08233 -]	Australia New Zealand	F5GFL413V*C001
Farmall® 120U With 16x16 Semi-Powershift transmission [HLRFU120CGLP03805 -]	Australia New Zealand	F5GFL413U*C002
Farmall® 120U With 16x16 Semi-Powershift transmission [HLRFU120CGLP03805 -]	Asia Pacific	F5GFL413U*C002

Contents

INTRODUCTION

Engine	10
[10.001] Engine and crankcase	10.1
[10.216] Fuel tanks	10.2
[10.206] Fuel filters	10.3
[10.202] Air cleaners and lines	10.4
[10.254] Intake and exhaust manifolds and muffler	10.5
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment.....	10.6
[10.501] Exhaust Gas Recirculation (EGR) exhaust treatment.....	10.7
[10.400] Engine cooling system	10.8
[10.414] Fan and drive	10.9
[10.310] Aftercooler.....	10.10
[10.218] Fuel injection system.....	10.11
Clutch	18
[18.100] Clutch mechanical release control	18.1
[18.112] Slip clutch or flywheel damper	18.2
Transmission	21
[21.111] Semi-Powershift transmission	21.1
[21.133] Semi-Powershift transmission external controls	21.2
[21.103] Semi-Powershift transmission hydraulic components.....	21.3
[21.152] Semi-Powershift transmission internal components	21.4
[21.160] Creeper	21.5
[21.109] Transmission cooler and lines.....	21.6
Four-Wheel Drive (4WD) system	23
[23.202] Electro-hydraulic control	23.1
[23.314] Drive shaft.....	23.2

Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3
[25.122] Axle suspension control	25.4
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential.....	27.2
[27.120] Planetary and final drives	27.3
Power Take-Off (PTO).....	31
[31.104] Rear electro-hydraulic control.....	31.1
[31.114] Two-speed rear Power Take-Off (PTO)	31.2
[31.116] Three-speed rear Power Take-Off (PTO)	31.3
[31.142] Front Power Take-Off (PTO) control	31.4
[31.146] Front Power Take-Off (PTO)	31.5
Brakes and controls	33
[33.202] Hydraulic service brakes	33.1
[33.110] Parking brake or parking lock	33.2
[33.220] Trailer brake hydraulic control.....	33.3
[33.224] Trailer brake pneumatic control	33.4
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.304] Combination pump units	35.2
[35.322] Regulated/Low pressure system	35.3
[35.204] Remote control valves	35.4
[35.100] Main lift system.....	35.5
[35.114] Three-point hitch control valve	35.6
[35.116] Three-point hitch cylinder	35.7

[35.160] Front hitch controls and lines	35.8
[35.162] Front hitch cylinders and lines	35.9
[35.300] Reservoir, cooler, and filters.....	35.10
[35.350] Safety and main relief valves	35.11
Hitches, drawbars, and implement couplings.....	37
[37.100] Drawbars and towing hitches	37.1
[37.110] Rear three-point hitch	37.2
[37.120] Rear three-point hitch linkage.....	37.3
[37.162] Front hitch.....	37.4
[37.166] Front hitch linkage.....	37.5
Frames and ballasting	39
[39.140] Ballasts and supports	39.1
Steering.....	41
[41.101] Steering control	41.1
[41.106] Tie rods.....	41.2
[41.200] Hydraulic control components.....	41.3
[41.216] Cylinders	41.4
Wheels	44
[44.511] Front wheels.....	44.1
[44.520] Rear wheels.....	44.2
Cab climate control	50
[50.100] Heating.....	50.1
[50.104] Ventilation	50.2
[50.200] Air conditioning.....	50.3
Electrical systems	55
[55.100] Harnesses and connectors.....	55.1
[55.525] Cab engine controls.....	55.2

[55.015] Engine control system..... 55.3

[55.201] Engine starting system..... 55.4

[55.301] Alternator..... 55.5

[55.302] Battery..... 55.6

[55.202] Cold start aid..... 55.7

[55.011] Fuel tank system..... 55.8

[55.010] Fuel injection system..... 55.9

[55.014] Engine intake and exhaust system..... 55.10

[55.988] Selective Catalytic Reduction (SCR) electrical system..... 55.11

[55.989] Exhaust Gas Recirculation (EGR) electrical system..... 55.12

[55.012] Engine cooling system..... 55.13

[55.013] Engine oil system..... 55.14

[55.640] Electronic modules..... 55.15

[55.513] Cab transmission controls..... 55.16

[55.024] Transmission control system..... 55.17

[55.020] Transmission speed sensors..... 55.18

[55.021] Transmission pressure sensors and switches..... 55.19

[55.022] Transmission temperature sensors..... 55.20

[55.040] Four-Wheel Drive (4WD) control system..... 55.21

[55.045] Front axle control system..... 55.22

[55.046] Rear axle control system..... 55.23

[55.522] Cab Power Take-Off (PTO) controls..... 55.24

[55.048] Rear Power Take-Off (PTO) control system..... 55.25

[55.049] Front Power Take-Off (PTO) control system..... 55.26

[55.519] Cab brake controls..... 55.27

[55.031] Parking brake electrical system..... 55.28

[55.032] Trailer brake electrical system..... 55.29

[55.512] Cab controls..... 55.30

[55.035] Remote control valve electric control..... 55.31

[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls.....	55.32
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system.....	55.33
[55.523] Cab hitch controls	55.34
[55.130] Rear three-point hitch electronic control system	55.35
[55.785] Precision farming system	55.36
[55.911] Satellite navigation systems.....	55.37
[55.680] Autopilot/Autoguidance	55.38
[55.518] Wiper and washer system.....	55.39
[55.404] External lighting	55.40
[55.405] External lighting switches and relays	55.41
[55.408] Warning indicators, alarms, and instruments	55.42
[55.905] ISOBUS components	55.43
[55.DTC] FAULT CODES.....	55.44
Front loader and bucket.....	82
[82.100] Arm.....	82.1
Accessories	88
[88.100] Accessories	88.1
Platform, cab, bodywork, and decals.....	90
[90.150] Cab.....	90.1
[90.151] Cab interior.....	90.2
[90.160] Cab interior trim and panels.....	90.3
[90.154] Cab doors and hatches	90.4
[90.156] Cab windshield and windows	90.5
[90.118] Protections and footboards.....	90.6
[90.120] Mechanically-adjusted operator seat.....	90.7
[90.124] Pneumatically-adjusted operator seat.....	90.8
[90.100] Engine hood and panels	90.9
[90.102] Engine shields, hood latches, and trims	90.10

[90.116] Fenders and guards 90.11

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com